

# SIEMENS

## SIMATIC Ident

## Handheld reading systems

## SIMATIC MV320 Configuration guide

### Compact User Manual

#### Legal information

##### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.



##### DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.



##### WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.



##### CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

##### NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

#### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

#### Proper use of Siemens products

Note the following:



##### WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

# Table of Contents

<b>General Reading Mode Settings.....</b>	<b>6</b>
Continuous Scan Both Imagers On.....	6 (A2)
Continuous Scan Off - Default.....	6 (A3)
Motion Detection On when In Stand and Trigger Out of Stand - Default.....	6 (A4)
Motion Detection On In and Out of Stand.....	6 (B1)
Optimize Motion Detection for Bright Environments - Default.....	6 (B2)
Optimize Motion Detection for Dark Environments.....	6 (B3)
No Motion Detection Delay - Default.....	6 (B4)
500ms Motion Detection Delay.....	6 (C1)
Motion Detection Off In and Out of Stand.....	6 (C2)
Anti-Glare On.....	6 (C3)
Anti-Glare Off - Default.....	6 (C4)
Mirroring On.....	6 (D1)
Mirroring Off - Default.....	6 (D2)
Targeting On - Default.....	6 (D3)
Targeting Off.....	6 (D4)
Cell Phone Reading Enhancement On.....	6 (E1)
Cell Phone Reading Enhancement Off - Default.....	6 (E2)
<b>Data Formatting (Prefix/Suffix) Settings.....</b>	<b>6-7</b>
Erase Prefix & Suffix Data - Default.....	6 (E4)
Erase Prefix Data - Default.....	7 (A1)
Erase Suffix Data - Default.....	7 (A2)
Prefix AIM ID On.....	7 (A3)
Prefix AIM ID Off - Default.....	7 (A4)
Prefix Carriage Return Line Feed (RS232 Mode Only).....	7 (B1)
Prefix Comma.....	7 (B2)
Prefix Space.....	7 (B3)
Prefix Tab (USB Keyboard Mode Only).....	7 (B4)
Prefix Tab (RS232 Mode Only).....	7 (C1)
Suffix Carriage Return (RS232 Mode Only).....	7 (C2)
Suffix Carriage Return Line Feed (RS232 Mode Only).....	7 (C3)
Suffix Comma.....	7 (C4)
Suffix Enter (USB Keyboard Mode Only).....	7 (D1)
Suffix Line Feed (RS232 Mode Only).....	7 (D2)
Suffix Space.....	7 (D3)
Suffix Tab (USB Keyboard Mode Only).....	7 (D4)
Suffix Tab (RS232 Mode Only).....	7 (E1)
Translate all Characters to Uppercase On.....	7 (E2)
Translate all Characters to Uppercase Off - Default.....	7 (E3)
<b>Symbologies.....</b>	<b>8-13</b>
Australian Post On.....	8 (A2)
Australian Post Off - Default.....	8 (A3)
Aztec On - Default.....	8 (A4)
Aztec Off.....	8 (B1)
Aztec Inverse On.....	8 (B2)
Aztec Inverse & Normal On.....	8 (B3)
Codabar On - Default.....	8 (B4)
Codabar Off.....	8 (C1)
Codablock F On.....	8 (C2)
Codablock F Off - Default.....	8 (C3)
Code 11 On.....	8 (C4)
Code 11 Off - Default.....	8 (D1)
Code 11 Checksum Stripped from Result On.....	8 (D2)
Code 128 On - Default.....	8 (D3)
Code 128 Off.....	8 (D4)
Code 32 (Italian Pharmacode) On.....	8 (E1)
Code 32 (Italian Pharmacode) Off - Default.....	8 (E2)
Code 39 On - Default.....	8 (E3)
Code 39 Off.....	8 (E4)

## Table of Contents

Code 39 Checksum On.....	9 (A1)
Code 39 Checksum Off - Default.....	9 (A2)
Code 39 Checksum Stripped from Result On.....	9 (A3)
Code 39 Extended Full ASCII On.....	9 (A4)
Code 39 Extended Full ASCII Off - Default.....	9 (B1)
Code 93 On - Default.....	9 (B2)
Code 93 Off.....	9 (B3)
Composite On.....	9 (B4)
Composite Off - Default.....	9 (C1)
Data Matrix Inverse On - Default.....	9 (C2)
Data Matrix Inverse Off.....	9 (C3)
All GS1 DataBar On - Default.....	9 (C4)
All GS1 DataBar Off.....	9 (D1)
GS1 DataBar Omnidirectional and GS1 DataBar Truncated On.....	9 (D2)
GS1 DataBar Omnidirectional and GS1 DataBar Truncated Off.....	9 (D3)
GS1 DataBar Expanded On.....	9 (D4)
GS1 DataBar Expanded Off.....	9 (E1)
GS1 DataBar Expanded Stacked On.....	9 (E2)
GS1 DataBar Expanded Stacked Off.....	9 (E3)
GS1 DataBar Limited On.....	9 (E4)
GS1 DataBar Limited Off.....	10 (A1)
GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional On.....	10 (A2)
GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional Off.....	10 (A3)
Han Xin On.....	10 (A4)
Han Xin Off - Default.....	10 (B1)
Hong Kong 2 of 5 On.....	10 (B2)
Hong Kong 2 of 5 Off - Default.....	10 (B3)
Int 2 of 5 On - Default.....	10 (B4)
Int 2 of 5 Off.....	10 (C1)
Int 2 of 5 Checksum On.....	10 (C2)
Int 2 of 5 Checksum Off - Default.....	10 (C3)
Int 2 of 5 Checksum Stripped from Result On.....	10 (C4)
Japan Post On.....	10 (D1)
Japan Post Off - Default.....	10 (D2)
KIX (Dutch Post) Code On.....	10 (D3)
KIX (Dutch Post) Code Off - Default.....	10 (D4)
Korean Post On.....	10 (E1)
Korean Post Off - Default.....	10 (E2)
Maxicode On.....	10 (E3)
Maxicode Off - Default.....	10 (E4)
Matrix 2 of 5 On.....	11 (A1)
Matrix 2 of 5 Off - Default.....	11 (A2)
Micro PDF417 On.....	11 (A3)
Micro PDF417 Off - Default.....	11 (A4)
MSI Plessey On.....	11 (B1)
MSI Plessey Off - Default.....	11 (B2)
NEC 2 of 5 On.....	11 (B3)
NEC 2 of 5 Off - Default.....	11 (B4)
PDF417 On - Default.....	11 (C1)
PDF417 Off.....	11 (C2)
Pharmacode On.....	11 (C3)
Pharmacode Off - Default.....	11 (C4)
Pharmacode Normal Barcode Decoding (Left to Right).....	11 (D1)
Pharmacode Reverse Barcode Decoding (Right to Left).....	11 (D2)
All QR Code On.....	11 (D3)
All QR Code Off.....	11 (D4)
Standard QR Code On - Default.....	11 (E1)
Standard QR Code Off.....	11 (E2)
Straight 2 of 5 On.....	11 (E3)
Straight 2 of 5 Off - Default.....	11 (E4)
Telepen On.....	12 (A1)

# Table of Contents

Telepen Off - Default.....	12 (A2)
Trioptic On.....	12 (A3)
Trioptic Off - Default.....	12 (A4)
UK Plessey On.....	12 (B1)
UK Plessey Off - Default.....	12 (B2)
UK Royal Mail On.....	12 (B3)
UK Royal Mail Off - Default.....	12 (B4)
UPC On - Default.....	12 (C1)
UPC Off.....	12 (C2)
UPC E Expansion On.....	12 (C3)
UPC E Expansion Off - Default.....	12 (C4)
UPC Supplemental On.....	12 (D1)
UPC Supplemental Off - Default.....	12 (D2)
UPU ID-Tag On.....	12 (D3)
UPU ID-Tag Off - Default.....	12 (D4)
USPS Intelligent Mail/IMB/ 4-State CB On.....	12 (E1)
USPS Intelligent Mail/IMB/ 4-State CB Off - Default.....	12 (E2)
USPS Planet On.....	12 (E3)
USPS Postnet Off - Default.....	12 (E4)
USPS Planet Off - Default.....	13 (A1)
USPS Postnet On.....	13 (A2)
<b>Keyboard Language Settings.....</b>	<b>13</b>
US English Keyboard Mapping - No Leading 0.....	13 (A4)
US English Keyboard Mapping - with Leading 0 for Non Printable ASCII.....	13 (B1)
Keyboard Control Characters for Non Printable ASCII.....	13 (B2)
Belgium Keyboard.....	13 (B3)
French Keyboard.....	13 (B4)
German Keyboard.....	13 (C1)
Japanese Keyboard.....	13 (C2)
Spanish (Latin America) Keyboard.....	13 (C3)
Swiss Keyboard.....	13 (C4)
Universal Keyboard Mapping.....	13 (D1)
<b>Operating System Settings.....</b>	<b>13</b>
Alternative Operating System (Linux/Mac) On.....	13 (D3)
Alternative Operating System (Linux/Mac) Off - Default.....	13 (D4)
<b>USB Settings.....</b>	<b>13-14</b>
Reset to USB Factory Defaults.....	13 (E2)
USB Keyboard Mode.....	13 (E3)
USB Downloader Mode.....	13 (E4)
USB HID POS Mode (Terminal ID 131).....	14 (A1)
USB Native Two Way Mode.....	14 (A2)
USB Virtual COM One Way Mode.....	14 (A3)
USB Virtual COM Multiple Ports.....	14 (A4)
USB Virtual COM Common Ports.....	14 (B1)
<b>RS232 Settings.....</b>	<b>14-15</b>
Reset to RS232 Factory Defaults.....	14 (B3)
RS232 Interface 1200 Baud Rate.....	14 (B4)
RS232 Interface 2400 Baud Rate.....	14 (C1)
RS232 Interface 4800 Baud Rate.....	14 (C2)
RS232 Interface 9600 Baud Rate.....	14 (C3)
RS232 Interface 19200 Baud Rate.....	14 (C4)
RS232 Interface 38400 Baud Rate.....	14 (D1)
RS232 Interface 57600 Baud Rate.....	14 (D2)
RS232 Interface 115200 Baud Rate - Default.....	14 (D3)
RS232 Interface 7 Data Bits.....	14 (D4)
RS232 Interface 8 Data Bits - Default.....	14 (E1)
RS232 Interface Stop Bits 1 - Default.....	14 (E2)

## Table of Contents

RS232 Interface Stop Bits 2.....	14 (E3)
RS232 Interface Even Parity.....	14 (E4)
RS232 Interface Odd Parity.....	15 (A1)
RS232 Interface No Parity - Default.....	15 (A2)
RS232 Interface Flow Control Off - Default.....	15 (A3)
RS232 Interface Flow Control - Hardware.....	15 (A4)
RS232 Packet Mode.....	15 (B1)
RS232 Raw Mode - Default.....	15 (B2)
 <b>Reader Feedback Settings.....</b>	 <b>15</b>
Beep On Vibrate On - Default.....	15 (B4)
Beep Off Vibrate Off.....	15 (C1)
Beep Off Vibrate On .....	15 (C2)
Beep On Vibrate Off .....	15 (C3)
Beep Volume 100% - Default.....	15 (C4)
Beep Volume 67%.....	15 (D1)
Beep Volume 33%.....	15 (D2)
Beep Volume 0%.....	15 (D3)
 <b>Scan Delay Settings.....</b>	 <b>15-16</b>
Duplicate Scan Disabled - Default.....	15 (E2)
1 Second Duplicate Scan Delay.....	15 (E3)
2 Second Duplicate Scan Delay.....	15 (E4)
3 Second Duplicate Scan Delay.....	16 (A1)
5 Second Duplicate Scan Delay.....	16 (A2)
10 Second Duplicate Scan Delay.....	16 (A3)
30 Second Duplicate Scan Delay.....	16 (A4)
1 Hour Duplicate Scan Delay.....	16 (B1)
1 Day Duplicate Scan Delay.....	16 (B2)
 <b>Reader/Modem Commands.....</b>	 <b>16</b>
Reader ID and Firmware Version.....	16 (B4)
Reader Text Commands On.....	16 (C1)
Reader Text Commands Off - Default.....	16 (C2)
 <b>Reset, Clear and Save Reader Settings.....</b>	 <b>16</b>
Clear All JavaScript Rules.....	16 (C4)
Clear All Stored Data and Images.....	16 (D1)
Save All Reader Settings - Default.....	16 (D2)
Reboot Reader.....	16 (D3)

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

<b>General Reading Mode Settings</b>	Continuous Scan Both Imagers On  M10012_02	Continuous Scan Off - Default  M10011_01	Motion Detection On when In Stand and Trigger Out of Stand - Default  M10403_02
	A2	A3	A4
	<b>Motion Detection On In and Out of Stand</b>  M10404_02	Optimize Motion Detection for Bright Environments - Default  M10014_03	Optimize Motion Detection for Dark Environments  M10015_03
	B1	B2	B3
<b>500ms Motion Detection Delay</b>  M10017_03	Motion Detection Off In and Out of Stand  M10013_02	Anti-Glare On  M10352_01	Anti-Glare Off - Default  M10433_01
	C1	C2	C3
	<b>Mirroring On</b>  M10125_01	Mirroring Off - Default  M10124_02	Targeting On - Default  M10153_01
	D1	D2	D3
<b>Cell Phone Reading Enhancement On</b>  M10163_01	Cell Phone Reading Enhancement Off - Default  M10162_01	<b>Data Formatting (Prefix/Suffix) Settings</b>	
	E1	E2	E4
			Erase Prefix & Suffix Data - Default  M10135_01

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

Erase Prefix Data - Default	Erase Suffix Data - Default	Prefix AIM ID On	Prefix AIM ID Off - Default
 M10126_01	 M10130_01	 M10199_01	 M10198_01
A1	A2	A3	A4
Prefix Carriage Return Line Feed (RS232 Mode Only)	Prefix Comma	Prefix Space	Prefix Tab (USB Keyboard Mode Only)
 M10405_01	 M10127_01	 M10128_01	 M10129_01
B1	B2	B3	B4
Prefix Tab (RS232 Mode Only)	Suffix Carriage Return (RS232 Mode Only)	Suffix Carriage Return Line Feed (RS232 Mode Only)	Suffix Comma
 M10319_01	 M10320_01	 M10322_01	 M10131_01
C1	C2	C3	C4
Suffix Enter (USB Keyboard Mode Only)	Suffix Line Feed (RS232 Mode Only)	Suffix Space	Suffix Tab (USB Keyboard Mode Only)
 M10134_01	 M10321_01	 M10132_01	 M10133_01
D1	D2	D3	D4
Suffix Tab (RS232 Mode Only)	Translate all Characters to Uppercase On	Translate all Characters to Uppercase Off - Default	Intentionally Blank
 M10323_01	 M10220_03	 M10426_02	
E1	E2	E3	E4

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

Symbologies	Australian Post On   M10288_02	Australian Post Off - Default   M10289_02	Aztec On - Default   M10018_01
Aztec Off	Aztec Inverse On   M10019_01	Aztec Inverse & Normal On   M10020_01	Codabar On - Default   M10022_01
Codabar Off	Codablock F On   M10023_01	Codablock F Off - Default   M10026_01	Code 11 On   M10029_01
Code 11 Off - Default	Code 11 Checksum Stripped from Result On   M10031_01	Code 128 On - Default   M10044_01	Code 128 Off   M10045_01
Code 32 (Italian Pharmacode) On	Code 32 (Italian Pharmacode) Off - Default   M10238_02	Code 39 On - Default   M10033_02	Code 39 Off   M10034_02

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

Code 39 Checksum On	Code 39 Checksum Off - Default	Code 39 Checksum Stripped from Result On	Code 39 Extended Full ASCII On
 M10036_01	 M10035_01	 M10037_01	 M10039_01
A1	A2	A3	A4
Code 39 Extended Full ASCII Off - Default	Code 93 On - Default	Code 93 Off	Composite On
 M10038_01	 M10042_01	 M10043_01	 M10047_01
B1	B2	B3	B4
Composite Off - Default	Data Matrix Inverse On - Default	Data Matrix Inverse Off	All GS1 DataBar On - Default
 M10046_01	 M10051_03	 M10050_03	 M10054_01
C1	C2	C3	C4
All GS1 DataBar Off	GS1 DataBar Omnidirectional and GS1 DataBar Truncated On	GS1 DataBar Omnidirectional and GS1 DataBar Truncated Off	GS1 DataBar Expanded On
 M10055_01	 M10057_03	 M10355_02	 M10059_03
D1	D2	D3	D4
GS1 DataBar Expanded Off	GS1 DataBar Expanded Stacked On	GS1 DataBar Expanded Stacked Off	GS1 DataBar Limited On
 M10417_02	 M10357_02	 M10356_02	 M10056_03
E1	E2	E3	E4

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

GS1 DataBar Limited Off	GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional On	GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional Off	Han Xin On
 M10354_02	 M10058_03	 M10353_03	 M10248_01
A1	A2	A3	A4
Han Xin Off - Default	Hong Kong 2 of 5 On	Hong Kong 2 of 5 Off - Default	Int 2 of 5 On - Default
 M10249_01	 M10079_01	 M10078_02	 M10060_01
B1	B2	B3	B4
Int 2 of 5 Off	Int 2 of 5 Checksum On	Int 2 of 5 Checksum Off - Default	Int 2 of 5 Checksum Stripped from Result On
 M10061_01	 M10235_01	 M10234_01	 M10065_01
C1	C2	C3	C4
Japan Post On	Japan Post Off - Default	KIX (Dutch Post) Code On	KIX (Dutch Post) Code Off - Default
 M10292_02	 M10293_02	 M10290_02	 M10291_02
D1	D2	D3	D4
Korean Post On	Korean Post Off - Default	Maxicode On	Maxicode Off - Default
 M10358_01	 M10359_01	 M10067_02	 M10066_01
E1	E2	E3	E4

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

Matrix 2 of 5 On	Matrix 2 of 5 Off - Default	Micro PDF417 On	Micro PDF417 Off - Default
 M10069_01	 M10068_01	 M10073_01	 M10072_01
A1	A2	A3	A4
MSI Plessey On	MSI Plessey Off - Default	NEC 2 of 5 On	NEC 2 of 5 Off - Default
 M10076_01	 M10077_01	 M10082_01	 M10083_01
B1	B2	B3	B4
PDF417 On - Default	PDF417 Off	Pharmacode On	Pharmacode Off - Default
 M10070_01	 M10071_01	 M10275_02	 M10274_03
C1	C2	C3	C4
Pharmacode Normal Barcode Decoding (Left to Right)	Pharmacode Reverse Barcode Decoding (Right to Left)	All QR Code On	All QR Code Off
 M10281_02	 M10280_02	 M10101_02	 M10351_03
D1	D2	D3	D4
Standard QR Code On - Default	Standard QR Code Off	Straight 2 of 5 On	Straight 2 of 5 Off - Default
 M10095_03	 M10096_02	 M10241_01	 M10240_01
E1	E2	E3	E4

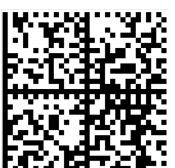
# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

Telepen On	Telepen Off - Default	Trioptic On	Trioptic Off - Default
 M10103_01	 M10104_01	 M10041_01	 M10040_01
A1	A2	A3	A4
UK Plessey On	UK Plessey Off - Default	UK Royal Mail On	UK Royal Mail Off - Default
 M10237_02	 M10236_02	 M10294_02	 M10295_02
B1	B2	B3	B4
UPC On - Default	UPC Off	UPC E Expansion On	UPC E Expansion Off - Default
 M10105_01	 M10106_01	 M10108_01	 M10107_01
C1	C2	C3	C4
UPC Supplemental On	UPC Supplemental Off - Default	UPU ID-Tag On	UPU ID-Tag Off - Default
 M10110_01	 M10109_01	 M10360_02	 M10361_02
D1	D2	D3	D4
USPS Intelligent Mail/IMB/ 4-State CB On	USPS Intelligent Mail/IMB/ 4-State CB Off - Default	USPS Planet On	USPS Postnet Off - Default
 M10286_02	 M10287_02	 M10284_02	 M10283_02
E1	E2	E3	E4

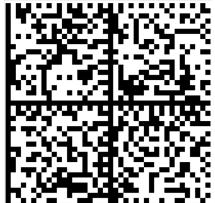
# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

<b>USPS Planet Off - Default</b>  M10285_02  <b>A1</b>	<b>USPS Postnet On</b>  M10282_02  <b>A2</b>	<b>Keyboard Language Settings</b>	<b>US English Keyboard Mapping - No Leading 0</b>  M10111_01  <b>A4</b>
<b>US English Keyboard Mapping - with Leading 0 for Non Printable ASCII</b>  M10411_01  <b>B1</b>	<b>Keyboard Control Characters for Non Printable ASCII</b>  M10412_01  <b>B2</b>	<b>Belgium Keyboard</b>  M10115_01  <b>B3</b>	<b>French Keyboard</b>  M10414_01  <b>B4</b>
<b>German Keyboard</b>  M10415_01  <b>C1</b>	<b>Japanese Keyboard</b>  M10416_01  <b>C2</b>	<b>Spanish (Latin America) Keyboard</b>  M10120_02  <b>C3</b>	<b>Swiss Keyboard</b>  M10116_01  <b>C4</b>
<b>Universal Keyboard Mapping</b>  M10413_01  <b>D1</b>	<b>Operating System Settings</b>	<b>Alternative Operating System (Linux/Mac) On</b>  M10123_02  <b>D3</b>	<b>Alternative Operating System (Linux/Mac) Off - Default</b>  M10122_02  <b>D4</b>
<b>USB Settings</b>	<b>Reset to USB Factory Defaults</b>  M10002_02  <b>E2</b>	<b>USB Keyboard Mode</b>  M10200_01  <b>E3</b>	<b>USB Downloader Mode</b>  M10004_02  <b>E4</b>

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

USB HID POS Mode (Terminal ID 131)	USB Native Two Way Mode	USB Virtual COM One Way Mode	USB Virtual COM Multiple Ports
 M10425_01	 M10006_02	 M10005_01	 M10431_01
A1	A2	A3	A4
USB Virtual COM Common Ports	RS232 Settings	Reset to RS232 Factory Defaults	RS232 Interface 1200 Baud Rate
 M10432_01		 M10389_03	 M10392_01
B1		B3	B4
RS232 Interface 2400 Baud Rate	RS232 Interface 4800 Baud Rate	RS232 Interface 9600 Baud Rate	RS232 Interface 19200 Baud Rate
 M10393_01	 M10394_01	 M10395_01	 M10396_01
C1	C2	C3	C4
RS232 Interface 38400 Baud Rate	RS232 Interface 57600 Baud Rate	RS232 Interface 115200 Baud Rate - Default	RS232 Interface 7 Data Bits
 M10397_01	 M10398_01	 M10399_01	 M10390_01
D1	D2	D3	D4
RS232 Interface 8 Data Bits - Default	RS232 Interface Stop Bits 1 - Default	RS232 Interface Stop Bits 2	RS232 Interface Even Parity
 M10391_01	 M10406_01	 M10407_01	 M10400_01
E1	E2	E3	E4

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

RS232 Interface Odd Parity   M10401_01	RS232 Interface No Parity - Default   M10402_01	RS232 Interface Flow Control Off - Default   M10408_01	RS232 Interface Flow Control - Hardware   M10409_01
A1	A2	A3	A4
RS232 Packet Mode   M10388_01	RS232 Raw Mode - Default   M10387_01	Reader Feedback Settings	
B1	B2	B4	
Beep Off Vibrate Off   M10143_01	Beep Off Vibrate On   M10141_01	Beep On Vibrate Off   M10142_01	Beep Volume 100% - Default   M10197_01
C1	C2	C3	C4
Beep Volume 67%   M10196_01	Beep Volume 33%   M10195_01	Beep Volume 0%   M10194_01	Intentionally Blank
D1	D2	D3	D4
Scan Delay Settings		Duplicate Scan Disabled - Default   M10144_01	1 Second Duplicate Scan Delay   M10145_01
E2		E3	E4
2 Second Duplicate Scan Delay   M10146_01			

# Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory.*

3 Second Duplicate Scan Delay	5 Second Duplicate Scan Delay	10 Second Duplicate Scan Delay	30 Second Duplicate Scan Delay
 M10147_01 A1	 M10148_01 A2	 M10149_01 A3	 M10150_01 A4
1 Hour Duplicate Scan Delay	1 Day Duplicate Scan Delay	Reader/Modem Commands	Reader ID and Firmware Version
 M10151_01 B1	 M10152_01 B2		 M10157_01 B4
Reader Text Commands On	Reader Text Commands Off - Default	Reset, Clear and Save Reader Settings	Clear All JavaScript Rules
 M10137_01 C1	 M10136_01 C2		 M10139_01 C4
Clear All Stored Data and Images	Save All Reader Settings - Default	Reboot Reader	Intentionally Blank
 M10138_02 D1	 M10159_01 D2	 M10296_01 D3	
Intentionally Blank	Intentionally Blank	Intentionally Blank	Intentionally Blank
E1	E2	E3	E4

---

## **Trademarks**

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

## **Disclaimer of Liability**

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Siemens AG  
Division Process Industries and Drives  
Postfach 48 48  
90026 NÜRNBERG