

SIEMENS

RUGGEDCOM RS1600T

Installation Guide

Preface

Introduction

1

Installing Device

2

Communication Ports

3

Technical Specifications

4

Dimension Drawings

5

Certification

6

Copyright © 2013 Siemens AG

All rights reserved. Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Siemens AG.

Disclaimer Of Liability

Siemens has verified the contents of this manual against the hardware and/or software described. However, deviations between the product and the documentation may exist.

Siemens shall not be liable for any errors or omissions contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

The information given in this document is reviewed regularly and any necessary corrections will be included in subsequent editions. We appreciate any suggested improvements. We reserve the right to make technical improvements without notice.

Registered Trademarks

ROX™, Rugged Operating System On Linux™, CrossBow™ and eLAN™ are trademarks of Siemens AG. ROS® is a registered trademark of Siemens AG.

Other designations in this manual might be trademarks whose use by third parties for their own purposes would infringe the rights of the owner.

Third Party Copyrights

Siemens recognizes the following third party copyrights:

- Copyright © 2004 GoAhead Software, Inc. All Rights Reserved.

Security Information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <http://www.siemens.com/industrialsecurity>.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <http://support.automation.siemens.com>.

Warranty

Siemens warrants this product for a period of five (5) years from the date of purchase, conditional upon the return to factory for maintenance during the warranty term. This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. The warranties set forth in this article are exclusive and are in lieu of all other warranties, performance guarantees and conditions whether written or oral, statutory, express or implied (including all warranties and conditions of merchantability and fitness for a particular purpose, and all warranties and conditions arising from course of dealing or usage or trade). Correction of nonconformities in the manner and for the period of time provided above shall constitute the Seller's sole liability and the Customer's exclusive remedy for defective or nonconforming goods or services whether claims of the Customer are based in contract (including fundamental breach), in tort (including negligence and strict liability) or otherwise.

For warranty details, visit www.siemens.com/ruggedcom or contact a Siemens customer service representative.

Contacting Siemens

Address

Siemens AG
Industry Sector
300 Applewood Crescent
Concord, Ontario
Canada, L4K 5C7

Telephone

Toll-free: 1 888 264 0006
Tel: +1 905 856 5288
Fax: +1 905 856 1995

E-mail

ruggedcom.info.i-ia@siemens.com

Web

www.siemens.com/ruggedcom

Table of Contents

Preface v

 Alerts v

 Related Documents v

 Accessing Documentation v

 Training vi

 Customer Support vi

Chapter 1

Introduction 1

 1.1 Feature Highlights 1

 1.2 Ports, Controls and Indicator LEDs 2

Chapter 2

Installing Device 5

 2.1 Mounting the Device 5

 2.1.1 Mounting the Device to a Rack 6

 2.1.2 Mounting the Device on a DIN Rail 7

 2.1.3 Mounting the Device to a Panel 7

 2.2 Connecting Power 8

 2.2.1 Connecting AC Power 9

 2.2.2 Connecting DC Power 10

 2.2.3 Wiring Examples 10

 2.3 Connecting the Failsafe Alarm Relay 12

 2.4 Connecting to the Device 13

 2.5 Cabling Recommendations 14

Chapter 3

Communication Ports 15

 3.1 Copper Ethernet Ports 15

 3.2 Fiber Optic Ethernet Ports 16

Chapter 4

Technical Specifications 17

 4.1 Power Supply Specifications 17

 4.2 Failsafe Relay Specifications 17

 4.3 Copper Ethernet Port Specifications 18

- 4.4 Fiber Optic Ethernet Port Specifications 18
 - 4.4.1 10Base-FL/100Base-SX Ethernet Optical Specifications 18
 - 4.4.2 Fast Ethernet (100 Mbps) Optical Specifications 18
- 4.5 Operating Environment 19
- 4.6 Mechanical Specifications 19

- Chapter 5
- Dimension Drawings 21

- Chapter 6
- Certification 25
 - 6.1 Agency Approvals 25
 - 6.2 FCC Compliance 25
 - 6.3 Industry Canada Compliance 25
 - 6.4 EMI and Environmental Type Tests 26

Preface

This guide describes the RUGGEDCOM RS1600T. It describes the major features of the device, installation, commissioning and important technical specifications.

It is intended for use by network technical support personnel who are responsible for the installation, commissioning and maintenance of the device. It is also recommended for use by network and system planners, system programmers, and line technicians.

Alerts

The following types of alerts are used when necessary to highlight important information.



DANGER!

DANGER alerts describe imminently hazardous situations that, if not avoided, will result in death or serious injury.



WARNING!

WARNING alerts describe hazardous situations that, if not avoided, may result in serious injury and/or equipment damage.



CAUTION!

CAUTION alerts describe hazardous situations that, if not avoided, may result in equipment damage.



IMPORTANT!

IMPORTANT alerts provide important information that should be known before performing a procedure or step, or using a feature.



NOTE

NOTE alerts provide additional information, such as facts, tips and details.

Related Documents

Other documents that may be of interest include:

- *ROS User Guide for the RS1600T*

Accessing Documentation

The latest Hardware Installation Guides and Software User Guides for most RUGGEDCOM products are available online at www.siemens.com/ruggedcom.

For any questions about the documentation or for assistance finding a specific document, contact a Siemens sales representative.

Training

Siemens offers a wide range of educational services ranging from in-house training of standard courses on networking, Ethernet switches and routers, to on-site customized courses tailored to the customer's needs, experience and application.

Siemens' Educational Services team thrives on providing our customers with the essential practical skills to make sure users have the right knowledge and expertise to understand the various technologies associated with critical communications network infrastructure technologies.

Siemens' unique mix of IT/Telecommunications expertise combined with domain knowledge in the utility, transportation and industrial markets, allows Siemens to provide training specific to the customer's application.

For more information about training services and course availability, visit www.siemens.com/ruggedcom or contact a Siemens sales representative.

Customer Support

Customer support is available 24 hours, 7 days a week for all Siemens customers. For technical support or general information, please contact Customer Support at:

Toll Free (North America): 1 866 922 7975

International: +1 905 856 5288

Website: <http://support.automation.siemens.com>



Introduction

The RUGGEDCOM RS1600T provides substation hardened, fully managed, Ethernet switches specifically designed to operate reliably in electrically and environmentally harsh environments.

The RS1600T's Zero-Packet-Loss™ technology provides a high level of immunity to electromagnetic interference (EMI) and heavy electrical surges typical of environments found in electric utility substations, industrial plant floors or in curb side traffic control cabinets.

An operating temperature range of -40 to 85°C (-40 to 185°F) allows the RS1600T to be placed in almost any location. For applications requiring high availability the RS1600T provides the option for integrated dual redundant power supplies each capable of accommodating a wide range of input voltages for worldwide operability. Also unique is the ability to have each power supply fed from different voltage levels and/or sources thereby providing great flexibility in creating high availability systems.

The RS1600T offers advanced Layer 2 and 3 networking features and network management via the Rugged Operating System (ROS). A unique feature of ROS is the performance of its IEEE 802.1w Rapid Spanning Tree Protocol (RSTP™) used for implementing fault tolerant ring and mesh network architectures. The protocol has been optimized to support ring sizes of up to 160 switches and fault recovery times in the order of less than 5 ms per switch.

The RS1600T's superior ruggedized design coupled with the Rugged Operating System (ROS) provides improved system reliability, secure access management, and advanced networking features making it ideally suited for creating Ethernet networks for mission-critical, real-time, control applications.

The following sections provide more information about the RS1600T:

- [Section 1.1, "Feature Highlights"](#)
- [Section 1.2, "Ports, Controls and Indicator LEDs"](#)

Section 1.1

Feature Highlights

16-Ethernet Ports

- Fourteen 100Base-TX and two 100Base-FX ports
- Multimode and Singlemode optical transceivers
- Industry standard fiber optical connectors: LC and MTRJ

Rated for Reliability in Harsh Environments

- Immunity to EMI and heavy electrical surges
 - Meets IEEE 1613 Class 2 (electric utility substations)
 - Exceeds IEC 61850-3 (electric utility substations)
 - Exceeds IEC 61800-3 (variable speed drive systems)
 - Exceeds IEC 61000-6-2 (generic industrial)
 - Exceeds NEMA TS-2 (traffic control equipment)
- -40 to 85 °C (-40 to 185 °F) operating temperature (no fans)

- Failsafe Output Relay: For critical failure or error alarming
- Conformal coated printed circuit boards (optional)

Cyber Security Features

- Multi-level user passwords
- SSH/SSL (128-bit encryption)
- Enable/disable ports, MAC based port security
- Port based network access control (802.1x)
- VLAN (802.1Q) to segregate and secure network traffic
- RADIUS centralized password management
- SNMPv3 authentication and 56-bit encryption

Management Tools

- Web-based, Telnet, CLI management interfaces
- SNMP v1/v2/v3 (56-bit encryption)
- Remote Monitoring (RMON)
- Rich set of diagnostics with logging and alarms

Universal Power Supply Options

- Fully integrated, dual-redundant (optional) power supplies
- Universal high-voltage range: 88-300VDC or 85-264VAC
- Popular low voltage ranges: 24VDC (10-36VDC), 48VDC (36-59VDC)
- Terminal blocks for reliable maintenance free connections
- CSA/UL 60950 safety approved to 85 °C (185 °F)

Section 1.2

Ports, Controls and Indicator LEDs

The RS1600T features various ports, controls and indicator LEDs on the front and rear panels for configuring and troubleshooting the device.

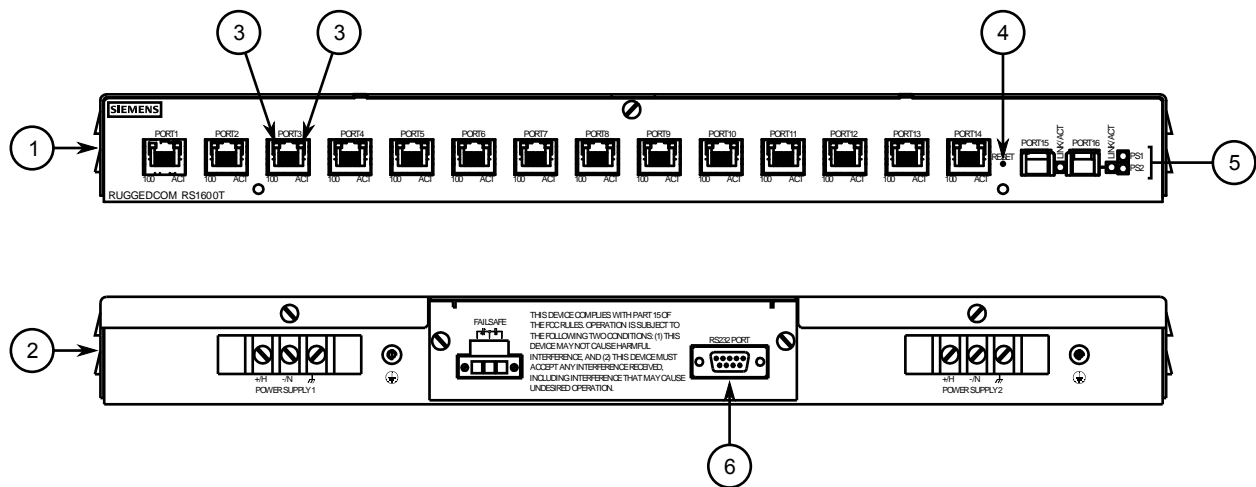


Figure 1: Front and Rear Panels

1. Front 2. Rear 3. Port Status Indicator LEDS 4. Reset Button 5. Power Indicator LED 6. RS232 Serial Console Port (DB9)

| | |
|----------------------------|---|
| Port Status Indicator LEDS | These LEDs indicate when ports are active. <ul style="list-style-type: none">• Green = Link detected• Off = No link detected |
| Reset Button | The reset button shuts down and restarts the device. |
| Power Indicator LED | This LED indicates the status of the power supply. <ul style="list-style-type: none">• Green = The power supply is supplying power• Off = Power is off |
| RS232 Serial Console Port | This port is for interfacing directly with the device and accessing initial management functions. |

2 Installing Device

The following sections describe how to install the device, including mounting the device, installing/removing modules, connecting power, and connecting the device to the network.



DANGER!

Electrocution hazard – risk of serious personal injury and/or damage to equipment. Before performing any maintenance tasks, make sure all power to the device has been disconnected and wait approximately two minutes for any remaining energy to dissipate.



WARNING!

Radiation hazard – risk of serious personal injury. This product contains a laser system and is classified as a CLASS 1 LASER PRODUCT. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



IMPORTANT!

This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void.

Changes or modifications not expressly approved by Siemens AG could invalidate specifications, test results, and agency approvals, and void the user's authority to operate the equipment.



IMPORTANT!

This product should be installed in a restricted access location where access can only be gained by authorized personnel who have been informed of the restrictions and any precautions that must be taken. Access must only be possible through the use of a tool, lock and key, or other means of security, and controlled by the authority responsible for the location.

- [Section 2.1, “Mounting the Device”](#)
- [Section 2.2, “Connecting Power”](#)
- [Section 2.3, “Connecting the Failsafe Alarm Relay”](#)
- [Section 2.4, “Connecting to the Device”](#)
- [Section 2.5, “Cabling Recommendations”](#)

Section 2.1

Mounting the Device

The RS1600T is designed for maximum mounting and display flexibility. It can be equipped with connectors that allow it to be installed in a 48 cm (19 in) rack, 35 mm (1.4 in) DIN rail, or directly on a panel.



NOTE

For detailed dimensions of the device with either rack, DIN rail or panel hardware installed, refer to [Chapter 5, Dimension Drawings](#).

The following sections describe the various methods of mounting the device:

- [Section 2.1.1, “Mounting the Device to a Rack”](#)
- [Section 2.1.2, “Mounting the Device on a DIN Rail”](#)
- [Section 2.1.3, “Mounting the Device to a Panel”](#)

Section 2.1.1

Mounting the Device to a Rack

For rack mount installations, the RS1600T can be equipped with rack mount adapters pre-installed.



NOTE

The chassis features multiple mounting holes, allowing the rack mount adapters to be installed up to 25 mm (1 in) from the face of the device.

To secure the device to a standard 48 cm (19 in) rack, do the following:

1. Make sure the rack mount adapters are installed on the correct position on the chassis.

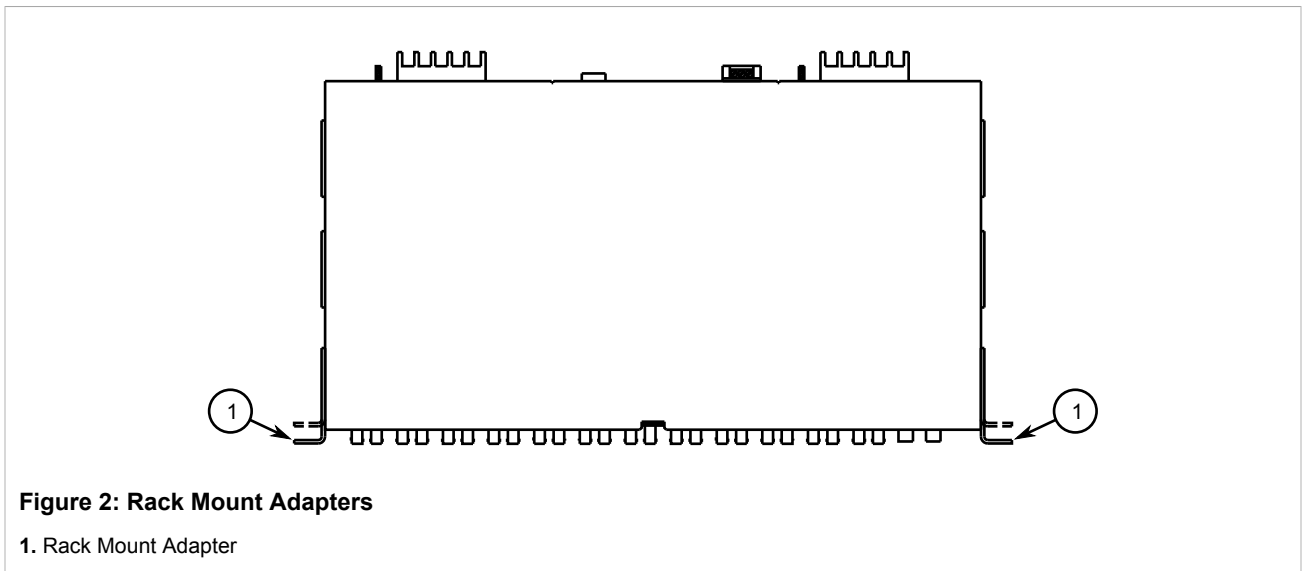


Figure 2: Rack Mount Adapters

1. Rack Mount Adapter

2. Insert the device into the rack.



NOTE

Since heat within the device is channelled to the enclosure, it is recommended that 1 rack-unit of space, or 44 mm (1.75 in), be kept empty above the device. This allows a small amount of convectional airflow.

Forced airflow is not required. However, any increase in airflow will result in a reduction of ambient temperature and improve the long-term reliability of all equipment mounted in the rack space.

3. Secure the adapters to the rack using the supplied hardware.


Section 2.1.2

Mounting the Device on a DIN Rail

For DIN rail installations, the RS1600T can be equipped with panel/DIN rail adapters pre-installed on each side of the chassis. The adapters allow the device to be slid onto a standard 35 mm (1.4 in) DIN rail.

To mount the device to a DIN rail, do the following:

1. Align the adapters with the DIN rails and slide the device into place.

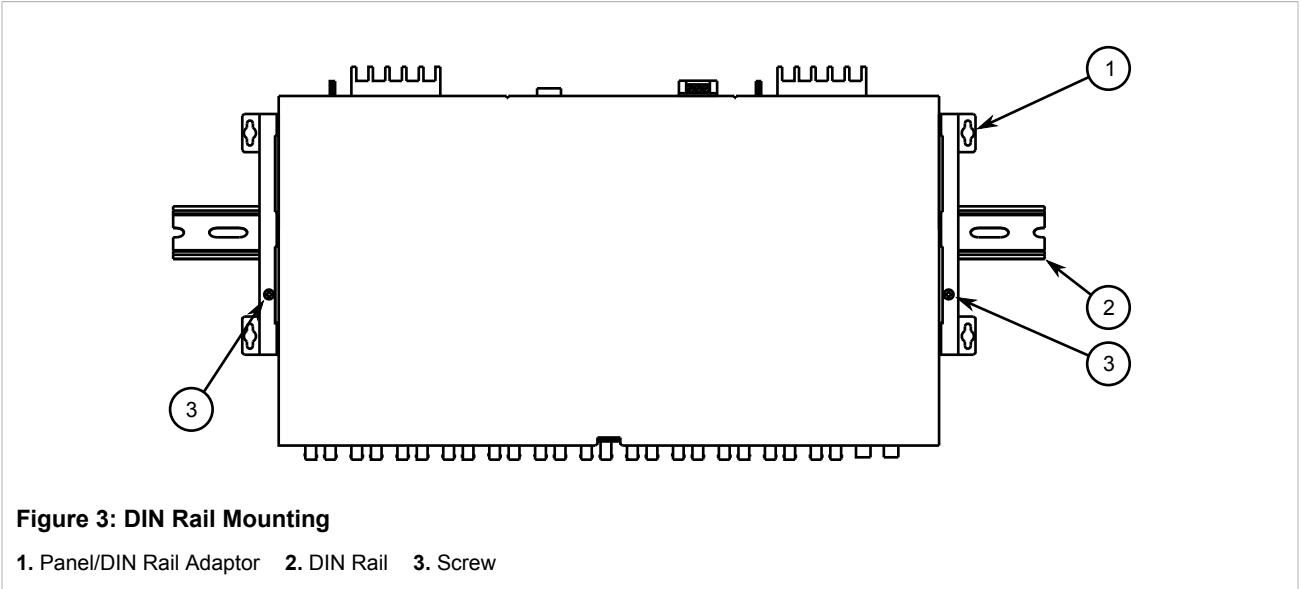

2. Install one of the supplied screws on either side of the device to secure the adapters to the DIN rails.

Section 2.1.3

Mounting the Device to a Panel

For panel installations, the RS1600T can be equipped with panel/DIN rail adapters pre-installed on each side of the chassis. The adapters allow the device to be attached to a panel using screws.

To mount the device to a panel, do the following:

1. Place the device against the panel and align the adapters with the mounting holes.

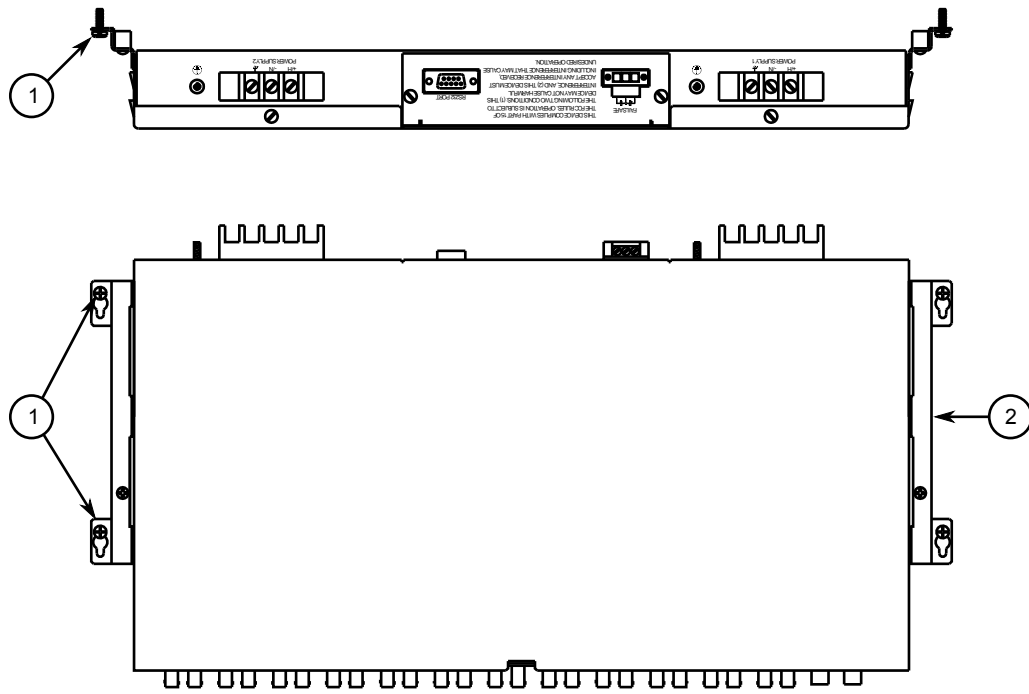


Figure 4: Panel Mounting

1. Screw 2. Panel/DIN Rail Adapter

2. Install the supplied screws to secure the adapters to the panel.

Section 2.2

Connecting Power

The RS1600T supports single or dual redundant high AC, high DC and/or low DC power supplies. The use of two power modules is recommended to provide redundancy and load balancing.

The RS1600T can be equipped with either a screw-type or pluggable terminal block, which provides power to both power supplies. The screw-type terminal block is installed using Philips screws and compression plates, allowing either bare wire connections or crimped terminal lugs. Use #6 size ring lugs for secure, reliable connections under severe shock or vibration.



NOTE

- For maximum redundancy in a dual power supply configuration, use two independent power sources.
- For 100-240 VAC rated equipment, an appropriately rated AC circuit breaker must be installed.
- For 88-300 VDC rated equipment, an appropriately rated DC circuit breaker must be installed.
- A circuit breaker is not required for 12, 24 or 48 VDC rated power supplies.
- It is recommended to provide a separate circuit breaker for each power supply module.
- Equipment must be installed according to applicable local wiring codes and standards.

The following sections describe how to connect power to the device:

- [Section 2.2.1, “Connecting AC Power”](#)
- [Section 2.2.2, “Connecting DC Power”](#)
- [Section 2.2.3, “Wiring Examples”](#)

Section 2.2.1

Connecting AC Power

To connect a high AC power supply to the device, do the following:



CAUTION!

Electrical hazard – risk of damage to equipment. Do not connect AC power cables to a DC power supply terminal block. Damage to the power supply may occur.



CAUTION!

Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the braided ground cable connected to the surge ground terminal and chassis ground. This cable connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.

1. Connect the positive wire from the power source to the positive/hot (+/H) terminal on the terminal block. For more information, refer to [Section 2.2.3, “Wiring Examples”](#).

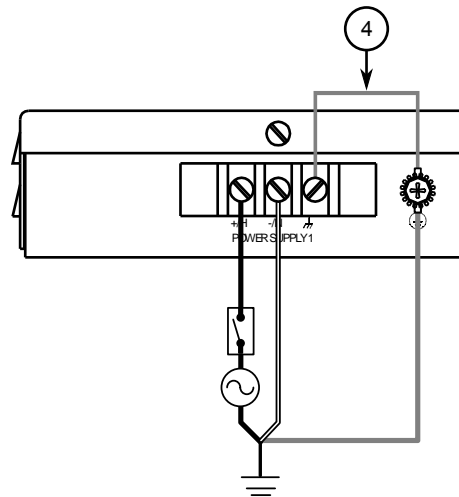
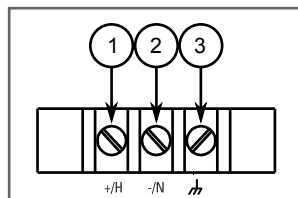


Figure 5: Terminal Block Wiring

1. Positive/Hot (+/H) Terminal 2. Negative/Neutral (-/N) Terminal 3. Surge Ground Terminal 4. Braided Ground Cable

2. Connect the negative wire from the power source to the negative/neutral (-/N) terminal on the terminal block.
3. Using a braided wire or other appropriate grounding wire, connect the surge ground terminal to the chassis ground connection. The surge ground terminal is used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
4. Connect the ground terminal on the power source to the chassis ground terminal on the device.

Section 2.2.2

Connecting DC Power

To connect a high or low DC power supply to the device, do the following:



CAUTION!

Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the braided ground cable connected to the surge ground terminal and chassis ground. This cable connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.

1. Connect the positive wire from the power source to the positive/hot (+/H) terminal on the terminal block. For more information, refer to [Section 2.2.3, “Wiring Examples”](#).

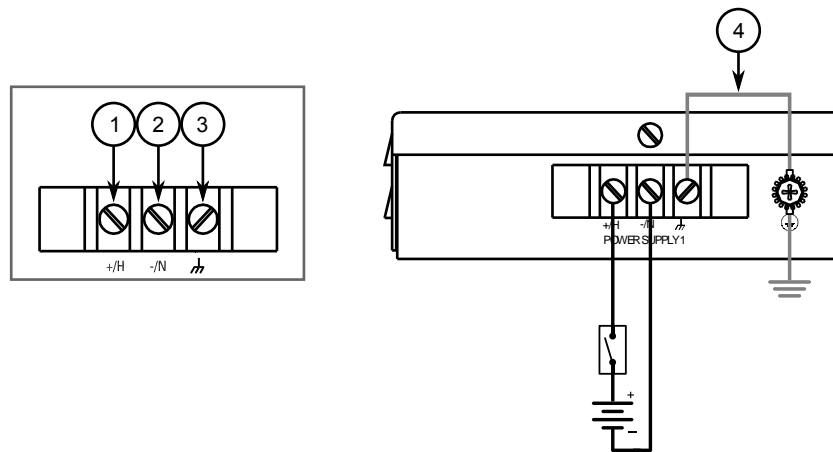


Figure 6: Terminal Block Wiring

1. Positive/Hot (+/H) Terminal 2. Negative/Neutral (-/N) Terminal 3. Surge Ground Terminal 4. Chassis Ground Terminal

2. Connect the negative wire from the power source to the negative/neutral (-/N) terminal on the terminal block.
3. Using a braided wire or other appropriate grounding wire, connect the surge ground terminal to the chassis ground connection. The surge ground terminal is used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
4. Connect the ground terminal on the power source to the chassis ground terminal on the device.

Section 2.2.3

Wiring Examples

The following illustrate how to connect power to single and dual power supplies.

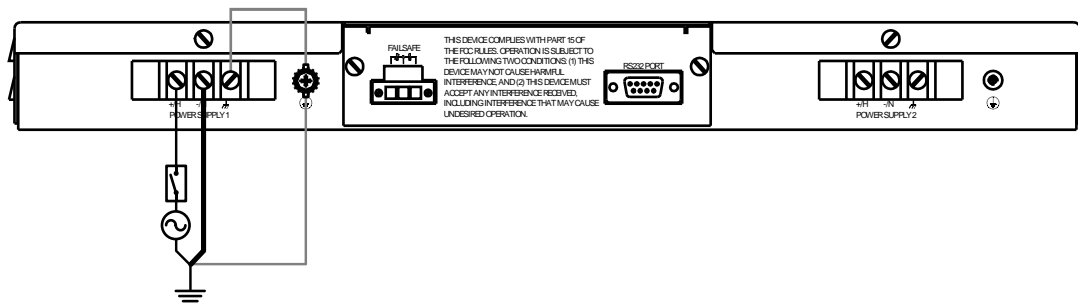


Figure 7: Single AC Power Supply

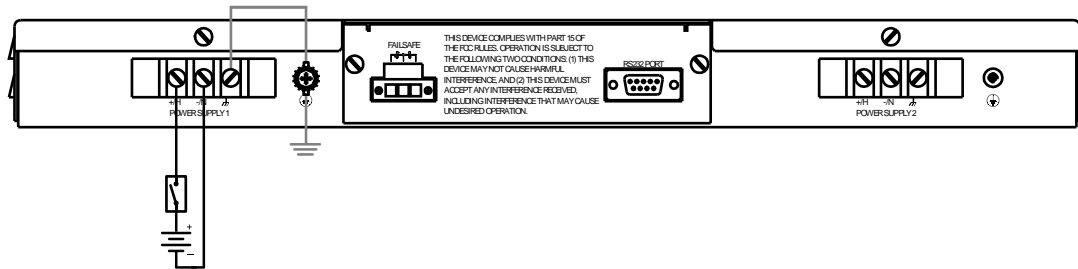


Figure 8: Single DC Power Supply

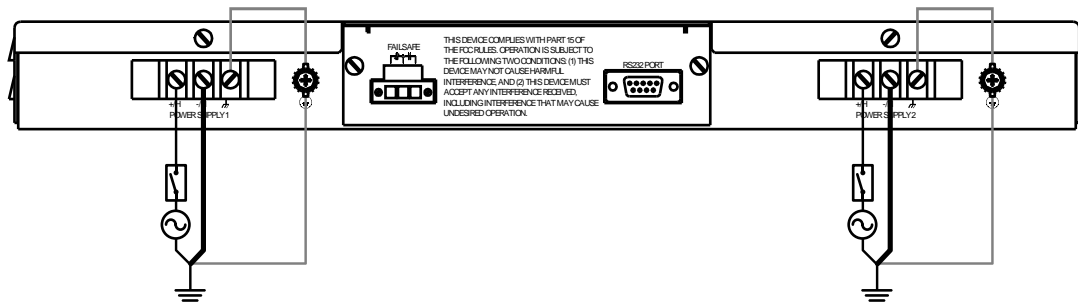


Figure 9: Dual AC Power Supply

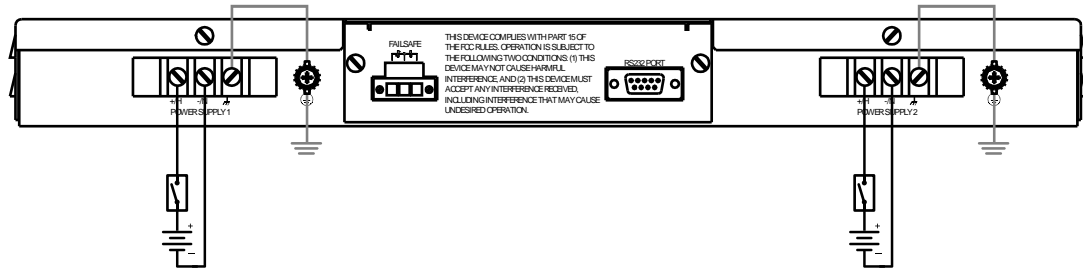


Figure 10: Dual DC Power Supply

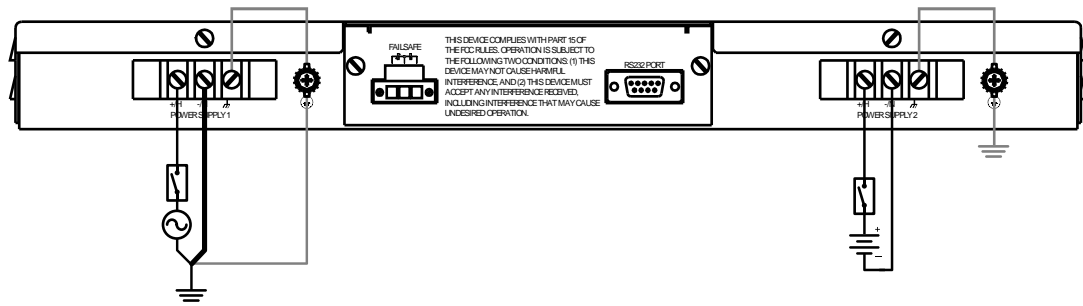


Figure 11: Dual AC/DC Power Supply

Section 2.3

Connecting the Failsafe Alarm Relay

The failsafe relay can be configured to latch based on alarm conditions. The NO (Normally Open) contact is closed when the unit is powered and there are no active alarms. If the device is not powered or if an active alarm is configured, the relay opens the NO contact and closes the NC (Normally Closed) contact.



NOTE

Control of the failsafe relay output is configurable through ROS . One common application for this relay is to signal an alarm if a power failure occurs. For more information, refer to the ROS User Guide for the RS1600T.

The following shows the proper relay connections.

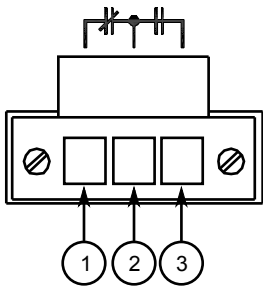


Figure 12: Failsafe Alarm Relay Wiring

1. Normally Open Terminal 2. Common Terminal 3. Normally Closed Terminal

Section 2.4

Connecting to the Device

The following describes the various methods for accessing the ROS console and Web interfaces on the device. For more detailed instructions, refer to the *ROS User Guide* for the RS1600T.

RS232 Console Port

Connect a PC or terminal directly to the RS232 console port to access the boot-time control and ROS interfaces. The console port provides access to ROS's console and Web interfaces.



IMPORTANT!

The console port is intended to be used only as a temporary connection during initial configuration or troubleshooting.

The following is the pin-out for the console port:

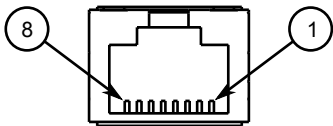


Figure 13: RJ45 Console Port Pin Configuration

| Pin | Name | Description |
|-----|---------------------------|----------------|
| 1 | TX+ | Transmit Data+ |
| 2 | TX- | Transmit Data- |
| 3 | RX+ | Receive Data+ |
| 4 | Reserved (Do Not Connect) | |
| 5 | Reserved (Do Not Connect) | |
| 6 | RX- | Receive Data- |
| 7 | Reserved (Do Not Connect) | |
| 8 | Reserved (Do Not Connect) | |

Communication Ports

Connect any of the available Ethernet ports on the device to a management switch and access the ROS console and Web interfaces via the device's IP address. For more information about available ports, refer to [Chapter 3, Communication Ports](#).

Section 2.5

Cabling Recommendations

Siemens does not recommend the use of copper cabling of any length for critical, real-time substation automation applications. All copper Ethernet ports on RUGGEDCOM products include transient suppression circuitry to protect against damage from electrical transients and conform with IEC 61850-3 and IEEE 1613 Class 1 standards. This means that during a transient electrical event, communications errors or interruptions may occur, but recovery is automatic.

Siemens also does not recommend using copper Ethernet ports to interface with devices in the field across distances that could produce high levels of ground potential rise (i.e. greater than 2500 V), during line-to-ground fault conditions.

3 Communication Ports

The RS1600T can be equipped with various types of communication ports to enhance its abilities and performance. To determine which ports are equipped on the device, refer to the factory data file available through ROS . For more information on how to access the factory data file, refer to the *ROS User Guide* for the RS1600T.

Each communication port type has a specific place in the RS1600T chassis.

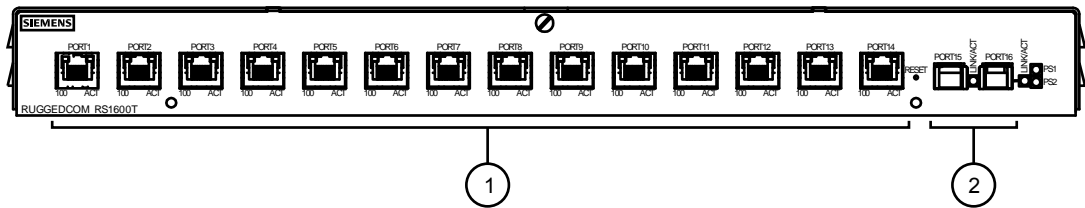


Figure 14: Port Assignment
1. Ports 1 to 14 2. Ports 15 to 16

| Port | Type |
|----------|---------------|
| 1 to 14 | 10/100Base-TX |
| 15 to 16 | 100Base-FX |

The following sections describe the available ports:

- [Section 3.1, “Copper Ethernet Ports”](#)
- [Section 3.2, “Fiber Optic Ethernet Ports”](#)

Section 3.1


Copper Ethernet Ports

The RS1600T supports several 10/100Base-TX Ethernet ports that allow connection to standard Category 5 (CAT-5) unshielded twisted-pair (UTP) cables with RJ45 male connectors. The RJ45 connectors are directly connected to the chassis ground on the device and can accept CAT-5 shielded twisted-pair (STP) cables.

Each port features a **Speed** and **Link** LED that indicates the state of the port.

| LED | State | Description |
|-------|-------------------|-----------------------------------|
| Speed | Yellow | The port is operating at 100 Mbps |
| | Off | The port is operating at 10 Mbps |
| Link | Yellow (Solid) | Link established |
| | Yellow (Blinking) | Link activity |
| | Off | No link detected |

The following is the pin-out for the RJ45 male connector:

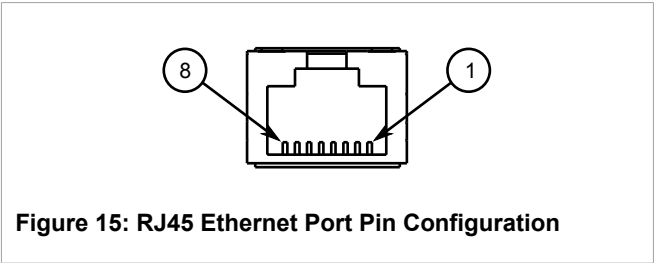



| Pin | Name | Description |
|------|---------------------------|----------------|
| 1 | RX+ | Receive Data+ |
| 2 | RX- | Receive Data- |
| 3 | TX+ | Transmit Data+ |
| 4 | Reserved (Do Not Connect) | |
| 5 | Reserved (Do Not Connect) | |
| 6 | TX- | Transmit Data- |
| 7 | Reserved (Do Not Connect) | |
| 8 | Reserved (Do Not Connect) | |
| Case | Shield (Chassis Ground) | |

For specifications on the available copper Ethernet ports, refer to [Section 4.3, “Copper Ethernet Port Specifications”](#).

Section 3.2

Fiber Optic Ethernet Ports

Fiber optic Ethernet ports are available with either MTRJ (Mechanical Transfer Registered Jack) and LC (Lucent Connector) connectors. Make sure the Transmit (Tx) and Receive (Rx) connections of each port are properly connected and matched to establish a proper link.

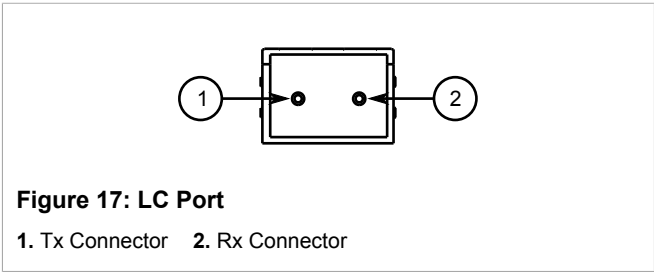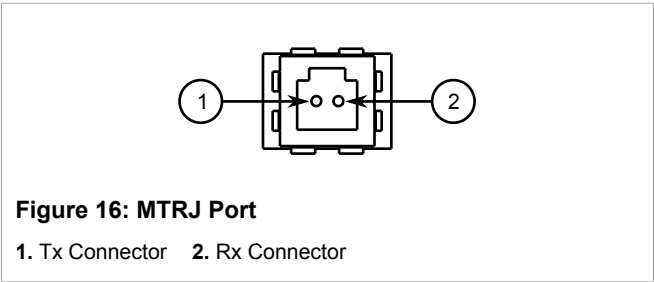

For specifications on the available fiber optic Ethernet ports, refer to [Section 4.4, “Fiber Optic Ethernet Port Specifications”](#).

4 Technical Specifications

The following sections provide important technical specifications related to the device and available modules:

- [Section 4.1, “Power Supply Specifications”](#)
- [Section 4.2, “Failsafe Relay Specifications”](#)
- [Section 4.3, “Copper Ethernet Port Specifications”](#)
- [Section 4.4, “Fiber Optic Ethernet Port Specifications”](#)
- [Section 4.5, “Operating Environment”](#)
- [Section 4.6, “Mechanical Specifications”](#)

Section 4.1

Power Supply Specifications

| Power Supply Type | Input Range | | Internal Fuse Rating ^{ab} | Isolation | Maximum Power Consumption ^c |
|-------------------------------|-------------|---------|------------------------------------|-----------|--|
| | Minimum | Maximum | | | |
| 12–24 VDC | 10 VDC | 36 VDC | 6.3 A(F) | 1.5 kVDC | 21 W |
| 24 VDC | 18 VDC | 36 VDC | 5 A(F) | 1.5 kVDC | |
| 48 VDC | 36 VDC | 59 VDC | 2 A(T) | 1.5 kVDC | |
| HI (125/250 VDC) ^d | 88 VDC | 300 VDC | 2 A(T) | 5.5 kVDC | |
| HI (110/230 VAC) ^d | 85 VAC | 265 VAC | 2 A(T) | 4 kVAC | |

^a (F) denotes fast-acting fuse

^b (T) denotes time-delay fuse.

^c Power consumption varies based on configuration. 10/100Base-TX ports consume roughly 1 W less than fiber optic ports.

^d Same power supply for both AC and DC.

Section 4.2

Failsafe Relay Specifications

| Voltage | Current |
|---------|---------|
| 30 VAC | 0.3 A |
| 30 VDC | 1 A |
| 80 VDC | 0.3 A |

Section 4.3

Copper Ethernet Port Specifications

The following details the specifications for copper Ethernet ports that can be ordered with the RS1600T.

| Speed ^e | Connector | Duplex ^e | Cable Type ^f | Wiring Standard ^g | Maximum Distance ^h | Isolation ⁱ |
|--------------------|-----------|---------------------|-------------------------|------------------------------|-------------------------------|------------------------|
| 10/100Base-TX | RJ45 | FDX/HDX | > Category 5 | TIA/EIA T568A/B | 100 m (328 ft) | 1.5 kV |

^e Auto-negotiating.

^f Shielded or unshielded.

^g Auto-crossover and auto-polarity.

^h Typical distance. Dependent on the number of connectors and splices.

ⁱ RMS 1 minute.

Section 4.4

Fiber Optic Ethernet Port Specifications

The following sections detail fiber optic specifications for ports that can be equipped on the RS1600T. The user determines the type of optics at the time of ordering, and can determine the ports installed on a particular unit by reading the factory data file via the ROS user interface. The specifications are organized by order code. Module order codes are contained within each unit when it is assembled and configured at the factory. For information about obtaining factory configuration data, refer to the *ROS User Guide* for the RS1600T.

- [Section 4.4.1, “10Base-FL/100Base-SX Ethernet Optical Specifications”](#)
- [Section 4.4.2, “Fast Ethernet \(100 Mbps\) Optical Specifications”](#)

Section 4.4.1

10Base-FL/100Base-SX Ethernet Optical Specifications

| Mode | Connector Type | Cable Type (μm) | Tx λ (typ.) (nm) | Tx min (dBm) | Tx max (dBm) | Rx Sensitivity (dBm) | Rx Saturation (dBm) | Distance (typ.) (km) | Power Budget (dB) |
|------|----------------|-----------------|------------------|--------------|--------------|----------------------|---------------------|----------------------|-------------------|
| MM | ST | 50/125 | 820 | -16.5 | -10.6 | -34.4 | -11.2 | 2 | 21 |

Section 4.4.2

Fast Ethernet (100 Mbps) Optical Specifications

| Mode | Connector Type | Cable Type (μm) | Tx λ (typ.) (nm) | Tx min. (dBm) | Tx max. (dBm) | Rx Sensitivity (dBm) | Rx Saturation (dBm) | Distance (typ.) (km) | Power Budget (dB) |
|------|----------------|-----------------|------------------|---------------|---------------|----------------------|---------------------|----------------------|-------------------|
| MM | MTRJ | 50/125 | 1310 | -16 | -11 | -33.5 | -11 | 2 | 17 |
| SM | LC | 9/125 | 1310 | -15 | -8 | -31 | -5 | 15 | 16.5 |

Section 4.5

Operating Environment

| Parameter | Range | Comments |
|-------------------------------|---------------------------------|---|
| Ambient Operating Temperature | -40 to 85 °C (-40 to 185 °F) | Measured from a 30 cm (12 in) radius surrounding the center of the enclosure. |
| Ambient Relative Humidity | 5% to 95% | Non-condensing |
| Ambient Storage Temperature | -40 to 85 °C (-40 to 185 °F) | |

Section 4.6

Mechanical Specifications

| Parameter | Value |
|------------|--|
| Dimensions | Refer to Chapter 5, Dimension Drawings |
| Weight | 10 lb (4.5 Kg) |
| Enclosure | 18 AWG Galvanized Steel |

5 Dimension Drawings



NOTE

All dimensions are in millimeters, unless otherwise stated.



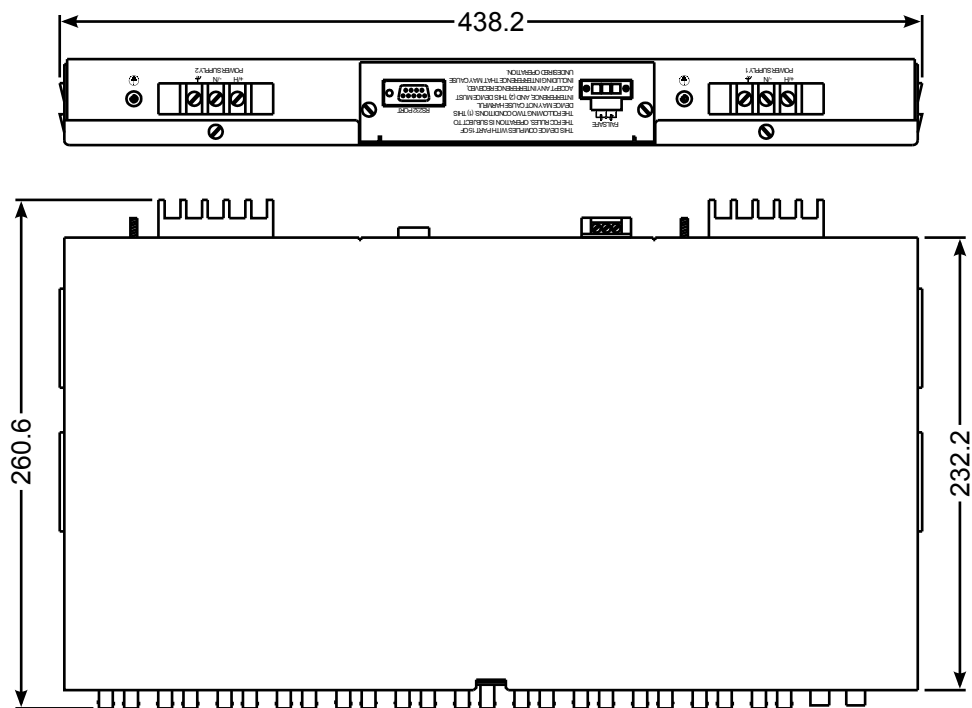


Figure 18: Overall Dimensions

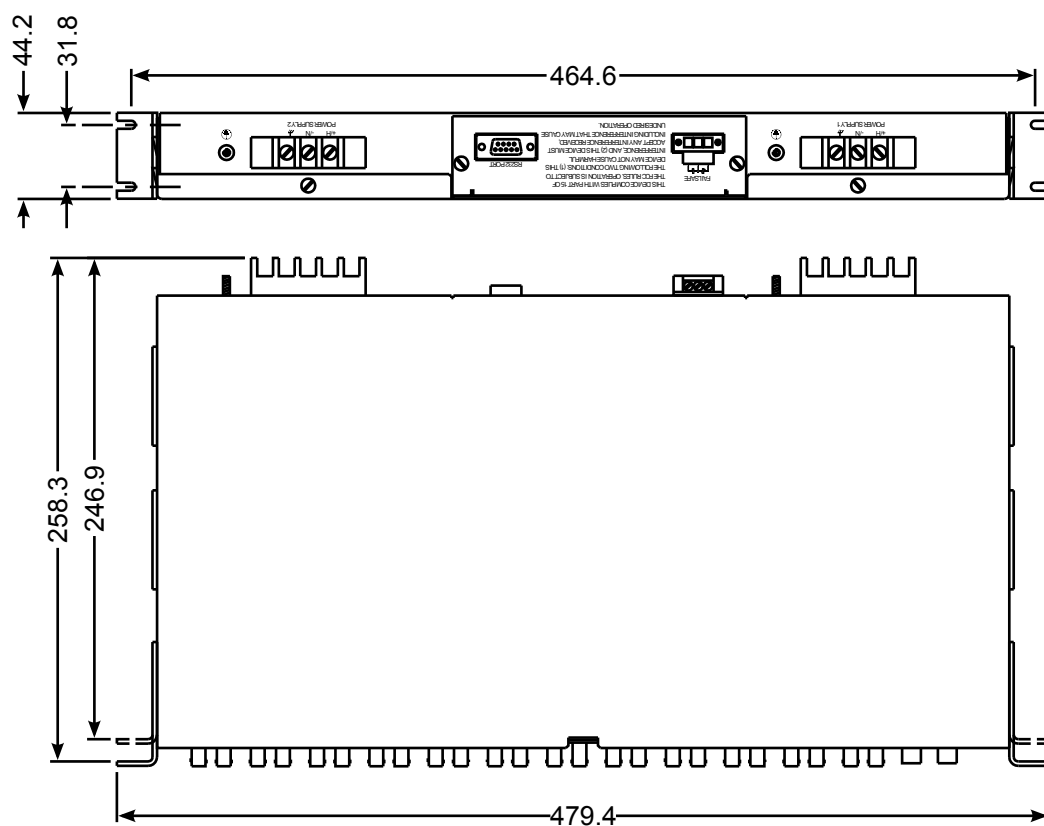

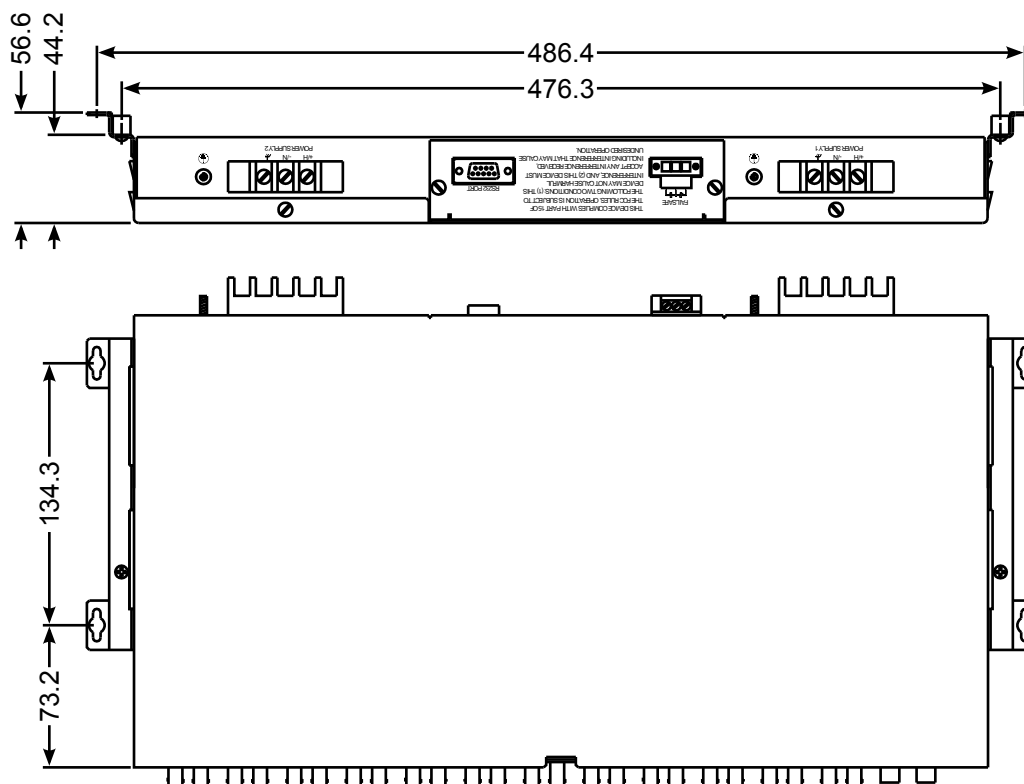

6 Certification

The RS1600T device has been thoroughly tested to guarantee its conformance with recognized standards and has received approval from recognized regulatory agencies.

- [Section 6.1, “Agency Approvals”](#)
- [Section 6.2, “FCC Compliance”](#)
- [Section 6.3, “Industry Canada Compliance”](#)
- [Section 6.4, “EMI and Environmental Type Tests”](#)

Section 6.1

Agency Approvals

| Agency | Standards | Comments |
|----------|--|---|
| CSA | CSA C22.2 No. 60950-1, UL 60950-1 | Approved |
| CE | EN 60950-1, EN 61000-6-2, EN 50581, EN 55022, EN 60825-1 | CE Compliance is claimed via Declaration of Self Conformity Route |
| FCC | FCC Part 15, Class A | Approved |
| FDA/CDRH | 21 CFR Chapter I, Sub-section J | Compliant |

Section 6.2

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference on his own expense.

Section 6.3

Industry Canada Compliance

CAN ICES-3 (A) / NMB-3 (A)

Section 6.4

EMI and Environmental Type Tests

The RS1600T has passed the following EMI and environmental tests.

IEC 61850-3 Type Tests

| Test | Description | | Test Levels | Severity Levels |
|----------------|-----------------------------|--------------------|--|-----------------|
| IEC 61000-4-2 | ESD | Enclosure Contact | +/- 8 kV | 4 |
| | | Enclosure Air | +/- 15 kV | 4 |
| IEC 61000-4-3 | Radiated RFI | Enclosure ports | 20 V/m | x |
| IEC 61000-4-4 | Burst (Fast Transient) | Signal ports | +/- 4 kV @ 2.5 kHz | x |
| | | DC Power ports | +/- 4 kV | 4 |
| | | AC Power ports | +/- 4 kV | 4 |
| | | Earth ground ports | +/- 4 kV | 4 |
| IEC 61000-4-5 | Surge | Signal ports | +/- 4 kV line-to-earth, +/- 2 kV line-to-line | 4 |
| | | DC Power ports | +/- 2 kV line-to-earth, +/- 1 kV line-to-line | 3 |
| | | AC Power ports | +/- 4 kV line-to-earth, +/- 2 kV line-to-line | 4 |
| IEC 61000-4-6 | Induced (Conducted) RFI | Signal ports | 10 V | 3 |
| | | DC Power ports | 10 V | 3 |
| | | AC Power ports | 10 V | 3 |
| | | Earth ground ports | 10 V | 3 |
| IEC 61000-4-8 | Magnetic Field | Enclosure ports | 40 A/m continuous, 1000 A/m for 1 s | |
| IEC 61000-4-29 | Voltage Dips and Interrupts | DC Power ports | 30% for 0.1 s, 60% for 0.1 s, 100% for 0.05 s | |
| | | AC Power ports | 30% for 1 period, 60% for 50 periods | |
| IEC 61000-4-11 | | | 100% for 5 periods, 100% for 50 periods | |
| IEC 61000-4-12 | Damped Oscillatory | Signal ports | 2.5 kV common, 1 kV differential mode @ 1 MHz | 3 |
| | | DC Power ports | 2.5 kV common, 1 kV differential mode @ 1 MHz | 3 |
| | | AC Power ports | 2.5 kV common, 1 kV differential mode @ 1 MHz | 3 |
| IEC 61000-4-16 | Mains Frequency Voltage | Signal ports | 30 V Continuous, 300 V for 1 s | 4 |
| | | DC Power ports | 30 V Continuous, 300 V for 1 s | 4 |
| IEC 61000-4-17 | Ripple on DC Power Supply | DC Power ports | 10% | 3 |

| Test | Description | | Test Levels | Severity Levels |
|-------------|---------------------|----------------|---------------------------------|-----------------|
| IEC 60255-5 | Dielectric Strength | Signal ports | 2 kVAC (Fail-Safe Relay output) | |
| | | DC Power ports | 1.5 kVDC | |
| | | AC Power ports | 2 kVDC | |
| | HV Impulse | Signal ports | 5 kV (Fail-Safe Relay Output) | |
| | | DC Power ports | 5 kV | |
| | | AC Power ports | 5 kV | |

IEEE 1613 (C37.90.x) EMI Immunity Type Tests



NOTE

The RS1600T meets Class 2 requirements for an all-fiber configuration and Class 1 requirements for copper ports.

| IEEE Test | IEEE 1613 Clause | Description | | Test Levels |
|-----------|------------------|---------------------|--------------------|--|
| C37.90.3 | 9 | ESD | Enclosure Contact | +/- 8 kV |
| | | | Enclosure Air | +/- 15 kV |
| C37.90.2 | 8 | Radiated RFI | Enclosure ports | 35 V/m |
| C37.90.1 | 7 | Fast Transient | Signal ports | +/- 4 kV @ 2.5 kHz |
| | | | DC Power ports | +/- 4 kV |
| | | | AC Power ports | +/- 4 kV |
| | | | Earth ground ports | +/- 4 kV |
| | | Oscillatory | Signal ports | 2.5 kV common mode @ 1MHz |
| | | | DC Power ports | 2.5 kV common and differential mode @ 1MHz |
| | | | AC Power ports | 2.5 kV common and differential mode @ 1MHz |
| C37.90 | 6 | HV Impulse | Signal ports | 5 kV (Failsafe Relay) |
| | | | DC Power ports | 5 kV |
| | | | AC Power ports | 5 kV |
| | | Dielectric Strength | Signal ports | 2 kVAC (Failsafe Relay) |
| | | | DC Power ports | 1.5 kVDC |
| | | | AC Power ports | 2 kVAC |

Environmental Type Tests

| Test | Description | | Test Levels | Severity Levels |
|---------------|------------------|---------|---------------------------|-----------------|
| IEC 60068-2-1 | Cold Temperature | Test Ad | -40 °C (-40 °F), 16 Hours | |
| IEC 60068-2-2 | Dry Heat | Test Bd | 85 °C (185 °F), 16 Hours | |

| Test | Description | | Test Levels | Severity Levels |
|----------------|------------------------------|---------|--|-----------------|
| IEC 60068-2-30 | Humidity (Damp Heat, Cyclic) | Test Db | 95% (non-condensing), 55 °C (131 °F), 6 cycles | |
| IEC 60255-21-1 | Vibration | | 2 g @ 10-150 Hz | Class 2 |
| IEC 60255-21-2 | Shock | | 30 g @ 11 ms | Class 2 |