SIEMENS

RUGGEDCOM RX1100P

Preface

Introduction	1
Installing the Device	2
Communication Ports	3
Technical Specifications	4
Dimension Drawings	5
Certification	6

Installation Guide

Copyright © 2015 Siemens Canada Ltd.

All rights reserved. Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Siemens Canada Ltd..

Disclaimer Of Liability

Siemens has verified the contents of this manual against the hardware and/or software described. However, deviations between the product and the documentation may exist.

Siemens shall not be liable for any errors or omissions contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

The information given in this document is reviewed regularly and any necessary corrections will be included in subsequent editions. We appreciate any suggested improvements. We reserve the right to make technical improvements without notice.

Registered Trademarks

ROXTM, Rugged Operating System On Linux[™], CrossBow[™] and ELAN[™] are trademarks of Siemens Canada Ltd. ROS® is a registered trademark of Siemens Canada Ltd.

Other designations in this manual might be trademarks whose use by third parties for their own purposes would infringe the rights of the owner.

Security Information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens ' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit http://www.siemens.com/industrialsecurity.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit http:// support.automation.siemens.com.

Warranty

Siemens warrants this product for a period of five (5) years from the date of purchase, conditional upon the return to factory for maintenance during the warranty term. This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. The warranties set forth in this article are exclusive and are in lieu of all other warranties, performance guarantees and conditions whether written or oral, statutory, express or implied (including all warranties and conditions of merchantability and fitness for a particular purpose, and all warranties and conditions arising from course of dealing or usage or trade). Correction of nonconformities in the manner and for the period of time provided above shall constitute the Seller's sole liability and the Customer's exclusive remedy for defective or nonconforming goods or services whether claims of the Customer are based in contract (including fundamental breach), in tort (including negligence and strict liability) or otherwise.

For warranty details, visit www.siemens.com/ruggedcom or contact a Siemens customer service representative.

Contacting Siemens

Address

Siemens Canada Ltd. Industry Sector 300 Applewood Crescent Concord, Ontario Canada, L4K 5C7 Telephone Toll-free: 1 888 264 0006 Tel: +1 905 856 5288 Fax: +1 905 856 1995 E-mail ruggedcom.info.i-ia@siemens.com Web www.siemens.com/ruggedcom

Table of Contents

Prefac	e	v		
Alertsv				
Rela	Related Documentsv			
Acc	essing Documentation	. v		
Trai	ning	vi		
Cus	stomer Support	vi		
Chaptor 1				
Introdu	uction	. 1		
1.1	Feature Highlights	. 1		
1.2	Ports, Controls and Indicator LEDs	. 3		
Chapter 2	ng the Device	5		
113talii 2.4	Mounting the Device	5		
2.1	2.1.1 Mounting the Device to a Rack	. ວ 		
	2.1.1 Mounting the Device on a DIN Pail	. 0		
	2.1.2 Mounting the Device to a Panel	. /		
22		. <i>'</i> 		
2.2	2.2.1 Connecting AC Power	. 0 9		
	2.2.2 Connecting DC Power	10		
	2.2.3 Wiring Examples	12		
2.3	Connecting the Failsafe Alarm Relay	14		
2.4	Grounding the Device	15		
2.5	Cabling Recommendations	15		
2.6	Connecting to the Device	16		
Chapter 2				
Comm	unication Ports	17		
31	Copper Ethernet Ports	18		
32	Fiber Ontic Ethernet Ports	19		
3.3	WAN Ports	19		
3.4	DSL Ports	20		
3.5	DDS Ports	20		
3.6	Modem Port	21		

3.7	Serial Ports	21
3.8	Precision Time Protocol (PTP) Ports	22
	3.8.1 IRIG-B Outputs	23
	3.8.2 Pulse-Per-Second (PPS) Output	24
	3.8.3 GPS Antenna Installation Recommendations	24
	3.8.3.1 GPS Antenna	25
	3.8.3.2 Antenna Cabling	25
	3.8.3.3 Lightning Considerations	26
	3.8.3.4 Line Amplification and Filtering	26
3.9	RS232 External Modem Ports	26
3.10	Cellular Modems	27
	3.10.1 EVDO Cellular Modem	27
	3.10.2 HSPA (GSM) Cellular Modem	28
	3.10.3 GSM/EDGE Internal Cellular Modem	29
3.11	Connecting Multiple RS485 Devices	30
Chapter 4	cal Specifications	22
		33
4.1	Power Supply Specifications	33
4.2	PoE Power Supply Specifications	34
4.3	Failsafe Relay Specifications	34
4.4	Copper Ethernet Port Specifications	34
4.5	Fiber Ethernet Port Specifications	34
4.6	Serial Port Specifications	35
4.7	IRIG-B Output Specifications	35
4.8	Operating Environment	36
4.9	Mechanical Specifications	36
Chanter 5		
Dimen	sion Drawings	37
_		-
Chapter 6		
Certific	cation	41
6.1	Agency Approvals	41
6.2	FCC Compliance	41
6.3	Industry Canada Compliance	41
6.4	EMI and Environmental Type Tests	42
6.5	Cellular Modem Certifications	44

Preface

This guide describes the RUGGEDCOM RX1100P. It describes the major features of the device, installation, commissioning and important technical specifications.

It is intended for use by network technical support personnel who are responsible for the installation, commissioning and maintenance of the device. It is also recommended for use by network and system planners, system programmers, and line technicians.

Alerts

The following types of alerts are used when necessary to highlight important information.



DANGER!

DANGER alerts describe imminently hazardous situations that, if not avoided, will result in death or serious injury.



WARNING!

WARNING alerts describe hazardous situations that, if not avoided, may result in serious injury and/or equipment damage.



CAUTION!

CAUTION alerts describe hazardous situations that, if not avoided, may result in equipment damage.



IMPORTANT!

IMPORTANT alerts provide important information that should be known before performing a procedure or step, or using a feature.



NOTE

NOTE alerts provide additional information, such as facts, tips and details.

Related Documents

Other documents that may be of interest include:

• ROX User Guide for the RX1100P

Accessing Documentation

The latest Hardware Installation Guides and Software User Guides for most RUGGEDCOM products are available online at www.siemens.com/ruggedcom.

For any questions about the documentation or for assistance finding a specific document, contact a Siemens sales representative.

Training

Siemens offers a wide range of educational services ranging from in-house training of standard courses on networking, Ethernet switches and routers, to on-site customized courses tailored to the customer's needs, experience and application.

Siemens' Educational Services team thrives on providing our customers with the essential practical skills to make sure users have the right knowledge and expertise to understand the various technologies associated with critical communications network infrastructure technologies.

Siemens' unique mix of IT/Telecommunications expertise combined with domain knowledge in the utility, transportation and industrial markets, allows Siemens to provide training specific to the customer's application.

For more information about training services and course availability, visit www.siemens.com/ruggedcom or contact a Siemens sales representative.

Customer Support

Customer support is available 24 hours, 7 days a week for all Siemens customers. For technical support or general information, contact Siemens Customer Support through any of the following methods:

Online

Visit http://www.siemens.com/automation/support-request to submit a Support Request (SR) or check on the status of an existing SR.

Telephone

Call a local hotline center to submit a Support Request (SR). To locate a local hotline center, visit http://www.automation.siemens.com/mcms/aspa-db/en/automation-technology/Pages/default.aspx.

Mobile App

Install the Industry Online Support app by Siemens AG on any Android, Apple iOS or Windows mobile device and be able to:

- Access Siemens' extensive library of support documentation, including FAQs, manuals, and much more
- Submit SRs or check on the status of an existing SR
- Find and contact a local contact person
- · Ask questions or share knowledge with fellow Siemens customers and the support community
- And much more...

Introduction

The RX1100P is an industrially hardened, Power over Ethernet (PoE) enabled, cyber security appliance with integrated router, firewall and VPN functionality. The device may be equipped with up to four 10/100Base-TX 802.3af (PoE) copmliant Ethernet ports.

The RX1100P can be used to establish an electronic security perimeter around critical cyber assets found in control and automation systems, in order to prevent the disruption of operations by accidental or malicious acts. Ideally suited for electric power utilities, the industrial plant floor, and traffic control systems, the RX1100P is designed to protect and secure SCADA system networks connected to the Internet, or within a company's Wide Area Network (WAN) or Local Area Network (LAN).

The RX1100P includes security functions such as full IPSec Virtual Private Networking (VPN), firewall capabilities with the capacity to securely connect hundreds of remote sites across a Wide Area Network, and Intrusion Detection Services for performing real-time network traffic analysis and packet logging on IP networks.

The modular architecture allows the customization of the number and type of Ethernet and WAN ports. Integrated modem and GPS time synchronization options are also available.

The RX1100P is hardened to the RuggedRated[™] specification which provides a high level of immunity to electromagnetic interference (EMI) and heavy electrical surges typical of the harsh environments found in many industrial applications. An operating temperature range of -40 to 85 °C (-40 to 185 °F) allows the RX1100P to be placed in almost any location.

The following sections provide more information about the RX1100P:

- Section 1.1, "Feature Highlights"
- · Section 1.2, "Ports, Controls and Indicator LEDs"

Feature Highlights

Power over Ethernet (PoE)

- Two or four 10/100Base-Tx 802.3af compliant ports
- Data and power over a single Ethernet cable
- Powered from the internal 48 VDC source
- · No mid-span patch panel required
- · Fully compatible with 802.3af powered devices
- · Auto-sensing ports that provide power only to PoE end devices
- Power to port is turned off if cables are removed
- Optional 2-Port Fast Ethernet Module

Security Appliance Functions

- Integrated Router/Firewall/VPN
- Stateful Firewall with NAT
- Full IPSec Virtual Private Networking

- VPN with 3DES, DES and AES support
- Intrusion Detection Service (IDS)
- RADIUS centralized password management

Rated for Reliability in Harsh Environments

- Immunity to EMI and high voltage electrical transients
 - Meets IEEE 1613 (electric utility substations)
 - Exceeds IEC 61850-3 (electric utility substations)
 - Exceeds IEEE 61800-3 (variable speed drive systems)
 - Exceeds IEC 61000-6-2 (generic industrial environment)
 - Exceeds NEMA TS-2 (traffic control equipment)
- -40 to 85 °C (-40 to 185 °F) operating temperature (no fans)
- · Failsafe output relay: for crtical failure or error alarming
- 18 AWG galvanized steel enclosure and 48 cm (19 in) rack-mount adapter

Universal Power Supply Options

- · Fully integrated power supplies
- Input voltage range of 9-59 VDC, 88-300 VDC or 85-264 VAC for worldwide operability
- · Power over Ethernet (PoE) power supply: 48 VDC
- CSA/UL 60950-1 safety approved to 85 °C (185 °F)

Physical Ports

- Ethernet Options (up to 4 ports): 10/100Base-TX, 100Base-FX
- Cellular Modem
- WAN Port Options (up to 8 ports):
 - T1/E1 (channelized/unchannelized) supports 2 Mbps G.703 with 120 Ω balanced connections
 - PPPoE/Bridged Ethernet via ADSL
 - T3 DS3
 - 56 Kbps DDS
- Serial Ports (up to 8 ports):
 - Fully compliant EIA/TIA RS485, RS422, RS232 software selectable serial ports with RJ45 connectors
 - Raw socket mode support allows conversion of any serial protocol
- Embedded Modem Port
- Precision Time Protocol (PTP): Accurate time synchronization using NTP, IRIG-B and/or IEEE1588

Protocols

- WAN
 - Frame Relay RFC 1490 or RFC 1294
 - PPP RFC 1661, 1332, 1321, 1334, PAP, CHAP Authentication
 - PPPoE over DSL
 - GOOSE messaging support

- IP
 - Routing: VRRP, OSPF, RIP, BGP
 - DHCP Agent (Option 82 capable)
 - Traffic prioritization, NTP Server, IP Multicast Routing

Section 1.2 Ports, Controls and Indicator LEDs

The RX1100P features various ports, controls and indicator LEDs on the front panel for configuring and troubleshooting the device.



Port Status Indicator LEDs	 These LEDs indicate the state of each port. Green (Solid) = Link detected Green (Blinking) = Link activity Off = No link detected
Display Mode Indicator LEDs	These LEDs indicate the current display mode for the port status indicator LEDs (i.e. PPP-DATA, PPP-LINK or GPS LOCK).
Mode button	The Mode button sets the display mode for the port status indicator LEDs (i.e. PPP-DATA, PPP-LINK or GPS LOCK). It can also be used to reset the device if held for 5 seconds.
Alarm Indicator LED	The alarm indicator LED illuminates when an alarm condition exists.
Power Module Indicator LEDs	 These LEDs indicate the status of the power modules. Green = The power supply is supplying power Red = Power supply failure Off = No power supply is installed
RS232 Serial Console Port	This port is for interfacing directly with the device and accessing initial management functions.

2 Installing the Device

The following sections describe how to install the device, including mounting the device, installing/removing modules, connecting power, and connecting the device to the network.



WARNING!

Radiation hazard – risk of serious personal injury. This product contains a laser system and is classified as a CLASS 1 LASER PRODUCT. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



DANGER!

Electrocution hazard – risk of serious personal injury and/or damage to equipment. Before performing any maintenance tasks, make sure all power to the device has been disconnected and wait approximately two minutes for any remaining energy to dissipate.



IMPORTANT!

This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void.

Changes or modifications not expressly approved by Siemens Canada Ltd. could invalidate specifications, test results, and agency approvals, and void the user's authority to operate the equipment.



IMPORTANT!

This product should be installed in a restricted access location where access can only be gained by authorized personnel who have been informed of the restrictions and any precautions that must be taken. Access must only be possible through the use of a tool, lock and key, or other means of security, and controlled by the authority responsible for the location.

- Section 2.1, "Mounting the Device"
- Section 2.2, "Connecting Power"
- Section 2.3, "Connecting the Failsafe Alarm Relay"
- Section 2.4, "Grounding the Device"
- Section 2.5, "Cabling Recommendations"
- · Section 2.6, "Connecting to the Device"

Section 2.1 Mounting the Device

The RX1100P is designed for maximum mounting and display flexibility. It can be equipped with connectors that allow it to be installed in a 48 cm (19 in) rack, 35 mm (1.4 in) DIN rail, or directly on a panel.

ΝΟΤΕ

For detailed dimensions of the device with either rack, DIN rail or panel hardware installed, refer to Chapter 5, Dimension Drawings.

The following sections describe the various methods of mounting the device:

- Section 2.1.1, "Mounting the Device to a Rack"
- · Section 2.1.2, "Mounting the Device on a DIN Rail"
- Section 2.1.3, "Mounting the Device to a Panel"

Section 2.1.1 Mounting the Device to a Rack

For rack mount installations, the RX1100P can be equipped with rack mount adapters pre-installed at the front or rear of the chassis. Additional adapters are provided to further secure the device in high-vibration or seismically active locations.

To secure the device to a standard 48 cm (19 in) rack, do the following:

- 1. Make sure the rack mount adapters are installed on the correct side of the chassis.
 - · To make the modules and ports accessible, install the rack mount adapters at the rear of the chassis
 - To make the management ports and LEDs accessible, install the rack mount adapters at the front of the chassis

NOTE

The chassis features multiple mounting holes, allowing the rack mount adapters to be installed up to 25 mm (1 in) from the face of the device.



1. Rear 2. Front 3. Rack Mount Adaptor

- 2. If required, install adapters on the opposite side of the device to protect from vibrations.
- 3. Insert the device into the rack.



Since heat within the device is channelled to the enclosure, it is recommended that 1 rack-unit of space, or 44 mm (1.75 in), be kept empty above the device. This allows a small amount of convectional airflow.

Forced airflow is not required. However, any increase in airflow will result in a reduction of ambient temperature and improve the long-term reliability of all equipment mounted in the rack space.

4. Secure the adapters to the rack using the supplied hardware.

Section 2.1.2 Mounting the Device on a DIN Rail

For DIN rail installations, the RX1100P can be equipped with panel/DIN rail adapters pre-installed on each side of the chassis. The adapters allow the device to be slid onto a standard 35 mm (1.4 in) DIN rail.

To mount the device to a DIN rail, do the following:

1. Align the adapters with the DIN rails and slide the device into place.



2. Install one of the supplied screws on either side of the device to secure the adapters to the DIN rails.

Section 2.1.3 Mounting the Device to a Panel

For panel installations, the RX1100P can be equipped with panel/DIN rail adapters pre-installed on each side of the chassis. The adapters allow the device to be attached to a panel using screws.

To mount the device to a panel, do the following:

1. Place the device against the panel and align the adapters with the mounting holes.



2. Install the supplied screws to secure the adapters to the panel.

Section 2.2 Connecting Power

The RX1100P supports single or dual redundant AC and/or DC power supplies. The use of two power modules is recommended to provide redundancy and load balancing.

The RX1100P supports a single AC or DC power supply, and a separate 48 VDC power supply for PoE ports.

The RX1100P can be equipped with either a screw-type or pluggable terminal block, which provides power to the AC/DC power supply and PoE ports. The screw-type terminal block is installed using Phillips screws and compression plates, allowing either bare wire connections or crimped terminal lugs. Use #6 size ring lugs for secure, reliable connections under severe shock or vibration.

ΝΟΤΕ

- For 100-240 VAC rated equipment, an appropriately rated AC circuit breaker must be installed.
- For 88-300 VDC rated equipment, an appropriately rated DC circuit breaker must be installed.
- Use only #16 gage copper wiring when connecting terminal blocks.
- A circuit breaker is not required for 12, 24 or 48 VDC rated power supplies.
- It is recommended to provide a separate circuit breaker for each power supply module.

Equipment must be installed according to applicable local wiring codes and standards.

The following sections describe how to connect power to the device:

- Section 2.2.1, "Connecting AC Power"
- Section 2.2.2, "Connecting DC Power"
- Section 2.2.3, "Wiring Examples"

Section 2.2.1 Connecting AC Power

To connect a high AC power supply to the device, do the following:

\triangle

CAUTION!

Electrical hazard – risk of damage to equipment. Do not connect AC power cables to terminals for DC power. Damage to the power supply may occur.



CAUTION!

Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the metal jumper. This metal jumper connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.



NOTE

The terminal block is divided into separate terminals for each internal power supply. Make sure to connect the external power supply to the appropriate terminals.

- 1. Remove the terminal block cover.
- 2. If a screw-type terminal block is installed, remove the screws from the appropriate terminals. Use these screws along with #6 ring lugs to secure the wires to the terminal block.
- Connect the positive wire from the power source to the positive/live (+/L) terminal on the terminal block. For more information, refer to Section 2.2.3, "Wiring Examples".



1. Screw-Type Terminal Block 2. Pluggable Terminal Block 3. Jumper 4. Positive/Live (+/L) Terminal 5. Negative/Neutral (-/N) Terminal 6. Surge Ground Terminal 7. Chassis Ground Terminal

- 4. Connect the negative wire from the power source to the negative/neutral (-/N) terminal on the terminal block. For more information, refer to Section 2.2.3, "Wiring Examples".
- 5. Install the supplied metal jumper between terminals 2, 4 and 6 to connect the surge ground terminals to the chassis ground terminal. The surge ground terminals are used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
- 6. Connect the ground terminal on the power source to the chassis ground terminal on the device. For more information, refer to Section 2.4, "Grounding the Device"



DANGER!

Electrocution hazard – risk of death, serious personal injury and/or damage to the device. Make sure the supplied terminal block cover is always installed before the device is powered.

7. Install the terminal block cover.

Section 2.2.2 Connecting DC Power

To connect a high or low DC power supply to the device, do the following:



CAUTION!

Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the metal jumper. This metal jumper connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.

NOTE

The terminal block is divided into separate terminals for each internal power supply. Make sure to connect the external power supply to the appropriate terminals.

NOTE

The screw-type terminal block is installed using Philips screws and compression plates, allowing either bare wire connections or crimped terminal lugs. Use #6 size ring lugs for secure, reliable screws, which must be removed to make connections.

- 1. Remove the terminal block cover.
- 2. If a screw-type terminal block is installed, remove the screws from the appropriate terminals. Use these screws along with #6 ring lugs to secure the wires to the terminal block.
- 3. Connect the positive wire from the power source to the positive/live (+/L) on the terminal block. For more information, refer to Section 2.2.3, "Wiring Examples".



Figure 6: Terminal Block Wiring

Screw-Type Terminal Block
 Pluggable Terminal Block
 Jumper
 Positive/Live (+/L) Terminal
 Negative/Neutral (-/N)
 Terminal
 Surge Ground Terminal

- 4. Connect the negative wire from the power source to the negative/neutral (-/N) on the terminal block. For more information, refer to Section 2.2.3, "Wiring Examples".
- 5. Install the supplied metal jumper between terminals 2, 4 and 6 to connect the surge ground terminals to the chassis ground terminal. The surge ground terminals are used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
- 6. Connect the ground terminal on the power source to the chassis ground terminal on the device. For more information, refer to Section 2.4, "Grounding the Device"



DANGER!

Electrocution hazard – risk of death, serious personal injury and/or damage to the device. Make sure the supplied terminal block cover is always installed before the device is powered.

7. Install the terminal block cover.

Section 2.2.3 Wiring Examples

The following illustrate how to connect power to single and dual power supplies.









Section 2.3 Connecting the Failsafe Alarm Relay

The failsafe relay can be configured to latch based on alarm conditions. The NO (Normally Open) contact is closed when the unit is powered and there are no active alarms. If the device is not powered or if an active alarm is configured, the relay opens the NO contact and closes the NC (Normally Closed) contact.



NOTE Control of the failsafe relay output is configurable through ROX. One common application for this relay is to signal an alarm if a power failure occurs. For more information, refer to the ROX User Guide for the RX1100P.

The following shows the proper relay connections.



Section 2.4 Grounding the Device

The RX1100P chassis ground terminal uses a #6-32 screw. It is recommended to terminate the ground connection with a #6 ring lug and torque it to 1.7 N·m (15 lbf·in).



Section 2.5 Cabling Recommendations

Siemens does not recommend the use of copper cabling of any length for critical, real-time substation automation applications. All copper Ethernet ports on RUGGEDCOM products include transient suppression circuitry to protect against damage from electrical transients and conform with IEC 61850-3 and IEEE 1613 Class 1 standards. This means that during a transient electrical event, communications errors or interruptions may occur, but recovery is automatic.

Siemens also does not recommend using copper Ethernet ports to interface with devices in the field across distances that could produce high levels of ground potential rise (i.e. greater than 2500 V), during line-to-ground fault conditions.

Section 2.6 Connecting to the Device

The following describes the various methods for accessing the ROX console and Web interfaces on the device. For more detailed instructions, refer to the *ROX User Guide* for the RX1100P.

RS232 Console Port

Connect a PC or terminal directly to the RS232 console port to access the boot-time control and ROX interfaces. The console port provides access to ROX's console and Web interfaces.



IMPORTANT!

The console port is intended to be used only as a temporary connection during initial configuration or troubleshooting.

Connection to the console port is made using an RJ45-to-DB9 console cable. The following is the pin-out for the console port:



Figure 14: RJ45 Console Port Pin Configuration

Pin			
RJ45 Male	DB9 Female	Name	Description
1	6	DSR ^a	Data Set Ready
2	1	Reserv	ed (Do Not Connect)
3	4	DTR ^a	Data Terminal Ready
4	5	GND	Signal Ground
5	2	RxD	Receive Data (to DTE)
6	3	TxD	Transmit Data (from DTE)
7	8	CTS ^b	Clear to Send
8	7	RTS ^b	Read to Send
1	9	RI ^c	Ring Indicator

^a The DSR, DCD and DTR pins are connected together internally.

^b The CTS and RTS pins are connected together internally.

^c RI is not connected.

Communication Ports

Connect any of the available Ethernet ports on the device to a management switch and access the ROX console and Web interfaces via the device's IP address. For more information about available ports, refer to Chapter 3, *Communication Ports*.

3 Communication Ports

The RX1100P can be equipped with various types of communication ports to enhance its abilities and performance. To determine which ports are equipped on the device, refer to the factory data file available through ROX. For more information on how to access the factory data file, refer to the *ROX User Guide* for the RX1100P.

Each communication port type has a specific place in the RX1100P chassis.



Slot(s)	Communication Port
1	GSM/EDGE cellular modem
1, 2	V.90 modem
	RS232 external modem
3	Copper 10/100Base-Tx Ethernet with PoE ports
4	Fiber 100Base-FX multi-mode or single-mode Ethernet with ST, SC, LC or MTRJ ports
5, 6	Single T1/E1 Channelized/Unchannelized
	Dual T1/E1 Channelized/Unchannelized
	Quad T1/E1 Channelized/Unchannelized
	Clear Channel T3 DS3 card
	DSL card
	56 kBbps DDS DSU/CSU card
	Precision Time Protocol (PTP) card
	Serial RS232/RS422/RS485 card with RJ45 ports
	Synchronous dual serial card with DB25 ports
	GSM/EDGE/HSPA cellular modem
	EVDO Rev.A Verizon (US) wireless cellular modem

The following sections describe the available ports in more detail:

- Section 3.1, "Copper Ethernet Ports"
- Section 3.2, "Fiber Optic Ethernet Ports"
- Section 3.3, "WAN Ports"

- Section 3.4, "DSL Ports"
- Section 3.5, "DDS Ports"
- Section 3.6, "Modem Port"
- Section 3.7, "Serial Ports"
- Section 3.8, "Precision Time Protocol (PTP) Ports"
- Section 3.9, "RS232 External Modem Ports"
- Section 3.10, "Cellular Modems"
- Section 3.11, "Connecting Multiple RS485 Devices"

Section 3.1

Copper Ethernet Ports

The RX1100P supports several 10/100Base-TX Ethernet ports that allow connection to standard Category 5 (CAT-5) unshielded twisted-pair (UTP) cables with RJ45 male connectors. The RJ45 connectors are directly connected to the chassis ground on the device and can accept CAT-5 shielded twisted-pair (STP) cables.

The RX1100P also comes standard with two 10/100Base-TX IEEE 802.3af (PoE)-compliant Ethernet ports in Slot 3 (2 ports), and can accommodate two more in Slot 4. In addition to the 10/100BaseTX port features, the PoE ports provide nominal 48 VDC at 350 mA (max 15.4W/port), with auto-sensing and automatic power off when cables are removed.

Each port features a Speed and Link LED that indicates the state of the port.

LED	State	Description
Speed	Yellow	The port is operating at 100 Mbps
	Off	The port is operating at 10 Mbps
Link	Yellow (Solid)	Link established
	Yellow (Blinking)	Link activity
	Off	No link detected

The following is the pin-out for the RJ45 male connector:



Figure 16: RJ45 Ethernet Port Pin Configuration

Pin	Name	Description
1	RX+	Receive Data+
2	RX-	Receive Data-
3	TX+	Transmit Data+
4	Reserved (Do Not Connect)	
5	Reserved (Do Not Connect)	
6	TX-	Transmit Data-
7	Reserved (Do Not Connect)	
8	Reserved (Do Not Connect)	

For specifications on the available copper Ethernet ports, refer to Section 4.4, "Copper Ethernet Port Specifications".

Section 3.2 Fiber Optic Ethernet Ports

Fiber optic Ethernet ports are available with either MTRJ (Mechanical Transfer Registered Jack), LC (Lucent Connector), SC (Standard or Subscriber Connector) or ST (Straight Tip) connectors. Make sure the Transmit (Tx) and Receive (Rx) connections of each port are properly connected and matched to establish a proper link.



For specifications on the available fiber optic Ethernet ports, refer to Section 4.5, "Fiber Ethernet Port Specifications".

Section 3.3 WAN Ports

The RX1100P can optionally be equipped with T1/E1 WAN ports, which communicate on standard telephony communication lines.

T1/E1 WAN ports are equipped with standard RJ45 receptacles. The following is the pin-out for the T1/E1 ports:



Pin	Description
1	RRING
2	RTIP
3	Reserved (Do Not Connect)
4	TRING
5	TTIP

Pin	Description
6	Reserved (Do Not Connect)
7	Reserved (Do Not Connect)
8	Reserved (Do Not Connect)

Section 3.4 **DSL Ports**

The RX1100P can optionally be equipped with a dual-port DSL (Digital Subscriber Line) card, which can communicate over standard telephone communication lines. The DSL card supports the following modulation standards:

- G.992.1 (G.DMT)
- G.992.2 (G.Lite)
- G.992 Annex A (ADSL over POTS)

Each DSL card is equipped with standard RJ11 telephone ports. The following is the pin-out description for the RJ11 ports:



Pin	Description
1	Reserved (Do Not Connect)
2	Reserved (Do Not Connect)
3	Ring
4	Tip
5	Reserved (Do Not Connect)
6	Reserved (Do Not Connect)

Section 3.5

DDS Ports

The RX1100P can optionally be equipped with a 56/64 kbps DDS (Data Distribution Service) card that uses standard RJ45 receptacles.

The following is the pin-out for the DDS ports:



Pin	Name	Description
5	Reserved (Do Not Connect)	
6	Reserved (Do Not Connect)	
7	Т	Receive data from network (Tip)
8	R	Receive data from network (Ring)

Section 3.6 Modem Port

The RX1100P can optionally be equipped with a V.90 Modem connection for PPP (Point-to-Point Protocol) connections. For information about how to configure and operate the modem, refer to the *ROX User Guide* for the RX1100P.



WARNING!

Fire hazard – risk of serious personal injury and/or damage to equipment. To reduce the risk of fire, use only #26 AWG or larger telecommunication line cord.

The modem card is equipped with a standard RJ11 telephone port. The following is the pin-out description for the RJ11 port:



Pin	Description
1	Reserved (Do Not Connect)
2	Reserved (Do Not Connect)
3	Ring
4	Tip
5	Reserved (Do Not Connect)
6	Reserved (Do Not Connect)

NOTE

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

Section 3.7 Serial Ports

The RX1100P supports serial cards with RJ45 serial ports. Serial RJ45 ports can be run in RS232, RS485 or RS422 mode.

On power-up, all serial RJ45 ports default to RS485 mode. Each port can be individually set to RS232, RS485 or RS422 mode through ROX. For more information, refer to the ROX User Guide for the RX1100P.

i

NOTE

For information about how to connect devices configured to run in RS485 mode, refer to Section 3.11, "Connecting Multiple RS485 Devices".

All serial ports feature an LED that indicates the current state of the port.

State	Description
Green	Link activity detected
Off	No link detected

For specifications on serial ports, refer to Section 4.6, "Serial Port Specifications".

The following is the pin-out description for RJ45 serial ports:



Pin	RS232 Mode	RS485 Mode	RS422 Mode	
1 ^a	DSR/RI		RX-	
2 ^a	DCD			
3	DTR			
4	Common (Isolated) Ground			
5	RX		RX+	
6	ТΧ	TX/RX+	TX+	
7	CTS ^{ab}			
8	RTS ^b	TX/RX-	TX-	
Shield	Chassis Ground			

^a Connected internally.

^b In RS232 mode, this pin enters a high impedance state. A DTE that asserts RTS will see CTS asserted, although the device will not perform hardware flow control.

Precision Time Protocol (PTP) Ports

The optional Precision Time Protocol (PTP) card for the RX1100P provides accurate time synchronization across local and wide area networks. The PTP card is capable of using a variety of time synchronization methods including Network Time Protocol (NTP), IRIG-B, and IEEE 1588, making it a flexible product for new and existing installations.



Figure 26: PTP Card

1. IEEE 1588 Ethernet Interface 2. GPS Antenna Input 3. IRIG-B AM Output 4. IRIG-B PWM (TTL) or PPS Output 1 5. IRIG-B PWM (TTL) or PPS Output 2

NTP is the standard for synchronizing the clocks of computer systems throughout the Internet and is suitable for systems that require accuracies in the order of 1 ms. IRIG-B time synchronization relies on the Global Positioning System (GPS) as the source of accurate time and requires an external GPS antenna input to provide accurate time signals on the order of 100 μ s. IEEE 1588 is designed to fill a niche not well served by either of the two dominant protocols, NTP and IRIG-B. IEEE 1588 is designed for local systems requiring accuracies on the order of 100 nanoseconds. IEEE 1588 is also designed for applications that cannot bear the cost of a GPS receiver at each node or for which GPS signals are inaccessible.

The PTP card is an ideal product for use in existing installations already well served by NTP and/or GPS. It also provides a migration path for the use of the new IEEE 1588 standard. As more end devices enter the market with IEEE 1588 compatibility, this card provides an easy transition to this new time synchronization standard.

The following sections describe the PTP card in more detail:

- Section 3.8.1, "IRIG-B Outputs"
- Section 3.8.2, "Pulse-Per-Second (PPS) Output"
- Section 3.8.3, "GPS Antenna Installation Recommendations"

Section 3.8.1 IRIG-B Outputs

The PTP Card supports both IRIG-B outputs in both Amplitude Modulated (AM) and Pulse Width Modulation (PWM) formats. Specifically, for the AM output, IRIG-B122 and IRIG-B123 are supported. For the PWM output, IRIG-B002 and IRIG-B003 are supported. Enabling of the AM and PWM outputs is done through software.

The number of IRIG-B devices that can be connected to the AM or PWM source is dependent on the cabling type and length as well as the input impedances of the devices. Figure 16 shows a simplified circuit diagram of the interface between the IRIG-B source and connected devices.



The maximum number of devices (N) that can be connected to the source is determined by checking if the source current (IS) required to drive the connected devices is less than the maximum drive current the source can provide, and verifying that the load voltage (VL) the connected devices see is greater than the minimum required voltage.

For specifications for the IRIG-B outputs, refer to Section 4.7, "IRIG-B Output Specifications".

Section 3.8.2 Pulse-Per-Second (PPS) Output

The PTP card supports one Pulse-Per-Second (PPS) output. When enabled through ROX, the card outputs a 5 V pulse every second.

Section 3.8.3 GPS Antenna Installation Recommendations

The signals received from the GPS satellite network are at a frequency of 1575.42 MHz with a minimum power of -162 dBW. The GPS antenna must have a clear view of the sky in order to receive the low power signals and track the maximum number of satellites. Rooftops or other structures clear of obstructions and with a clear view of the horizon are ideal.

Elements of a typical GPS antenna system include:

- · Active GPS Antenna (required)
- · Coaxial cable to connect the elements (required)
- · Lightning arrestor (optional)
- · Line Amplifier or Filter (optional)

To establish proper GPS signal reception, the overall system of antenna, cabling, lightning arrestor, line amplifier and filters requires a relative gain which should be greater than 5 dBi but less than 18 dBi (to avoid signal saturation at the receiver input).

The following sections describe each component in the GPS antenna system in more detail:

- Section 3.8.3.1, "GPS Antenna"
- Section 3.8.3.2, "Antenna Cabling"
- Section 3.8.3.3, "Lightning Considerations"
- Section 3.8.3.4, "Line Amplification and Filtering"

Section 3.8.3.1 GPS Antenna

There are two major types of GPS antenna: passive and active. A passive antenna requires no power and is an option when signal strength is not a concern. An active antenna has a built in Low Noise Amplifier (LNA) to increase the strength of the signal, and to compensate for the signal loss in a long cable connection. Active antennas are used when the antenna input is connected to the receiver through a coaxial cable (usually longer than 3 m) or any high loss transmission path.



NOTE

• The PTP card's GPS input provides 5 VDC at up to 10 mA to power the antenna.

• Best results can be achieved with a total gain of 16 dB (includes antenna gain, cable loss, lightning arrestor loss, line amplifier gain and filter loss) at the antenna input.

THE FIF CALL LEQUILES ALL ACLIVE ALLELINA WILL LE TOHOWING SPECIFICATION	The PTP	Card requires	an active an	tenna with th	ne followina	specifications
--	---------	---------------	--------------	---------------	--------------	----------------

Characteristic	Active Antenna		
Polarization	Right-Hand Circular Polarized		
Receive Frequency	1.57542 GHz ± 1.023 MHz		
Power Supply	5 VDC		
DC Current	< 10 mA at 3 VDC		
Antenna Gain	Select antenna gain based on system configuration		
Total Gain at PTP GPS Input (includes antenna gain, cable loss, lightning arrestor loss, line amplifier gain and filter loss)	Total Gain ≤ 18 dBi		
Axial Ratio	< 3 dB		
Output VSWR	< 2.5		

Section 3.8.3.2 Antenna Cabling

Cable Impedance: Siemens recommends low loss 50 Ω coaxial cabling.

Cable Delay: Using any length of coaxial cable will add some time delay to the GPS signal which degrades the accuracy of the calculated time and position. The time delay is dependent on the type of dielectric material in the cable and ranges from 1 to 2 ns/ft. Siemens provides a method to account for this delay through the web management interface by entering the time delay into the cable compensation box under PTP General Configuration. The table below gives some examples of the delay that can be expected based on the dielectric type.

Dielectric Type	Time Delay(ns/ft)	PropagationVelocity(% of c)
Solid Polyethylene (PE)	1.54	65.9
Foam Polyethylene (FE)	1.27	80.0
Foam Polystyrene (FS)	1.12	91.0
Air Space Polyethylene (ASP)	1.15-1.21	84-88
Solid Teflon (ST)	1.46	69.4
Air Space Teflon (AST)	1.13-1.20	85-90

Section 3.8.3.3 Lightning Considerations

Although it is not possible to protect the antenna from a direct lighting strike, the antenna and connected components can be protected from secondary affects through installation location and protection devices.

Install the antenna at least 15 meters away from and lower than any structures that attract lightning. GPS antenna damage is usually not the result of a direct lightning strike, but due to high currents induced by the effects of a lightning strike on a nearby structure. Siemens also recommends installing lightning arrestors in the antenna line to protect the receiver and connected devices. If a lightning arrestor is installed it is important to ensure that it has a low impedance path to ground.

Section 3.8.3.4 Line Amplification and Filtering

Although an active antenna has gain, depending on the length of the coaxial cable used it may not be enough in which case a line amplifier will be required as well.

Most active antennas include filters. However, if there is a high potential for electromagnetic interference, such as from the near field of a radio transmitter, though the antenna system, additional antenna line filtering may be necessary.

RS232 External Modem Ports

The optional RS232 external modem card provides all of the handshaking signals required to control an external modem via a female DB9 connector.

The following is the pin-out for DB9 ports operating in RS232 mode:

	Pin	Name	Description
(5) (1)	1	CD	Carrier Detect
	2	RxD	Receive data
Figure 28: Serial DB9 Port Pin Configuration	3	TxD	Transmit Data
	4	DTR	Data Terminal Ready
	5	GND	Common Ground
	6	DSR	Data Set Ready
	7	RTS	Request To Send
	8	CTS	Clear To Send
	9	RI (No Connection)	Ring Indicator

i

NOTE

Although a DB9 RS232 DTE (Data Terminal Equipment) connector is ordinarily male, the female connector has been used here for reasons of durability (i.e. there are no pins to bend). Use a commonly available male-to-male DB9 adapter (not a NULL-modem) to adapt this connection to a standard straight-through RS232 cable.

Section 3.10

Cellular Modems

The RX1100P supports the following cellular modem line modules for operation on GSM, EDGE, HSPA+, or CDMA networks:

NOTE

The cellular modems feature 50 Ω SMA antenna connectors on the front plate of each module.

The HSPA option is available for use on various GSM-based networks. This option supports GSM, GPRS, EDGE, UMTS and WCDMA/HSDPA/HSUPA. The Main antenna and Receive Diversity antenna connections are made to the 50 Ω SMA connectors.

The following sections describe the cellular modem modules in more detail:

- Section 3.10.1, "EVDO Cellular Modem"
- · Section 3.10.2, "HSPA (GSM) Cellular Modem"
- Section 3.10.3, "GSM/EDGE Internal Cellular Modem"

Section 3.10.1 EVDO Cellular Modem

The EVDO dual band card option is offered for use on Verizon's cellular network. The radio supports IS-95A, 1xRTT, 1xEVDO Rev0 and 1xEVDO RevA, and will automatically select the fastest mode available when a data call is made. Main antenna and Receive Diversity antenna connections are made to the 50 Ω SMA connectors located on the front faceplate.



The EVDO cellular modem has the following minimum requirements:

Frequency Range (MHz)		Vewp	RX Diversity	Maximum	
Banu	Тх	Rx	VSWK	Support	Gain (dBi)
Cell	824-849	869-894	<2:1	<2:1	4.95
PCS	1850-1910	1930-1990			3.55

Contact Verizon for information about account activation.

Section 3.10.2 HSPA (GSM) Cellular Modem

The HSPA card option is available for use on various GSM-based networks. The card supports GSM, GPRS, EDGE, UMTS and WCDMA/HSDPA/HSUPA. The Main and Receive Diversity antenna connections are made to the 50 Ω SMA connectors located on the front faceplate.



Installing a SIM Card

SIM card access is available on the front faceplate of the HSPA module. Follow these steps to install a SIM card:

- 1. Disconnect power from the device.
- 2. Remove the protective cover marked HSPA.
- 3. Insert the SIM card with the angled side first. An audible click will indicate the SIM card is in position.
- 4. Slide the latch over the SIM card to secure it in place.
- 5. Install the protective cover.
- 6. Connect power to the device.

Supported Frequency Bands



WARNING!

Electromagnet radiation hazard – risk of serious injury. Do not exceed the maximum antenna gain. Aside from causing cellular interference for other devices that use the same band, adverse health effects for individuals in the area may occur.

Dand		Frequen	RX Diversity	Maximum		
Band	Tx (MHz)	VSWR	Rx (MHz)	VSWR	Support	Gain (dBi)
Band I WCDMA 2100	1920-1980	<2.5:1	2110-2170	<3.5:1	Y	4
Band II WCDMA 1900	1850-1910	<2.5:1	1930-1990	<2.5:1	Y	4
Band V WCDMA 850	824-849	<2.5:1	869-894	<3.5:1	Y	5
Band VI WCDMA 800	830-840	<2.5:1	875-885	<3.5:1	Y	5
GSM 850	824-849	<2.5:1	869-894	<3.5:1		5
EGSM 900	880-915	<2.5:1	925-960	<3.5:1		5
GSM 1800	1710-1785	<2.5:1	1805-1880	<3.5:1		4
GSM 1900	1850-1910	<2.5:1	1930-1990	<2.5:1		4

Section 3.10.3 GSM/EDGE Internal Cellular Modem

The GSM/EDGE internal cellular modem option is available for use on various GSM-based networks. The card supports GSM and EDGE. The single antenna connection is made to the 50 Ω SMA connector located on the front faceplate.



Installing a SIM Card

The SIM card is accessed through the access panel on top of the RX1100P. To install a SIM card, follow these steps:

- 1. Disconnect power from the device.
- 2. Remove the access panel.

- 3. Insert the SIM card with the angled side first. An audible click will indicate the SIM card is in position.
- 4. Install the access panel.
- 5. Connect power to the device.

Supported Frequency Bands

WARNING!

Electromagnet radiation hazard – risk of serious injury. Do not exceed the maximum antenna gain. Aside from causing cellular interference for other devices that use the same band, adverse health effects for individuals in the area may occur.

Dand		Maximum			
Вапо	Tx (MHz)	VSWR	Rx (MHz)	VSWR	Gain (dBi)
GSM 850	824-849	<2.5:1	869-894	<3.5:1	5
EGSM 900	880-915	<2.5:1	925-960	<3.5:1	5
GSM 1800	1710-1785	<2.5:1	1805-1880	<3.5:1	4
GSM 1900	1850-1910	<2.5:1	1930-1990	<2.5:1	4

Section 3.11

Connecting Multiple RS485 Devices

Each RS485 port can communicate with multiple RS485 devices by wiring devices together in sequence over a single twisted pair with transmit and receive signals on the same two wires (half duplex). For reliable, continuous communication, adhere to the following guidelines:

- To minimize the effects of ambient electrical noise, use shielded cabling.
- The correct polarity must be observed throughout a single sequence or ring.
- The number of devices wired should not exceed 32, and total distance should be less than 1219 m (4000 ft) at 100 kbps.
- The Common terminals should be connected to the common wire inside the shield.
- The shield should be connected to earth ground at a single point to avoid loop currents.
- The twisted pair should be terminated at each end of the chain.

The following shows the recommended RS485 wiring.



4 Technical Specifications

The following sections provide important technical specifications related to the device and available modules:

- Section 4.1, "Power Supply Specifications"
- Section 4.2, "PoE Power Supply Specifications"
- Section 4.3, "Failsafe Relay Specifications"
- Section 4.4, "Copper Ethernet Port Specifications"
- Section 4.5, "Fiber Ethernet Port Specifications"
- Section 4.7, "IRIG-B Output Specifications"
- Section 4.8, "Operating Environment"
- Section 4.9, "Mechanical Specifications"

Power Supply Specifications

NOTE

For specifications on the PoE power supply, refer to Section 4.2, "PoE Power Supply Specifications".

Dower Sumply Type	Input Range		Internal Fuse		Maximum Power
Power Supply Type	Minimum Maximum Rating ^{ab}		isolation	Consumption ^c	
12 VDC			63 A/F)		
24 VDC		30 100	0.3 A(1)	1.5 kVDC	
48 VDC	36 VDC	59 VDC	3.15 A(T)		25 W
HI (125/250 VDC) ^d	88 VDC	300 VDC	2 (1)		
HI (110/230 VAC) ^d	85 VAC	264 VAC	2 A(1)	4 KVAC, 5.5 KVDC	

^a (F) denotes fast-acting fuse

^b (*T*) denotes time-delay fuse.

^c Power consumption varies based on configuration. 10/100Base-TX ports consume roughly 1 W less than fiber optic ports.

^d The HI power supply is the same power supply for both AC and DC.

PoE Power Supply Specifications

Power Supply Type	Input	Range	Internal Fuse Pating ^e	Maximum Power Consumption	
Power Suppry Type	Minimum	Maximum	internal ruse rating		
48 VDC	37 VDC	72 VDC	2 A(T)	68 W	

^e (T) denotes time-delay fuse.

Section 4.3 Failsafe Relay Specifications

Parameter	Value (Resistive Load)	
Max Switching Voltage	30 VAC, 80 VDC	
Rated Switching Current	0.3 A @ 30 VAC 1 A @ 30 VDC, 0.3 A @ 80 VDC	

Section 4.4

Copper Ethernet Port Specifications

The following details the specifications for copper Ethernet ports that can be ordered with the RX1100P.

Speed ^f	Connector	Duplex ^f	Cable Type ^g	Wiring Standard ^h	Maximum Distance	Isolation ⁱ	PoE Voltage	PoE Current
10/100Base-TX	RJ45	FDX/HDX	> CAT- 5	TIA/EIA T568A/B	100 m (328 ft)	1.5 kV	44-57 V	350 mA

^f Auto-negotiating.

^g Shielded or unshielded.

^h Auto-crossover and auto-polarity.

i RMS 1 minute.

Section 4.5 Fiber Ethernet Port Specifications

The following details the specifications for fiber Ethernet ports that can be ordered with the RX1100P.



NOTE

Order codes are contained within each product when assembled and configured at the factory. Refer to the ROX User Guide for the RX1100P for information on how to obtain the factory configuration data.



NOTE

• All optical power numbers are listed as dBm averages. To convert from average to peak add 3 dBm. To convert from peak to average, subtract 3 dBm.

• Maximum segment length is greatly dependent on factors such as fiber quality, and the number of patches and splices. Consult a Siemens sales associate when determining maximum segment distances.

Mode	Connector Type	Cable Type (µm)	Tx λ (typ.) (nm)	Tx min. (dBm)	Tx max. (dBm)	Rx Sensitivity (dBm)	Rx Saturation (dBm)	Distance (typ.) (km)	Power Budget (dB)
MM	ST	62.5/125	1300	-19	-14	-31	-31 -14	2	12
		50/125		-22.5					8.5
MM	SC	62.5/125	1300	-19	-14	-31	31 -14	2	12
		50/125		-22.5					8.5
MM	MTRJ	62.5/125	1300	-19	-14	-31	-14	2	12
SM	ST	9/125	1300	-15	-8	-32	-3	20	17
SM	SC	9/125	1300	-15	-8	-31	-7	20	16
SM	LC	9/125	1300	-15	-8	-34	-7	20	19
SM	SC	9/125	1300	-5	0	-34	-3	50	29
SM	LC	9/125	1300	-5	0	-35	3	50	30
SM	SC	9/125	1300	0	5	-37	0	90	37
SM	LC	9/125	1300	0	5	-37	0	90	37
MM	LC	50/125	1300	-22.5	-14	-31	-14	2	8.5

Section 4.6

Serial Port Specifications

Baud Rate	Connector	Isolation
300 to 230 kbps	RJ45	2.5 kV

Section 4.7 IRIG-B Output Specifications

Parameter	Typical Value		
Output Current (IS)	40 mA total between two output ports		
Output Voltage (VS)	5 Vр-р		
Output Impedance (RS)	25 Ω		

Section 4.8 **Operating Environment**

Parameter	Range	Comments
Ambient Operating Temperature	-40 to 85 °C (-40 to 185 °F)	Measured from a 30 cm (12 in) radius surrounding the center of the enclosure.
Ambient Relative Humidity	5% to 95%	Non-condensing
Ambient Storage Temperature	-40 to 85 °C (-40 to 185 °F)	

Section 4.9 Mechanical Specifications

Parameter	Value
Dimensions	Refer to Chapter 5, Dimension Drawings
Weight	10 lb (4.5 Kg)
Ingress Protection	IP40
Enclosure	18 AWG galvanized steel

5 Dimension Drawings

NOTE All dimensions are in millimeters, unless otherwise stated.







6 Certification

The RX1100P device has been thoroughly tested to guarantee its conformance with recognized standards and has received approval from recognized regulatory agencies.

- Section 6.1, "Agency Approvals"
- Section 6.2, "FCC Compliance"
- Section 6.3, "Industry Canada Compliance"
- Section 6.4, "EMI and Environmental Type Tests"
- Section 6.5, "Cellular Modem Certifications"

Section 6.1 Agency Approvals

Agency	Standards	Comments
CSA	CSA C22.2 No. 60950-1, UL 60950-1	Approved
CE	EN 60950-1, EN 61000-6-2, EN 55022, EN 60825-1, EN 50581	CE Compliance is claimed via Declaration of Self Conformity Route
FCC	FCC Part 15, Class A	Approved
FDA/CDRH	21 CFR Chapter I, Sub-chapter J	Approved

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference on his own expense.

Section 6.3 Industry Canada Compliance

CAN ICES-3 (A) / NMB-3 (A)

Section 6.4 EMI and Environmental Type Tests

The RX1100P has passed the following EMI and environmental tests.

IEC 61850-3 EMI Type Tests

NOTE

- In the case of an all fiber port configuration, this product meets all Class 2 requirements. Otherwise, all Class 1 requirements are met for copper ports.
- If the unit contains copper ports, the IEC 1613 conformance is Class 1, during which disturbance errors may occur but recovery is automatic.
- If the unit contains all fiber ports, the IEC 1613 conformance is Class 2, during which no disturbance errors will occur.

Test	Descr	iption	Test Levels	Severity Levels
IEC 61000-4-2	ESD	Enclosure Contact	+/- 8 kV	4
		Enclosure Air	+/- 15 kV	4
IEC 61000-4-3	Radiated RFI	Enclosure ports	20 V/m	Note ^a
IEC 61000-4-4	Burst (Fast Transient)	Signal ports	+/- 4 kV @ 2.5 kHz	Note ^a
		DC Power ports	+/- 4 kV	4
		AC Power ports	+/- 4 kV	4
		Earth ground ports ^b	+/- 4 kV	4
IEC 61000-4-5	Surge	Signal ports	+/- 4 kV line-to-earth, +/- 2 kV line-to-line	4
		DC Power ports	+/- 2 kV line-to-earth, +/- 1 kV line-to-line	3
		AC Power ports	+/- 4 kV line-to-earth, +/- 2 kV line-to-line	4
IEC 61000-4-6	Induced (Conducted) RFI	Signal ports	10 V	3
		D.C Power ports		
		AC Power ports	-	
		Earth ground ports	-	
IEC 61000-4-8	Magnetic Field	Enclosure ports	40 A/m continuous, 1000 A/m for 1 s	
IEC 61000-4-29	Voltage Dips & Interrupts	DC Power ports	30% for 0.1 s, 60% for 0.1 s, 100% for 0.05 s	
		AC Power ports	30% for 1 period, 60% for 50 periods	
IEC 61000-4-11			100% for 5 periods, 100% for 50 periods ²	

Test	Descri	ption	Test Levels	Severity Levels
IEC 61000-4-12	Damped Oscillatory	Signal ports	2.5 kV common, 1 kV differential mode @ 1 MHz	3
		DC Power ports	2.5kV common,1kV differential mode @ 1 MHz	3
		AC Power ports	2.5 kV common, 1 kV differential mode @ 1 MHz	3
IEC 61000-4-16	Mains Frequency Voltage	Signal ports	30 V Continuous, 300 V for 1 s	4
		DC Power ports	30 V Continuous, 300 V for 1 s	4
IEC 61000-4-17	Ripple on DC Power Supply	DC Power ports	10%	3
IEC 60255-5	Dielectric Strength	Signal ports	2 kVAC (Fail- Safe Relay output)	
		DC Power ports	1.5 kVDC	
		AC Power ports	2 kVAC	
	HV Impulse	Signal ports	5 kV (Fail-Safe Relay output)	
		DC Power ports	5 kV	
		AC Power ports	5 kV	

^a Siemens-specified severity levels

NOTE

^b Only applicable to functional earth connections separated from the safety earth connection.

IEEE 1613 (C37.90.x) EMI Immunity Type Tests



The RX1100P meets Class 2 requirements for an all-fiber configuration and Class 1 requirements for copper ports.

Test	Desci	Test Levels	
IEEE C37.90.3	ESD	Enclosure Contact	+/- 8 kV
		Enclosure Air	+/- 15 kV
C37.90.2	Radiated RFI	Enclosure ports	35 V/m
IEEE C37.90.1	Fast Transient Oscillatory	Signal ports	+/- 4 kV @ 2.5 kHz
		DC Power ports	+/- 4 kV
		AC Power ports	+/- 4 kV
		Earth ground ports	+/- 4 kV
		Signal ports	2.5 kV common mode @ 1 MHz
		DC Power ports	2.5 kV common and differential mode @ 1 MHz

Test	Desci	Test Levels	
		AC Power ports	2.5 kV common and differential mode @ 1 MHz
IEEE C37.90	HV Impulse	Signal ports	5 kV (Failsafe Relay)
		DC Power ports	5 kV
		AC Power ports	5 kV
IEEE C37.90	Dielectric Strength	Signal ports	2 kVAC (Failsafe Relay)
		DC Power ports	2 kVAC
		AC Power ports	2 kVAC

Environmental Type Tests

Test	Description		Test Levels
IEC 60068-2-1	Cold Temperature	Test Ad	-40 °C (40 °F), 16 Hours
IEC 60068-2-2	Dry Heat	Test Bd	85 °C (185 °F), 16 Hours
IEC 60068-2-30	Humidity (Damp Heat, Cyclic)	Test Db	95% (non-condensing), 55 °C (131 °F), 6 cycles
IEC 60255-21-1	Vibration		2 g @ 10-150 Hz
IEC 60255-21-2	Shock		30 g @ 11 ms

Section 6.5 Cellular Modem Certifications

Certification	Standard	
Safety	UL 60950-1	
	cUL 60950-1	
	EN 60950-1	
	AS/NZS 6950:2000	
EMC	FCC Part 2, 15, 22, 24	
	EN 55022	
	EN 55024	
Network	PTCRB	