SIEMENS

SIMATIC NET

Industrial Ethernet Security SCALANCE S615 Command Line Interface

Configuration Manual

Preface

Security recommendation	1
General	2
Configuration	3
Functions specific to SCALANCE	4
System time	5
Network structures	6
Network protocols	7
Load control	8
Layer 3 functions	9
Security and authentication	10
Diagnostics	11

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by [®] are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Validity of the configuration manual

This Configuration Manual covers the following product:

• SCALANCE S615

This Configuration Manual applies to the following software version:

• SCALANCE S-615 firmware as of version V4.2

Purpose of the Configuration Manual

This Configuration Manual contains the CLI commands that are supported by the SCALANCE S615. You will find the document on the supplied data medium.

Orientation in the documentation

Apart from the Configuration Manual you are currently reading, the following documentation is also available on the topic of Remote Network:

Configuration manual SCALANCE S615 Web Based Management

This document is intended to provide you with the information you require to commission and configure SCALANCE S615 devices using the Web Based Management.

Getting Started SCALANCE S615

Based on examples, this document explains the configuration of the SCALANCE S 615 device.

Operating Instructions SINEMA RC Server

You will find this document on the Internet pages of Siemens Industry Online Support. It contains information on the installation, configuration and operation of the application SINEMA Remote Connect Server.

SIMATIC NET manuals

You will find SIMATIC NET manuals on the Internet pages of Siemens Industry Online Support:

• Using the search function:

Link to Siemens Industry Online Support (http://support.automation.siemens.com/WW/view/en)

Enter the entry ID of the relevant manual as the search item.

• In the navigation panel on the left-hand side in the area "Industrial Communication":

Link to the area "Industrial Communication" (http://support.automation.siemens.com/WW/view/en/10805878/130000)

Go to the required product group and make the following settings: tab "Entry list", Entry type "Manuals"

You will find the documentation for the SIMATIC NET products relevant here on the data storage medium that ships with some products:

- Product CD / product DVD
- SIMATIC NET Manual Collection

SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary on the Internet at the following address:

50305045 (http://support.automation.siemens.com/WW/view/en/50305045)

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit Link: (http://www.siemens.com/industrialsecurity)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

Link: (http://www.siemens.com/industrialsecurity).

Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

License conditions

Note

Open source software

Read the license conditions for open source software carefully before using the product.

You will find license conditions in the following documents on the supplied data medium:

OSS_ScalanceM-800_S615_86.htm

Trademarks

The following and possibly other names not identified by the registered trademark sign [®] are registered trademarks of Siemens AG:

SCALANCE, SINEMA, KEY-PLUG, C-PLUG

Table of contents

/ recommendation I Configuration limits for WBM and CLI CLI modes	
Configuration limits for WBM and CLI CLI modes	
Configuration limits for WBM and CLI CLI modes	27 28
CLI modes	20
Working with the Command Line Interface (CLI)	
The CLI command prompt	
Symbols of the CLI commands	
Interface identifiers and addresses Naming interfaces Address types, address ranges and address masks IPv4 address	
General CLI commands clear screen do end exit Help functions and supported input help The command "?" Completion of command entries Abbreviated notation of commands Reusing the last used commands Working through a command sequence clear history. The "show" commands	38 38 38 39 39 40 40 40 40 41 42 42 42 42 43 43 43 43 44
ration	
System The "show" commands show cli-console-timeout show coordinates show device information show interfaces show interfaces show interface mtu show interfaces show interfaces show lidp neighbors show lidp status show ip interface show versions clear counters	
	The CLI command prompt

3.1.3 3.1.4 3.1.5 3.1.6 3.1.7 3.1.8 3.1.9 3.1.9.1 3.1.9.1 3.1.9.2 3.1.9.3 3.1.9.4 3.1.9.5 3.1.9.6 3.1.9.7 3.1.9.8 3.1.9.9 3.1.9.10 3.1.10.1 3.1.10.2 3.1.10.2 3.1.10.3 3.1.10.4 3.1.10.5 3.1.10.6 3.1.10.7 3.1.10.8 3.1.10.9	configure terminal. clear line vty	$\begin{array}{c} 566\\ 577\\ 58\\ 59\\ 600\\ 612\\ 62\\ 63\\ 66\\ 66\\ 67\\ 71\\ 72\\ 73\\ 73\\ 73\\ 73\\ 73\\ 73\\ 73\\ 73\\ 73\\ 73$
3.1.10.10 3.1.10.11 3.1.10.12	no shutdown complete	76 76
3.2 3.2.1 3.2.1.1 3.2.1.2 3.2.2 3.2.3 3.2.4 3.2.4 3.2.4.1	Load and Save	78 78 79 79 80 81 81
3.2.5 3.2.5.1 3.2.5.2 3.2.5.3 3.2.5.4 3.2.5.5 3.2.5.6 3.2.5.7	Commands in the LOADSAVE configuration mode	82 83 84 85 85 86 87
3.3 3.3.1	Reset and Defaultsrestart	89 89
3.4 3.4.1 3.4.1.1	Configuration Save & Restore The "show" commands show running-config	91 91 91

	3.4.2	write startup-config	93
	3.4.3	Commands in the global configuration mode	
	3.4.3.1	auto-save	
	3.4.3.2	no auto-save	
4	Functions	specific to SCALANCE	
	4.1	PLUG	97
	4.1.1	The "show" commands	
	4.1.1.1	show plug	
	4.1.2	Commands in the global configuration mode	
	4.1.2.1	plug	
	4.1.3	Commands in the Plug Configuration mode	
	4.1.3.1	factoryclean	
	4.1.3.2	write	
	4.2	WBM	
	4.2.1	The "show" commands	
	4.2.1.1	show web-session-timeout	
	4.2.2	Commands in the global configuration mode	
	4.2.2.1	web-session-timeout	
	4.2.2.2	no web-session-timeout	
	4.3	Digital input/output	
	4.3.1	The "show" commands	
	4.3.1.1	show digital input	
	4.3.1.2	show digital output	
	4.3.2	Commands in the global configuration mode	
	4.3.2.1	digital output closed	
	4.3.2.2	digital output open	
	4.4	cRSP / SRS	
	4.4.1	The "show" commands	
	4.4.1.1	show srs	
	4.4.1.2	show srs logon	
	4.4.2	Commands in the global configuration mode	
	4.4.2.1	SrS	
	4.4.3	Commands in the SRS configuration mode	
	4.4.3.1	logon	
	4.4.3.2	no logon	110
	4.4.3.3	logon idx authority	111
	4.4.3.4	logon idx fragment	112
	4.4.3.5	logon idx path	112
	4.4.3.6	logon idx query	113
	4.4.3.7	logon show-idx	114
	4.4.3.8	no shutdown	115
	4.4.3.9	interval	116
	4.4.3.10	validate cert	116
	4.5	SINEMA RC	118
	4.5.1	Introduction to the SRC section	118
	4.5.2	The "show" commands	118
	4.5.2.1	show sinemarc	118
	4.5.3	Commands in the global configuration mode	119
	4.5.3.1	sinemarc	119

	4.5.4	Commands in the SINEMARC configuration mode	120
	4.5.4.1	addr	120
	4.5.4.2	autofwnat	121
	4.5.4.3	no autofwnat	121
	4.5.4.4	device id	122
	4.5.4.5	device pw	123
	4.5.4.6	port	124
	4.5.4.7	proxy	125
	4.5.4.8	no proxy	126
	4.5.4.9	shutdown	127
	4.5.4.10	no shutdown	127
	4.5.4.11	verification cacert	128
	4.5.4.12	verification fingerprint	129
5	System time	9	131
	5.1	System time setting	131
	5.1.1	The "show" commands	131
	5.1.1.1	show time	131
	5.1.2	Commands in the global configuration mode	132
	5.1.2.1	time	132
	5.1.2.2	time set	133
	5.2	NTP client	
	5.2.1	The "show" commands	134
	5.2.1.1	show ntp info	
	5.2.2	Commands in the global configuration mode	
	5.2.2.1	ntp	135
	5.2.3	Commands in the NTP configuration mode	135
	5.2.3.1	nto server	135
	5.2.3.2	no nto server	137
	5.2.3.3	ntp time diff	137
	5.3	SNTP client	139
	5.3.1	The "show" commands	139
	5.3.1.1	show sntp broadcast-mode status	139
	5.3.1.2	show sntp status	140
	5.3.1.3	show sntp unicast-mode status	140
	5.3.2	Commands in the global configuration mode	141
	5.3.2.1	sntp	141
	5.3.3	commands in the SNTP configuration mode	142
	5.3.3.1	sntp time diff	142
	5.3.3.2	sntp unicast-server	143
	5.3.3.3	no sntp unicast-server	144
	5.3.3.4	sntp client addressing-mode	145
6	Network str	uctures	147
	6.1	VLAN	147
	6.1.1	The "show" commands	147
	6.1.1.1	show subnet-vlan mapping	147
	6.1.1.2	show vlan	148
	6.1.1.3	show vlan device info	149
	6.1.1.4	show vlan learning params	149
	6.1.1.5	show vlan port config	150

6.1.1.6	show vlan protocols-group	
6.1.2	Commands in the global configuration mode	
6.1.2.1	base bridge-mode	
6.1.2.2	interface range	
6.1.2.3	no interface range	
6.1.2.4	map protocol	
6.1.2.5	no map protocol	
6.1.2.6	no protocol-vlan	
6.1.2.7	protocol-vlan	
6.1.2.8	subnet-vlan	
6.1.2.9	no subnet-vlan	
6.1.2.10	vlan	
6.1.2.11	no vlan	
6.1.3	Commands in the interface configuration mode	
6.1.3.1	map subnet	
6.1.3.2	no map subnet	
6.1.3.3	shutdown complete	163
6.1.3.4	no shutdown	163
6135	switchport	164
6136	no switchport	165
6137	switchport accentable-frame-type	165
6138	no switchport acceptable-frame-type	166
6139	switchport mode	167
6 1 3 10	no switchport mode	168
6 1 3 11	switchport nvid	160
6 1 3 12	no switchport pvid	169
614	Commands in the VI AN configuration mode	170
61/1	in address	170
6142	no in address	170
6143	none name	170
6114.5	no name	
6115	norte	
6146	polits	
6147	tio interface	
0.1.4.7		
6.2	PPP	178
6.2.1	The "show" commands	178
6.2.1.1	show ppp information	178
6.2.2	Commands in the global configuration mode	178
6.2.2.1	interface ppp	179
6.2.3	Commands in the Interface configuration mode	
6.2.3.1	forced disconnect	
6.2.3.2	forced disconnect time	
6.2.3.3	interface vlan	
6.2.3.4	ip address	
6.2.3.5	ip address dhcp	
6.2.3.6	no ip address	
6.2.3.7	password	
6.2.3.8	shutdown	
6.2.3.9	no shutdown	
6.2.3.10	type ppo-ex	
6.2.3.11	username	

7	Network p	rotocols	189
	7.1	IPv4 protocol	
	7.1.1	The "show" commands	
	7.1.1.1	show ip dns	
	7.1.1.2	show dcp forwarding	
	7.1.1.3	show dcp server	
	7.1.1.4	show ip route	
	7.1.1.5	show ip routing	
	7.1.1.6	show ip static route	
	7.1.1.7	show ip telnet	
	7.1.2	Commands in the global configuration mode	
	7.1.2.1	dcp server	
	7.1.2.2	no dcp server	
	7.1.2.3	ip echo-reply	
	7.1.2.4	no ip echo-reply	
	7.1.2.5	ip route	
	7.1.2.6	ip route	
	7.1.2.7	no ip route	
	7.1.2.8	no ip routing	199
	7.1.2.9	telnet-server	199
	7.1.2.10	no telnet-server	200
	7.1.3	Commands in the Interface configuration mode	201
	7.1.3.1	in address	201
	7.1.3.2	ip address dhcp	202
	7133	no in address	203
	7.2	ARP	
	7.2.1	The "show" commands	
	7.2.1.1	show ip arp	
	7.3	DHCP client	206
	7.3.1	The "show" commands	206
	7311	show in dhen client	206
	732	Commands in the global configuration mode	206
	7321	in dhon config-file-request	207
	7322	no in dhen config-file-request	207
	7323	in dhon client mode	208
	1.0.2.0		200
	7.4	DHCP server	
	7.4.1	The "show" commands	
	7.4.1.1	show ip dhcp-server bindings	
	7.4.1.2	show ip dhcp-server pools	
	7.4.2	Commands in the global configuration mode	
	7.4.2.1	ip dhcp-server	
	7.4.2.2	no ip dhcp-server	
	7.4.2.3	no ip dhcp-server icmp-probe	212
	7.4.2.4	ip dhcp-server icmp-probe	
	7.4.2.5	ip dhcp-server pool	213
	7.4.2.6	no ip dhcp-server pool	
	7.4.3	Commands in the DHCPPOOL configuration mode	
	7.4.3.1	lease-time	215
	7.4.3.2	network	
	7.4.3.3	option (IP address)	217

7.4.3.4	option value-hex	219
7.4.3.5	option value-string	220
7.4.3.6	no option	220
7.4.3.7	pool-enable	221
7.4.3.8	no pool-enable	222
7.4.3.9	set-interface	223
7.4.3.10	static-lease	224
7.4.3.11	no static-lease	225
75	DNG	226
7.5	The "chow" commands	220
7.5.1	show desclicent information	220
7.5.1.1	show ddhsclient information	220
7.5.1.2	Commands in the global configuration mode	220 227
7.5.2	Introductory sentence for the global configuration mode	221
7522	declient	221 227
7523	dnsprovy	
7.5.2.5	disploxy	220
7.5.2.4	Commands in the DNS CLIENT configuration mode	220
7.5.3	monual sny	
7.5.3.1		
7.5.3.2	no manual siv	230
7.5.5.5	server type	201 222
7.5.3.4	shutdown	
7.5.5.5	Commands in the DNS DPOYV configuration mode	
7.5.4	cochonydomain	233
7.5.4.1	no cachenydomain	233
7.5.4.2	shutdown	234
7.5.4.5	no shutdown	234
7.5.4.4	Commands in the DDNS Client configuration mode	235
7551	service	235
7.5.5.7		230
7553		230
7554		
7555	naesword	230
1.0.0.0	pa35w010	
7.6	SNMP	240
7.6.1	The "show" commands	240
7.6.1.1	show snmp	240
7.6.1.2	show snmp community	240
7.6.1.3	show snmp engineID	241
7.6.1.4	show snmp filter	241
7.6.1.5	show snmp group	242
7.6.1.6	show snmp group access	242
7.6.1.7	show snmp inform statistics	243
7.6.1.8	show snmp notif	243
7.6.1.9	show snmp targetaddr	244
7.6.1.10	show snmp targetparam	244
7.6.1.11	show snmp tcp	245
7.6.1.12	show snmp user	245
7.6.1.13	show snmp viewtree	246
7.6.2	Commands in the global configuration mode	246
7.6.2.1	snmpagent	247

7.6.2.2	no snmpagent	247
7.6.2.3	snmp agent version	248
7.6.2.4	snmp access	248
7.6.2.5	no snmp access	250
7.6.2.6	snmp community index	251
7.6.2.7	no snmp community index	252
7.6.2.8	snmp filterprofile	253
7.6.2.9	no snmp filterprofile	254
7.6.2.10	snmp group	255
7.6.2.11	no snmp group	256
7.6.2.12	snmp notify	256
7.6.2.13	no snmp notify	258
7.6.2.14	snmp targetaddr	258
7.6.2.15	no snmp targetaddr	260
7.6.2.16	snmp targetparams	261
7.6.2.17	no snmp targetparams	263
7.6.2.18	snmp v1-v2 readonly	263
7.6.2.19	no snmp v1-v2 readonly	264
7.6.2.20	snmp user	265
7.6.2.21	no snmp user	266
7.6.2.22	snmp view	266
7.6.2.23	no snmp view	268
77	HTTP server	260
771	The "chow" commande	209
7.7.1	show in http porver statue	209
7.7.1.1	Show ip hilp server status	209
1.1.2	Commands in the Global Configuration mode	209
7.7.2.1	ip nttp	270
1.1.2.2		270
7.8	HTTPS server	272
7.8.1	The "show" commands	272
7.8.1.1	show ip http secure server status	272
7.8.1.2	show ssl server-cert	272
7.9	Proxy server	274
791	The "show" commands	274
7911	show proxyserver table	274
792	Commands in the global configuration mode	275
7021	proviseriver	275
7.9.2.1	Commands in the PROXVSERVER configuration mode	275
7.3.3		276
7.9.3.1		270
7.3.3.2	sny name addr	270
7.3.3.3	sry name auth	270
7.035	srv name port	280
7.3.3.5	siv name port	200
7.3.3.0	siv name type	201
7039	siv name user	202
1.3.3.0 7020	SIV Hallie USEI	203 201
1.3.3.3	งาง งาบพ-าเลาเซง	204
7.10	SMTP client	285
7.10.1	The "show" commands	285
7.10.1.1	show events smtp-server	285

	7.10.1.2	show events sender email	
	7.10.1.3	show events smtp-port	
	7.10.2	Commands in the Events configuration mode	
	7.10.2.1	sender mail-address	
	7.10.2.2	no sender mail-address	
	7.10.2.3	smtp-server	
	7.10.2.4	no smtp-server	
	7.10.2.5	smtp-port	290
	7.10.2.6	no smtp-port	290
	7.10.2.7	send test mail	291
	7.11	SSH server	292
	7.11.1	The "show" commands	292
	7.11.1.1	show ip ssh	292
	7.11.2	Commands in the Global Configuration mode	292
	7.11.2.1	ssh-server	293
	7.11.2.2	no ssh-server	293
8	Load cont	rol	295
	8.1	Flow control	295
	8.1.1	The "show" commands	
	8.1.1.1	show flow-control	
	8.1.2	Commands in the interface configuration mode	
	8.1.2.1	flowcontrol	296
	8.2	Dynamic MAC aging	298
	8.2.1	The "show" commands	
	8.2.1.1	show mac-address-table aging-time	
	8.2.1.2	show mac-address-table aging-status	
	8.2.2	Commands in the global configuration mode	
	8.2.2.1	mac-address-table aging	
	8.2.2.2	no mac-address-table aging	
	8.2.2.3	mac-address-table aging-time	
9	Layer 3 fu	nctions	303
	9.1	NAT	
	9.1.1	The "show" commands	
	9.1.1.1	show firewallnat masquerading	
	9.1.1.2	show firewallnat napt	
	9.1.1.3	show firewallnat netmap-map	
	9.1.1.4	show firewallnat src-nat	
	9.1.2	Commands in the global configuration mode	
	9.1.2.1	firewallnat	
	9.1.3	Commands in the FIREWALL NAT configuration mode	
	9.1.3.1	Introductory sentence for the FirewallNAT configuration mode	
	9.1.3.2	ipsec connection show-idx	
	9.1.3.3	masquerading	
	9.1.3.4	no masquerading	
	9.1.3.5	masquerading show-idx	
	9.1.3.6	napt type ipv4	
	9.1.3.7	no napt	
	9.1.3.8	no napt all	
	9.1.3.9	napt show-idx	

	9.1.3.10	netmap destination type ipv4	313
	9.1.3.11	netmap source type ipv4	
	9.1.3.12	no netmap srcint	
	9.1.3.13	no netmap all	
	9.1.3.14	netmap show-idx	
	9.1.3.15	src-nat type ipv4	
	9.1.3.16	no src-nat	
	91317	no src-nat all	322
	9.1.3.18	src-nat show-idx	
10	Security an	d authentication	325
	10.1	User rights management	
	10.1.1	The "show" commands	
	10.1.1.1	show password-policy	325
	10.1.1.2	show users	326
	10 1 1 3	show user-accounts	326
	10 1 2	whoami	327
	10.1.2	Commands in the global configuration mode	
	10.1.3.1	change nassword	327
	10.1.3.1		328
	10.1.3.2	no user-account	330
	10.1.3.3		
	10.1.3.4	usemanie	
	10.2	Firewall	333
	10.2.1	Introduction to the Firewall section	333
	10.2.2	The "show" commands	333
	10.2.2.1	show firewall icmp-services ipv4	333
	10.2.2.2	show firewall information	333
	10.2.2.3	show firewall ip-protocols	334
	10.2.2.4	show firewall ip-rules ipv4	
	10.2.2.5	show firewall pre-rules ipv4	
	10.2.2.6	show firewall ip-services	335
	10.2.3	Commands in the global configuration mode	336
	10.2.3.1	firewall	
	10.2.4	Commands in the FIREWALL configuration mode	
	10.2.4.1	Introductory sentence for the Firewall configuration mode	
	10.2.4.2	icmp name	
	10.2.4.3	no icmp	
	10.2.4.4	icmp name set type	340
	10.2.4.5	icmp show-names	342
	10.2.4.6	icmp show-types-codes	342
	10 2 4 7	idle timeout icmp	343
	10 2 4 8	idle timeout udp	343
	10 2 4 9	idle timeout top	344
	10 2 4 10	inv4rule	345
	10 2 4 11	no inv4 rule	347
	10 2 4 12	inv4rule set action	3/19
	10 2 4 13	inv4rule set dstin	3/10
	10.2.4.13	invArule set from	250
	10.2.4.14	inv4rule set log	
	10.2.4.13	invArule set prior	250
	10.2.4.10	ipv4rule set service	
	10.2.4.17	ipv4riule set srein	
	10.2.4.10	וף אין טוב פבו פו טוף	

	ipv4rule set to	
10.2.4.20	ipv4rule ipsec connection	
10.2.4.21	prerule ipv4 show-int	
10.2.4.22	ipv4rule show-rules	
10.2.4.23	prerule ipv4 show-int	
10.2.4.24	prerule all ipv4	
10.2.4.25	prerule dhcp ipv4	
10.2.4.26	prerule dns ipv4	
10.2.4.27	prerule http ipv4	
10.2.4.28	prerule https ipv4	
10.2.4.29	prerule ip ipv4	
10.2.4.30	prerule ipsec ipv4	
10.2.4.31	prerule snmp ipv4	
10.2.4.32	prerule ssh ipv4	
10.2.4.33	prerule telnet ipv4	
10.2.4.34	prerule tftp ipv4	
10.2.4.35	prerule ping ipv4	
10.2.4.36	proto name	
10.2.4.37	no proto	
10.2.4.38	proto show-names	
10.2.4.39	service name	
10.2.4.40	no service	
10.2.4.41	service name set prot	
10.2.4.42	service name set dst	
10.2.4.43	service name set src	
10.2.4.44	service show-names	
10.2.4.45	shutdown	
10.2.4.46	no shutdown	
10.2		200
10.3	The "show" commonds	
10.3.1	The show commands	
10.3.1.1	above incore complexitientication	200
10 2 1 2	show ipsec conn-authentication	
10.3.1.2	show ipsec conn-authentication	
10.3.1.2 10.3.1.3	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1	
10.3.1.2 10.3.1.3 10.3.1.4	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2	
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2 show ipsec information	
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2 show ipsec information show ipsec remoteend	
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2 show ipsec information show ipsec remoteend Commands in the global configuration mode	380 380 381 381 382 382 382 382
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2 show ipsec information show ipsec remoteend Commands in the global configuration mode ipsec	380 380 381 381 382 382 383 383 383
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.2 10.3.2.1	show ipsec conn-authentication show ipsec connections show ipsec conn-phase1 show ipsec conn-phase2 show ipsec information show ipsec remoteend Commands in the global configuration mode ipsec	380 380 381 381 382 382 382 383 383 383 383
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.1	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 384 384
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.3	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384 385 385
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.4	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384 385 385 385
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384 385 385 385 385
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.6	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384 385 385 385 385 385
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.2 10.3.3.1 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7	show ipsec conn-authentication	380 380 380 381 382 382 383 383 383 384 384 384 385 385 385 385 385 385 386 387 388
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.2 10.3.3.1 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7 10.3.3.8 10.3.3.8	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 384 384 384 385 385 385 385 385 385 386 387 388 388
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7 10.3.3.8 10.3.3.9 10.3.3.9	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 385 385 385 385 385 386 387 388 388 388 389
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7 10.3.3.8 10.3.3.9 10.3.3.10	show ipsec conn-authentication	380 380 381 381 382 382 382 383 383 383 384 384 384 385 385 385 385 386 387 388 388 388 388 389 389
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7 10.3.3.8 10.3.3.9 10.3.3.10 10.3.4 10.3.4	show ipsec conn-authentication	380 380 381 381 382 382 383 383 383 383 384 384 384 385 385 385 385 385 385 385 385 385 385
10.3.1.2 10.3.1.3 10.3.1.4 10.3.1.5 10.3.1.6 10.3.2 10.3.2.1 10.3.3 10.3.3.1 10.3.3.2 10.3.3.3 10.3.3.4 10.3.3.5 10.3.3.6 10.3.3.7 10.3.3.8 10.3.3.9 10.3.3.10 10.3.4 10.3.4.1	show ipsec conn-authentication	380 380 381 381 382 382 382 383 383 383 383 384 384 384 385 385 385 385 385 385 386 387 388 388 389 390 390 391

10.3.4.3	conn-mode	393
10.3.4.4	subnet	394
10.3.4.5	vir-ip	395
10.3.4.6	no vir-ip	396
10.3.5	Commands in the IPSEC CONNECTION configuration mode	396
10.3.5.1	authentication	397
10.3.5.2	k-proto	397
10.3.5.3	loc-subnet	398
10.3.5.4	rmend name	399
10.3.5.5	operation	399
10.3.5.6	phase	401
10.3.5.7	timeout	401
10.3.5.8	vir-ip	402
10.3.5.9	no vir-ip	403
10.3.6	Commands in the IPSEC AUTHENTICATION configuration mode	403
10.3.6.1	auth cacert	404
10.3.6.2	auth psk	405
10.3.6.3	auth remcert	405
10 3 6 4	no auth	406
10365	local-id	407
10.3.6.6	no local-id	408
10.3.6.7	rem_id	100
10.3.6.8	no rem id	100
10.3.0.0	Commands in the IDSEC DUASE1 configuration mode	409
10.3.7		410
10.3.7.1		410
10.3.7.2	default sinhers	411
10.3.7.3	De default einhere	411
10.3.7.4	no delault-ciphers	412
10.3.7.5		413
10.3.7.6		414
10.3.7.7	apa-perioa	414
10.3.7.8	dpd-timeout	415
10.3.7.9	ike-auth	416
10.3.7.10	ike-encryption	41/
10.3.7.11	ike-keyderivation	418
10.3.7.12	ike-keytries	419
10.3.7.13	ike-litetime	420
10.3.8	Commands in the IPSEC PHASE2 configuration mode	421
10.3.8.1	auto-fwrules	421
10.3.8.2	no auto-fwrules	422
10.3.8.3	default-ciphers	422
10.3.8.4	no default-ciphers	423
10.3.8.5	esp-auth	424
10.3.8.6	esp-encryption	425
10.3.8.7	esp-keyderivation	426
10.3.8.8	lifetime	427
10.3.8.9	lifebyte	428
10.3.8.10	proto	429
10.3.8.11	port	430
10.4	Certificates	431
10 4 1	Commands in the global configuration mode	431
10 4 1 1	certificate	431
· •. · · · · ·	continente	

10.4.2	Commands in the CERT configuration mode	432
10.4.2.1	The "show" commands	432
10.4.2.2	del	433
10.4.2.3	passphrase	434
10.4.2.4	passphrase show-idx	435
10 5	Onen\/PN	436
10.5 1	The "show" commands	436
10.5.1 1	show openyon authentication	436
10.5.1.2	show open vpn connections	436
10.5.1.3	show openyon remoteend	437
10.5.2	Commands in the global configuration mode	
10.5.2.1	openyon	438
10.5.3	OPENVPN configuration mode	438
10.5.3.1	connection name	
10.5.3.2	no conn name	
10.5.3.3	no connection all	
10.5.3.4	remote name	
10.5.3.5	no remote name	
10.5.3.6	no remote all	
10.5.3.7	shutdown	
10.5.3.8	no shutdown	
10.5.4	Commands in the OPENVPN REMOTE END configuration mode	
10.5.4.1	connection	
10.5.4.2	port	
10.5.4.3	DLOXA	
10.5.4.4	remote-addr	
10.5.4.5	show-context	
10.5.5	Commands in the OPENVPN CONNECTION configuration mode	448
10.5.5.1	auth-algo	448
10.5.5.2	authentication	449
10.5.5.3	autoFW	449
10.5.5.4	encryp-algo	450
10.5.5.5	NAT	451
10.5.5.6	operation	452
10.5.5.7	useLZO	453
10.5.5.8	show auth-names	453
10.5.5.9	show context	454
10.5.6	Commands in the OPENVPN AUTHENTICATION configuration mode	455
10.5.6.1	auth	455
10.5.6.2	no auth	456
10.5.6.3	auth user	456
Diagnostics		459
11 1	Event and fault handling	460
11 1 1	The "show" commands	
11 1 1 1	show events config	
11 1 1 2	show events severity	
11.1.1.3	show events faults config	461
11.1.1.4	show events faults status	
11.1.1.5	show fault counter	
11.1.1.6	show fwlog	
11.1.1.7	show logbook	
	-	

11

	485
no syslogserver	
syslogserver	482
Commands in the Events configuration mode	/01 /21
show events systematics	401 ، ۸۵۱
The "show" commande	401 ، ۸۵۱
System client	470 ДЯ1
no severity	479
severity	лтя
no link	
link	
no event config	
event config	
no client config	
auu iuy	
commanus in the Events configuration mode	
Commanda in the Events configuration mode	
Commanus in the global configuration mode	
logging console	
no logging console	
fault report ack	
clear seclog	
clear logbook	
clear fwlog	
clear fault counter	
show seclog	
show power-line-state	
	show power-line-state

Security recommendation

To prevent unauthorized access, note the following security recommendations.

General

- You should make regular checks to make sure that the device meets these recommendations and/or other security guidelines.
- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products:

Link: (http://www.industry.siemens.com/topics/global/en/industrial-security/network-security/Pages/Default.aspx)

- When the internal and external network are disconnected, an attacker cannot access internal data from the outside. Therefore operate the device only within a protected network area.
- Operate the device only within a protected network area.
- Use VPN to encrypt and authenticate communication from and to the devices.
- For data transmission via a non-secure network use an encrypted VPN tunnel (IPsec, Open VPN).
- Separate connections correctly (WBM. Telnet, SSH etc.).

Physical access

- Limit physical access to the device to qualified personnel. The memory card or the PLUG (C-PLUG, KEY-PLUG) contains sensitive data such as certificates, keys etc. that can be read out and modified.
- Lock unused physical ports on the device. Unused ports can be used to gain forbidden access to the plant.

Software (security functions)

- Keep the software up to date. Check regularly for security updates of the product. You will find information on this on the Internet pages "Industrial Security (http://www.siemens.com/industrialsecurity)".
- Inform yourself regularly about security advisories and bulletins published by Siemens ProductCERT.
- Only activate protocols that you really require to use the device.
- The option of VLAN structuring provides good protection against DoS attacks and unauthorized access. Check whether this is practical or useful in your environment.

- Restrict access to the device by firewall, VPN (IPsec, OSINEMA RC) and NAT.
- Use a central logging server to log changes and accesses. Operate your logging server within the protected network area and check the logging information regularly.

See also

http://www.siemens.com/cert/de/cert-security-advisories.htm (http://www.siemens.com/cert/en/cert-security-advisories.htm)

Passwords

- Define rules for the use of devices and assignment of passwords.
- Regularly update passwords and keys to increase security.
- Change all default passwords for users before you operate the device.
- Only use passwords with a high password strength. Avoid weak passwords for example password1, 123456789, abcdefgh.
- Make sure that all passwords are protected and inaccessible to unauthorized personnel.
- Do not use the same password for different users and systems or after it has expired.

Keys and certificates

This section deals with the security keys and certificates you require to set up SSL, VPN (IPsec, OpenVPN) and SINEMA RC.

- The device contains a pre-installed SSL certificate with key. Replace this certificate with a self-made certificate with key. We recommend that you use a certificate signed by a reliable external or internal certification authority.
- Use the certification authority including key revocation and management to sign the certificates.
- Make sure that user-defined private keys are protected and inaccessible to unauthorized persons.
- Verify certificates and fingerprints on the server and client to prevent "man in the middle" attacks.
- It is recommended that you use password-protected certificates in the PKCS #12 format
- It is recommended that you use certificates with a key length of at least 2048 bits.
- Change keys and certificates immediately, if there is a suspicion of compromise.

Secure/non-secure protocols

- Avoid or disable non-secure protocols, for example Telnet and TFTP. For historical reasons, these protocols are still available, however not intended for secure applications. Use non-secure protocols on the device with caution.
- Avoid or disable non-secure protocols. Check whether use of the following protocols is necessary:
 - Broadcast pings
 - Non authenticated and unencrypted interfaces
 - ICMP (redirect)
 - LLDP
 - Syslog
 - DHCP Options 66/67
 - TFTP
- The following protocols provide secure alternatives:
 - SNMPv1/v2 \rightarrow SNMPv3

Check whether use of SNMPv1 is necessary. SNMPv1 is classified as non-secure. Use the option of preventing write access. The product provides you with suitable setting options.

If SNMP is enabled, change the community names. If no unrestricted access is necessary, restrict access with SNMP.

- $\quad \text{HTTP} \rightarrow \text{HTTPS}$
- Telnet \rightarrow SSH
- Use secure protocols when access to the device is not prevented by physical protection measures.
- To prevent unauthorized access to the device or network, take suitable protective measures against non-secure protocols.
- If you require non-secure protocols and services, activate these at interfaces that are located within a protected network area.
- Using a firewall, restrict the services and protocols available to the outside to a minimum.
- For the DCP function, enable the "DCP read-only" mode after commissioning.

Available protocols per port

The following list provides you with an overview of the open ports on this device. Keep this in mind when configuring a firewall.

The table includes the following columns:

Protocol

All protocols that the device supports

Port number

Port number assigned to the protocol

- Port status
 - Open

The port is always open and cannot be closed.

- Open (when configured)

The port is open if it has been configured.

• Factory setting

- Open

The factory setting of the port is "Open".

Closed

The factory setting of the port is "Closed".

• Authentication

Specifies whether or not the protocol is authenticated during access.

With some protocols the port can be open but access is prevented by a predefined IP package filter rule. You will find further information on the predefined IP package rules in "Security > Firewall > Predefined IPv4"

Protocol	Port number	Port status	Factory se	tting	Authentication
			Internal interface	External interface	
SSH	TCP/22	Open (when configured)	Open	Closed	Yes
НТТР	TCP/80	Open (when configured)	Open	Closed	Yes
HTTPS	TCP/443	Open	Open	Closed	Yes
SNTP	UDP/123	Open (only outgoing)	Closed	Closed	No
SNMP	UDP/161	Open (when configured)	Open	Closed	Yes
DNS	TCP/53	Open (when configured)	Open	Closed	No
	UDP/53	Open (when configured)	Open	Closed	No
Syslog	UDP/514	Open (only outgoing)	Closed	Closed	No
IPsec	UDP/500 UDP/4500	Open (when configured)	Closed	Open	Yes
DHCP	UDP/67 UDP/68	Open (when configured)	Open	Closed	No
NTP	UDP/123	Open (only outgoing)	Closed	Closed	Yes
Siemens Remote Service (cRSP/SRS)	TCP/443	Open (only outgoing)	Closed	Closed	Yes
PROFINET	UDP/34964	Open (when configured)	Closed	Closed	No

Protocol	Port number	Port status	Factory setting		Authentication
			Internal interface	External interface	
OpenVPN to SINEMA RC	TCP, any	Open (only outgoing)	Closed	Closed	Yes
TFTP	UDP/69	Open (only outgoing)	Closed	Closed	No
DynDNS	TCP/80	Open (only outgoing)	Closed	Closed	No
Telnet	TCP/23	Open (when configured)	Open	Closed	Yes
Ping	ICMP	Open	Open	Closed	No

2.1 Configuration limits for WBM and CLI

Configuration limits of the device

The following table lists the configuration limits for Web Based Management and the Command Line Interface of the device.

Depending on your IE switch, some functions are not available.

	Configurable function	Maximum number
System	Syslog server	3
	E-mail server	3
	SNMPv1 trap recipient	10
	SNTP server	1
	NTP server	1
	DHCP pools	5
	IPv4 addresses managed by the DHCP server (dy- namic + static)	100
	DHCP static assignments per DHCP pool	20
	DHCP options	20
	SINEMA RC	1
Layer 2	Virtual LANs (port-based; including VLAN 1)	16
	Maximum frame size	2048 bytes
Security	Users	16
	Firewall rules	64
	IPsec VPN	20
	OpenVPN	Connections: 5
		Remote end. 25

2.2 CLI modes

2.2 CLI modes

Grouping of the commands in the various modes

The commands of the Command Line Interface are grouped according to various modes. Apart from a few exceptions (help, exit), commands can only be called up in the mode to which they are assigned. This grouping allows different levels of access rights for each individual group of commands. The following graphic is an overview of the available modes.



Privileged EXEC mode

In this mode, you can you display the configuration data and change it.

If you log with the "admin" user, you change directly to the Privileged EXEC mode.

To change from the User EXEC Mode to the Privileged EXEC mode, enter the <code>enable</code> command. When the command executes, you will be prompted to enter the password for the "admin" user. You are logged out with the <code>exit</code> command.

Global configuration mode

In this mode, you can make basic configuration settings. In addition to this, you can also call up modes for the configuration of special interfaces or functions, for example to configure a VLAN or a PLUG. You change to this mode by entering <code>configure terminal</code> in the Privileged EXEC mode. You exit this mode by entering <code>end or exit</code>.

Other configuration modes

From the Global configuration mode, you can change to other configuration modes for special tasks. These are either general configuration modes (for example line configuration, interface configuration) or protocol-specific configuration modes (FTP, NTP).

2.3 Working with the Command Line Interface (CLI)

2.3 Working with the Command Line Interface (CLI)

Introduction

All the configuration settings for the device can be made using the Command Line Interface (CLI). The CLI therefore provides the same options as Web Based Management (WBM). You should read the detailed explanations of the parameters in the configuration manual "SCALANCE S615 Web Based Management". The CLI allows remote configuration over Telnet.

Note

Use with Windows 7

If you want to access the Command Line Interface in Windows 7, make sure that the functions required for this are enabled in Windows 7.

Starting the CLI in a Windows console

Follow the steps outlined below to start the Command Line Interface in a Windows console:

- Open a Windows console and type in the command "telnet" followed by the IP address of the device you are configuring: C:\>telnet <IP address>
- 2. Enter your login and password.

As an alternative, you can also enter the command "telnet" followed by the IP address of the device you are configuring in the Start > Run menu.

Note

Requirement for use of the CLI

You should only use the command line interface if you are an experienced user.

Even commands that bring about fundamental changes to the configuration are executed without a prompt for confirmation.

Errors in the configuration can mean that no further operation is possible in the entire network.

Changing parameters

If you have enabled the "Automatic Save" mode and you change a parameter saving starts only after the timer has elapsed. How long saving takes depends on the device and the changes.

Turn the device off only when saving is complete. Because only when saving is complete is the parameter adopted in the current configuration.

Procedure

- 1. Enter the command show device information.
 - In Privileged EXEC mode: show device information
 - In every other mode: do show device information
- 2. Check the status in Config Change.
 - Saved: The change is saved in the current configuration.
 - Not Saved: Saving is still taking place.

2.4 The CLI command prompt

2.4 The CLI command prompt

Overview

The Command Line Interface prompt shows the following information:

- The mode in which the CLI is currently operating. Most commands can only be called in a particular mode. You should therefore check the CLI mode based on the command prompt.
 - User Exec mode: CLI>
 - Privileged Exec mode and configuration modes: CLI(...)#
- The selected interface when the CLI is in an Interface Configuration mode. In the Interface Configuration mode, the parameters are configured for one specific interface. The command prompt is displayed in the form CLI (config-if-\$\$\$) # where the placeholder \$\$\$ is replaced by the identifier of the Interface. You select the Interface by setting suitable parameters for the interface command.
- An identifier when the Trial mode is enabled.
 If you first test changes to the configuration and then want to discard them, disable the Auto save function with the no auto-save command. You are then in Trial mode.
 Changes to the configuration that you have not saved are indicated by an asterisk in front of the command prompt: *CLI(...)#.

You save the changes to the configuration with the command write startup-config. With the auto-save command, you enable the Auto save function again.

Note

Upper and lower case

The Command Line Interface does not distinguish between upper case and lower case letters.

Make sure, however, that names used by the operating system or other programs are correctly written.

Blank

To use blanks in a text, enter the text in quotes, for example "H e I I o"

2.5 Symbols of the CLI commands

Symbols for representing CLI commands

When setting parameters for CLI commands, the following characters are used:

Charac- ter	Meaning	
< >	mandatory parameter	Instead of the expression in parenthesis, enter a value.
[]	optional parameter	Instead of the expression in parenthesis, you can enter a value.
()	Value or range of values	Instead of the expression in parenthesis, enter a value.
()	Range of values	Enter a value from this range.
{ }	Selection list	Select one more elements from the list.
{ }	exclusive selection	Select exactly one element from this list.

These characters are used in combinations to describe mandatory and optional entries.

There is a general description of some of these combinations below:

Character combinations	Meaning
< Parameter >	Instead of the expression in parentheses<>, enter a permitted value.
< < Unit (a - b) >	Instead of the expression in parentheses <>, enter a value from the range "a" to "b".
	The unit to be used is specified before the brackets () and is also replaced by the entry.
[<parameter 1="">< Parameter 2 >]</parameter>	The parameter pair is optional.
	If you use the parameter assignment, you need to enter a permitted value to replace both expressions in parenthesis <>.
[[Keyword < Unit (a - b)>]	The parameter assignment is optional.
	If you use the keyword, you need to enter a value from the range "a" to "b" to replace the expression in parenthesis <>.
[keyword { A B C }]	The parameter assignment is optional.
	If you use the keyword, you need to specify exactly one of the values "A", "B" or "C".
Keyword [A] [B] [C]	After the keyword, enter no or several of the values "A". "B" or "C".

2.6 Interface identifiers and addresses

2.6 Interface identifiers and addresses

2.6.1 Naming interfaces

Addressing interfaces

The device has several types of interface that are addressed in different ways:

Addressing physical interfaces

This notation also applies to other commands that address an Interface.

- Enter the command "interface".
- Specify the interface type <interface-type>.
- After a space, enter the interface identifier, <interface-id>.

The interface identifier is made up of the module number and the port number separated by a slash. The interfaces permanently installed in the device are identified with module 0.

Example:

```
Fast Ethernet: interface fa 0/1
```

Addressing logical interfaces

This notation also applies to other commands that address a logical interface.

- Enter the command "interface".
- Enter the keyword for the VLAN interface.
- After a space, enter the number of the VLAN interface you assigned when you created it. Example:

VLAN 2: interface vlan 2

Available physical interfaces

Device	Interfaces	interface-type	interface-id	
S615	5 x Fast Ethernet	fa: fast- ethernet	X = 1 5	fa 0/X

Available logical interfaces

VLAN

The device supports up to 16 virtual networks. To be able to use a VLAN, create it with the ${\tt vlan}$ command.

Configuring an interface in the Interface configuration mode

To configure the interface use the command interface in the global configuration mode.

Syntax

interface{vlan<vlan-id(1-4094)>|<interface-type><interface-id>}

• Enter the interface you want to configure. With this command, you change to the Interface configuration mode.

Since you configure precisely one of the existing interfaces in the Interface configuration mode, the command prompt shows not only the mode but also the identifier of this interface.

The command prompt is as follows:

cli(config-if-\$\$\$)#

The placeholder sss is replaced by the following name of the interface:

Interface	Command prompt
fastethernet: fa 0/x	cli(config-if-F0-X) #
vlan \$	cli(config-if-vlan-\$)#

The placeholders \$, x stand for the numbering of the interface.

2.6.2 Address types, address ranges and address masks

Overview

Since the various types of addresses can be represented by different notations, the notations used in the Command Line Interface are shown below:

• IPv4 addresses

Addresses for the Internet Protocol version 4 are written in the decimal notation of four numbers from the range 0 to 255, separated by a period.

Note

With leading zeros, the numbers are interpreted as octal numbers, e.g.: 192.168.070.071 \rightarrow 192.168.56.57.

• Network masks

A network mask is a series of bits that describes the network part of an IP address. The notation is normally decimal in keeping with the IP address.

Alternative notation for network masks
 In contrast to the notation described above, network masks can also be represented as a
 number of 1 bits. The mask of the decimal representation 255.255.0.0 is then written as
 /16.

The syntax is then for example: <ipaddress> / 16 Note that there must be a space before and after the "/".

 MAC addresses In the syntax of the Command Line Interface, a MAC address is represented as a 2.6 Interface identifiers and addresses

sequence of 6 bytes in hexadecimal format, in each case separated by a colon. The syntax is then, for example aa:aa:aa:aa:aa:aa

Multicast addresses
 Layer 2 multicast addresses as used on this device use the notation of MAC addresses.

 For permitted address ranges, check the rules or ask your network administrator.

2.6.3 IPv4 address

Range of values for IPv4 address

The IPv4 address consists of four decimal numbers with the range from 0 to 255, each number separated by a period; example: 141.80.0.16

IPv4 address format - notation

An IPv4 address consists of 4 bytes. Each byte is represented in decimal, with a dot separating it from the previous one.

XXX.XXX.XXX.XXX

XXX stands for a number between 0 and 255

The IPv4 address consists of two parts:

- The address of the (sub) network
- The address of the node (generally also called end node, host or network node)

Range of values for subnet mask

The subnet mask consists of four decimal numbers with the range from 0 to 255, each number separated by a period; example: 255.255.0.0

The binary representation of the 4 subnet mask decimal numbers must contain a series of consecutive 1s from the left and a series of consecutive 0s from the right.

The 1s specify the network number within the IPv4 address. The 0s specify the host address within the IPv4 address.

Example:

Correct values:

255.255.0.0 D = 1111 1111.1111 1111.0000 0000.0000 0000 B 255.255.128.0 D = 1111 1111.1111 1111.1000 0000.0000 0000 B 255.254.0.0 D = 1111 1111.1111 1110.0000 0000.0000 B Incorrect value: 255.255.1.0 D = 1111 1111.1111 1111.0000 0001.0000 0000 B
Relationship between the IPv4 address and subnet mask

The first decimal number of the IPv4 address (from the left) determines the structure of the subnet mask with regard to the number of "1" values (binary) as follows (where "x" is the host address):

First decimal number of the IPv4 address	Subnet mask
0 to 127	255.x.x.x
128 to 191	255.255.x.x
192 to 223	255.255.255.x

Classless Inter-Domain Routing (CIDR)

CIDR is a method that groups several IPv4 addresses into an address range by representing an IPv4 address combined with its subnet mask. To do this, a suffix is appended to the IPv4 address that specifies the number of bits of the network mask set to 1. Using the CIDR notation, routing tables can be reduced in size and the available address ranges put to better use.

Example:

IPv4 address 192.168.0.0 with subnet mask 255.255.255.0

The network part of the address covers 3 x 8 bits in binary representation; in other words 24 bits.

This results in the CIDR notation 192.168.0.0/24.

The host part covers 1 x 8 bits in binary notation. This results in an address range of 2 to the power 8, in other words 256 possible addresses.

Value range for gateway address

The address consists of four decimal numbers taken from the range 0 to 255, each number being separated by a period; example: 141.80.0.1

Relationship between IPv4 address and gateway address

The only positions of the IPv4 address and gateway address that may differ are those in which "0" appears in the subnet mask.

Example:

You have entered the following: 255.255.255.0 for the subnet mask; 141.30.0.5 for the IPv4 address and 141.30.128.0 for the gateway address. The Ipv4 address and gateway address may only be different in the 4th decimal number. In the example, however, the 3rd position is different.

You must, therefore, change one of the following in the example:

The subnet mask to: 255.255.0.0 or

the IPv4 address to: 141.30.128.1 or

the gateway address to: 141.30.0.1

General

2.7 General CLI commands

2.7 General CLI commands

This section describes commands that you can call up in any mode.

2.7.1 clear screen

Description

With this command, you clear the screen.
The command prompt is displayed.

Syntax

Call the command without parameters:

clear screen

Result

The screen is cleared. The command prompt is displayed.

2.7.2 do

Description

With this command, you can execute the commands from the Privileged EXEC mode in any configuration mode.

Syntax

Call up the command with the following parameters:

do [command]

To do this, you replace [command] with the command from the Privileged EXEC mode that you want to execute.

Example

You are in the Interface configuration mode and you want to execute the write startupconfig command from the Privileged EXEC mode.

cli(config-if-\$\$)# do write startup-config

Result	The command from the Privileged EXEC mode will be executed.
2.7.3	end
Description	With this command, you exit the configuration mode and are then in the Privileged EXEC mode.
Requirement	You are in a configuration mode.
Syntax	Call the command without parameters:
Result	You are in the Privileged EXEC mode. The command prompt is as follows:
2.7.4	exit
Description	With this command, you close the current mode.
Syntax	Call the command without parameters:
Result	The current mode was exited. You are then at the next higher level. If you are in Privileged EXEC Modus or in User EXEC Modus mode, you will be logged out.

General

2.7 General CLI commands

2.7.5 Help functions and supported input

The Command Line Interface provides various functions that are helpful when making entries in the command line:

- help
- ?
- Command completion with the tab key
- Automatic completion of incomplete commands
- Paging in the list of most recently used commands
- Display of the list of most recently used commands (show history)

2.7.5.1 help

Description

With this command, you display the help entry for a command or the command list.

Syntax

Call up help with the following parameters:

help [command]

Here, you replace [command] with the command for which you require help.

If the command for which you require help consists of several words, enter these words without spaces.

Result

The syntax of the command is displayed.

Syntax

If you call up help without parameters, you will obtain a list of all permitted commands in the current mode:

help

Result

The mode-specific as well as the global commands are displayed.

Note

Incomplete command names

If you have specified an incomplete command when calling help, a list of all commands that start with the term you have entered is created.

2.7.5.2 The command "?"

Description

With this command, you call up the command list.

Syntax

Enter a question mark to obtain a list of all permitted commands in the current mode:

?

For this command, you do not need to press the enter key. The command executes immediately after you type the character.

Result

The mode-specific as well as the global commands are displayed.

Note

Incomplete command names

If you have specified an incomplete command when calling the help function, a list of all commands that start with the term you have entered is created.

Note

Output in pages

With long lists, the results are displayed as pages. If --more -- appears at the lower edge of the display, you can move to the next page with the spacebar. If the display is in pages, you cannot page back. You exit the page display with the q key.

2.7 General CLI commands

2.7.5.3 Completion of command entries

Description

The command interpreter of the Command Line Interface supports you when you enter commands.

As soon as the first characters of the command have been entered in the input line, the system can complete the entry as long as the character string is unambiguous.

This can be repeated after entering further characters.

Procedure

Enter the first characters of the command. Press the tab key.

Result

The command interpreter completes the input as long as the command is unambiguous.

If you enter a character string that cannot be completed to form a command, an error message is displayed.

- The command is not unique: % Ambiguous Command
- The command is unknown: % Invalid Command
- The command is incomplete: % Incomplete command

If the entry is not yet complete, enter further characters.

With ?, you obtain a list of the possible commands.

Repeat this if necessary until the command is complete and can execute.

2.7.5.4 Abbreviated notation of commands

Description

The command interpreter of the Command Line Interface also detects commands if only the first character of the command or its parts is entered.

This is only possible if all the parts of the abbreviated input can be assigned to exactly one command or to the parts of the command.

Example

The show event config command can be replaced by the expression sh e c.

2.7.5.5 Reusing the last used commands

Description

The Command Line Interface saves the last 14 commands used in a list assigned to the particular mode. This can then only be called up in the relevant mode.

Example:

In the Global Configuration mode, all entered commands are saved. If you entered commands earlier in the Interface Configuration mode, these commands are not included in the list of the Global Configuration mode. You can only call up and reuse these commands in the Interface Configuration mode.

Procedure

You can page through the list of the commands most recently used using the arrow up and arrow down keys.

If the command you are looking for is displayed, you can edit the command line as required and execute the command with the enter key.

Further notes

You display the list of commands last used with the show history command. This function is available in every mode.

See also

show history (Page 44)

2.7.5.6 Working through a command sequence

Separators for multiple commands in one line

You can call up several commands one after the other in one line in the CLI.

Separate the commands with a semicolon (;).

After completing your input, start the processing of this command sequence with the enter key.

Example

The command sequence

CLI#conf t; int vlan 1; no ip address dhcp; ip address 192.168.1.1 255.255.255.0; end; write startup

has the same effect as: CLI#conf t CLI(config)#int vlan 1 CLI(config-if-vlan-1)#no ip address dhcp CLI(config-if-vlan-1)#ip address 192.168.1.1 255.255.255.0

General

2.7 General CLI commands

```
CLI(config-if-vlan-1)#end
CLI#write startup
```

2.7.5.7 clear history

Description

This command	deletes the	last commands	vou entered
This command		last commanus	you entereu.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

clear history

Result

The last commands to be input are deleted. You display a list of the last 14 commands entered with the show history command.

2.7.5.8 The "show" commands

This section describes commands with which you display various settings.

show history

Description

This command shows the last 14 commands you entered.

The commands are listed in the order in which they were called up. The show history command is listed as the last command to be entered.

The list depends on the mode. In the Global configuration mode, the last 14 commands entered in this mode are displayed. These commands are not included in the list of the Interface configuration mode.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show history

Result

The list of used commands is displayed.

General

2.7 General CLI commands

Configuration

The following is described in this section:

- System settings
- Saving and loading configurations and firmware

3.1 System

This section describes commands with which general system properties can be displayed and configured.

3.1.1 The "show" commands

This section describes commands with which you display various settings.

3.1.1.1 show cli-console-timeout

Description

This command shows the global configuration for the timeout of the CLI console.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> Or cli#

Syntax

Call the command without parameters:

show cli-console-timeout

Result

The configuration for the timeout is displayed.

Configuration	
3.1 System	
3.1.1.2	show coordinates
Description	
	This command shows the system coordinates.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Of cli#
Syntax	
	Call the command without parameters:
	show coordinates
Result	
	The system coordinates are displayed.
3.1.1.3	show device information
Description	
	This command shows information about the device.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
•	
Syntax	
	Call the command without parameters:
	show device information
Descult	
Kesult	
	I ne following information about the device is displayed:
	• MAC address of the device

• Serial Number

	 System name 		
	 System contact 	t	
	 System locatio 	n	
	 Device Type 		
	 Restart counte 	r	
	 Config Save m 	ode	
	Config Change	e: This indicates whether or not the current	t configuration has been saved.
	 Login Authenti on the RADIUS 	cation mode: This indicates whether the a S server.	uthentication is made locally or
3.1.1.4	show interfaces		
Description			
	This command sh	ows the status and the configuration of on	e, several or all interfaces.
Requirement			
	You are in the Use	er EXEC mode or in the Privileged EXEC	mode.
	The command pro	ompt is as follows:	
	cli> Or cli#		
Syntax			
	Call up the comm	and with the following parameters:	
	show interfaces		
	[{	-tumoX(intorface_id)]	
	[{descriptic	on status}]	
	 (11) 20 (11) 20 -	34(1_4094) >1	
	{vian <vian }]</vian 	LU (1-4094) / }	
	The parameters h	ave the following meaning:	
	Parameter	Description	Range of values / note
	interface-type	Type or speed of the interface	Enter a valid interface.
	interface-id	Module no. and port no. of the interface	
	description	Shows the description of the interface	-

Shows the status of the interface

Keyword for a VLAN connection

Number of the addressed VLAN

status

vlan-id

vlan

• System up time

-

_

1 ... 4094

Configuration	
3.1 System	
	For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".
	If you do not select any parameters from the parameter list, the status and configuration of all available interfaces will be displayed.
Result	
	The status and the configuration of the selected interfaces are displayed.
3.1.1.5	show im
Description	
	This command shows information on device-specific vendor and maintenance data such as the article number, serial number, version numbers etc.
Requirement	
•	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Syntax	
	Call the command without parameters:
	show im
Result	
Rooun	The information is displayed.
3.1.1.6	show interface mtu
Description	
	With this command, you show the setting for the Maximum Transmission Unit (MTU) of the interfaces on the device.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call up the command with the following parameters:

The parameters have the following meaning:

Parameter	Description	Range of values / note
Vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If no parameters are specified, the settings for all interfaces are displayed.

Result

The settings are displayed.

3.1.1.7 show interfaces ... counters

Description

This command shows the counters of one, several or all interfaces.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> Or cli#

Syntax

Call up the command with the following parameters:

```
show interfaces
[{<interface-type><interface-id>]|{vlan<vlan-id(1-4094)>}]counters
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameter from the parameter list, the entries are displayed for all available counters.

Result

The counters of the selected interfaces are displayed.

3.1.1.8 show lldp neighbors

Description

This command shows the current content of the neighborhood table.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameter assignment:

show lldp neighbors

Result

The neighborhood table is displayed.

3.1.1.9 show lldp status

Description

This command shows per port whether LLDP frames are sent or received.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

show lldp status [port {<interface-type> <interface-id>}]

The parameters have the following meaning:

Parameter	Description	Range of values/note
port	Keyword for a port description.	-
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of interfaces and addresses, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The information is displayed.

3.1.1.10 show ip interface

Description

This command shows the configuration of one, several or all IP interfaces.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: Thiscli> or cli#

Configuration

3.1 System

Syntax

Call up the command with the following parameters:

```
show ip interface
  [{
    Vlan <vlan-id(1-4094)> |
    <interface-type> <interface-id> |
    loopback
}]
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
Vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
interface- type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	
loopback	Loopback	-

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameter from the parameter list, the configuration is displayed for all available IP interfaces.

Result

The configuration of the selected IP interface is displayed.

3.1.1.11 show versions

Description

This command shows the versions of the hardware and software of the device.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show versions

Result

The following settings are displayed:

- Basic device
- Name
- Revision
- Order ID
- Firmware
- Bootloader
- Description
- Version
- Date

3.1.2 clear counters

Description

With this command, you reset the counters of an interface.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

clear counters [<interface-type><interface-id>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface-type	Type or speed of the interface	Specify a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If no parameters are specified, the counters for all interfaces are reset.

Result

The counters of the interface are reset.

Further notes

You can display the statistical information of the interfaces with the $\tt show \ interfaces \ \ldots \ counters \ command.$

3.1.3 configure terminal

Description

With this command, you change to the Global configuration mode.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

configure terminal

Result

You are now in the Global configuration mode. The command prompt is as follows: cli(config)#

Further notes

You exit the Global configuration mode with the ${\tt end}$ command.

3.1.4 clear line vty

Description

With this command, you close a console session on the device. With the forceful-clear option, you close a session and that is not reacting.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

cli#

Syntax

Call up the command with the following parameters:

clear line vty {<line-number(2-9)>|all}[forceful-clear]

The parameters have the following meaning:

Parameter	Description	Range of values / note
line-number	Number of the connection that will be terminated	2 9
all	terminates all connections	-
forceful-clear	closes a session that is not reacting	-

Result

The console session is closed.

Further notes

You show the logged-on users with the show users command.

3.1.5 disable

Description

With this command, you close the Privileged EXEC mode. You are then in the User EXEC mode.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

Configuration	
3.1 System	
	disable
Result	
	You are in the User EXEC mode.
	The command prompt is as follows:
	cli>
3.1.6	enable
Description	
	With this command, you change to the Privileged EXEC mode.
_	
Requirement	
	The command prompt is as follows:
Syntax	
	Call the command without parameters:
	enable
Result	
	You are prompted to enter the administrator password. After logging in successfully, you are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
217	locout
5.1.7	logout
Description	
	With this command, you exit the Command Line Interface.

If you are connected to the device via telnet, the session is closed.

Requirement				
	You are in the User EXEC mode or in the Privileged EXEC mode.			
	The command prompt i	The command prompt is as follows:		
	cli> Of cli#			
Syntax				
•	Call the command with	out parameters:		
	logout			
	109000			
Result				
1 (ooun	The CLI session is end	ed and the Windows Login promotis	displayed	
	The CLI Session is end	ed and the windows Login prompt is	uispiayeu.	
3.1.8 r	pina			
Description				
Description	With this command, you request a response from a device in the network			
	This ellows you to shock whether or not enother and is reachable			
	I his allows you to check whether or not another hode is reachable.			
Deminent				
Requirement				
	You are in the User EXEC mode or in the Privileged EXEC mode.			
	The command prompt i	s as follows:		
	cli> Of cli#			
Syntax				
	Call up the command with the following parameters:			
	ping [ip] { <destination-address> fqdn-name <fqdn> } [size <byte(0-2080)>] [count <packet (1-10)="" count="">] [timeout <seconds(1-100)>]</seconds(1-100)></packet></byte(0-2080)></fqdn></destination-address>			
	The parameters have the the parameters have the time the parameters have the parameter	ne following meaning:		
	Parameter	Description	Range of values / note	
	ip	Uses an IPv4 address	-	
	destination-address	Address of the called node	Enter a valid IPv4 address.	
	fqdn-name	Keyword for a domain name	-	
	F.ÖDN	Domain name (Fully Qualified Domain Name) of the called node	Maximum of 100 characters	

Keyword for the size of the packets to

be transferred

-

size

Configuration

3.1 System

Parameter	Description	Range of values / note
byte	Keyword for the size of the packets in	0 2080
	bytes	Default: 32
count	Keyword for the number of packets to be requested	-
packet_count	Number of packets	1 10
		Default: 3
timeout	Response wait time	-
	If this time expires, the request is re- ported as "timed out".	
seconds	Time to the timeout in seconds	1 100
		Default: 1

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameters from the parameter list, the default values are used.

Result

The messages relating to the response of the called node are displayed.

3.1.9 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

3.1.9.1 coordinates height

Description

With this command, you enter a height coordinate.

Requirement

You are in the Global Configuration mode. The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

coordinates height <meter>

The parameter has the following meaning:

Parameter	Description	Range of values / note
meter	Input box for the height coordinate	max. 32 characters To use spaces in the entry, enter the height coordinate in quotes: coordinates height "123 456"

Result

The height coordinate is created.

3.1.9.2 coordinates latitude

Description

With this command, you enter a latitude coordinate.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

coordinates latitude <latitude>

The parameter has the following meaning:

Parameter	Description	Range of values / note
latitude	Input box for the latitude coordinate	max. 32 characters To use spaces in the entry, enter the latitude coordinate in quotes: coordinates latitude "123 456"

Result

The latitude coordinate is created.

Configuration

3.1 System

3.1.9.3 coordinates longitude

Description

With this command, you enter a longitude coordinate.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

coordinates longitude <longitude>

The parameter has the following meaning:

Parameter	Description	Range of values / note	
longitude	Input box for the longitude coordinate	max. 32 characters	
		To use spaces in the entry, enter the longitude coordinate in	
		quotes: coordinates longitude "123 456"	

Result

The longitude coordinate is created.

3.1.9.4 interface

Description

With this command, you change to the Interface configuration mode.

There you can edit the settings for one interface. You select the interface with the parameters of this command. If you specify a logical interface that does not exist, it will be created. The name of the selected interface is displayed in the command prompt.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

interface{vlan<vlan-id(1-4094>|<interface-type><interface-id>}

The parameters have the following meaning:

Parameter	Description	Values
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
interface-type	Type or speed of the interface	Specify a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

You are in the Interface configuration mode.

The command prompt is as follows:

```
cli(config-if-$$$)#
```

The placeholder \$\$\$ is replaced by the following name of the interface:

Type of interface	Command prompt
vlan	cli(config-if-vlan-\$)#
fastethernet	cli(config-if-F-X)#

The placeholders \$ and x stand for the numbering of the interface.

The ranges of values from the physical interfaces depend on the hardware configuration.

Further notes

You exit the Interface configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

You delete a logical interface with the no interface command.

You display the status and the configuration of the interfaces with the ${\tt show}$ interfaces command.

3.1.9.5 no interface

Description

With this command, you delete a logical interface.

Requirement

You are in the Global Configuration mode.

Configuration

3.1 System

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no interface{vlan<vlan-id(1-4094)>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094

Result

The logical interface is deleted.

Further notes

You configure an interface with the interface command.

You display the status and the configuration of the interfaces with the $\tt show interfaces$ command.

3.1.9.6 cli-console-timeout

Description

With this command, you enable the automatic logout and you configure the timeout setting for the CLI.

Note

No automatic logout from the CLI

If the connection is not terminated after the set time, check the setting of the "keepalive" function on the Telnet client. If the set interval is shorter than the configured time, the lower value applies. You have set, for example, 300 seconds for the automatic logout and 120 seconds for the "keepalive" function. In this case, a packet is sent every 120 seconds that keeps the connection up.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

cli-console-timeout [seconds(60-600)]

The parameters have the following meaning:

Parameter	Description	Range of values / note
seconds	Time in seconds until automatic logout	60 600
	after the last entry	Default: 300

Result

The time is configured and automatic logout is enabled.

Further notes

You disable automatic logout with the no cli-console-timeout command. You display the current timeout setting with the show cli-console-timeout command.

3.1.9.7 no cli-console-timeout

Description

With this command, you disable the automatic logout.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameters:

no cli-console-timeout

Result

Automatic logout is disabled.

Further notes

You enable automatic logout with the cli-console-timeout command. You display the current timeout setting with the show cli-console-timeout command.

3.1.9.8 system contact

Description

With this command, you enter contact information for the system.

Requirement

You are in the Global Configuration mode. The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

system contact <contact info>

The parameter has the following meaning:

Parameter	Description	Range of values / note
contact info	Input box for contact information	max. 255 characters

Result

The contact information is created in the system.

3.1.9.9 system location

Description

With this command, you enter the location information for the system.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

system location <location name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
location name	Input box for the location information	max. 255 characters

Result

The location information is created in the system.

3.1.9.10 system name

Description

This command, you enter a name for the system.

Requirement

You are in the Global Configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call up the command with the following parameters:

system name <system name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
system name	Input box for the name	max. 255 characters

Result

The name is created in the system.

3.1.10 Commands in the Interface configuration mode

This section describes commands that you can call up in the interface configuration mode. Depending on the Interface selected, various command sets are available.

In the Global configuration mode, enter the interface command to change to this mode.

Commands relating to other topics that can be called in the interface configuration mode can be found in the relevant sections.

- If you exit the Interface configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the Interface configuration mode with the end command, you return to the Privileged EXEC mode.

3.1.10.1 alias

Description

With this command, you assign a name to an interface. The name only provides information and has no effect on the configuration.

Requirement

You are in the Interface Configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

alias <interface-name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
interface-name	Name of the interface	max. 63 characters

Result

The interface was assigned a name.

Further notes

You delete the name of the interface with the ${\tt no}$ alias command.

3.1.10.2 no alias

Description

With this command, you delete the name of the interface.

Requirement

You are in the Interface Configuration mode. The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call the command without parameter assignment: no alias

Result

The name of the interface is removed.

Further notes

You configure the name of the interface with the alias command.

3.1.10.3 duplex

Description

Electrical interfaces can be operated in full duplex mode or half duplex mode. The options here depend on the connected device.

Optical connections are always operated in full duplex mode since they have a fiber for each transmission direction.

With this command, you configure the duplex mode of an interface. The same mode must be set for connected interfaces.

Requirement

- Autonegotiation is disabled.
- You are in the Interface configuration mode of an electrical interface. The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

duplex {full|half}

Configuration 3.1 System

	The parameters have	the following meaning:	
	Parameter	Description	Range of values / note
	full	The Interface will be operated in full duplex mode.	Default: full
	half	The Interface will be operated in half duplex mode	-
Result			
	The duplex mode of t	he interface is configured.	
Further notes			
	You can reset the dup command.	plex mode of the Interface to the defau	It value with the no duplex
	You disable autonego	ptiation with the no negotiation comma	and.
3.1.10.4	no duplex		
Description			
	With this command, y	you reset the duplex mode of an interfa	ace to the default value.
	The default value is f	ull.	
Requirement			
	You are in the Interfa	ce configuration mode.	
	The command promp	t is as follows:	
	cli(config-if-\$\$\$)#		
Svntax			
-j	Call the command wit	thout parameters:	
	no duplex		
Result			
	The duplex mode of t	he Interface is reset to the default valu	le.
Further notes			
	You configure the duplex mode of the interface with the $duplex$ command.		

3.1.10.5 Ildp

Description

With this command, you enable the sending and receipt of LLDP packets on the interface.

Requirement

You are in the Interface Configuration mode. The command prompt is as follows: cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

lldp{transmit|receive}

The parameters have the following meaning:

Parameters	Description
transmit	the sending of LLDP packets is enabled
receive	the receipt of LLDP packets is enabled

At system start or when using the restart command with the option memory or factory, the following defaults apply:

• Sending and receipt of LLDP packets are enabled.

Note

Enabling both options

When you call this command, you can only select one option.

If you want to enable both options, call up the command again.

Result

The setting is configured.

Further notes

You disable the sending or receipt of LLDP packets with the no lldp command. You display the status of LLDP with the show lldp status command.

3.1.10.6 no lldp

Description

With this command, you disable the sending and receipt of LLDP packets on the interface.

Requirement

You are in the Interface Configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

no lldp{transmit|receive}

The parameters have the following meaning:

Parameters	Description
transmit	the sending of LLDP packets is enabled
receive	the receipt of LLDP packets is disabled

Note

Disabling both options

When you call this command, you can only select one option.

If you want to disable both options, call up the command again.

Result

The setting is configured.

Further notes

You enable the sending or receipt of LLDP packets with the <code>lldp</code> command. You display the status of LLDP with the <code>show lldp status</code> command.

3.1.10.7 negotiation

Description

With this command, you enable autonegotiation of connection parameters on an interface.
	Autonegotiation must be set for every interface of connected interfaces.
Requirement	
	You are in the Interface Configuration mode.
	The command prompt is as follows:
	cli(config-if-\$\$\$)#
Syntax	
	Call the command without parameters:
	negotiation
Result	
	The automatic negotiation of connection parameters on an interface is activated.
Further notes	
	You disable the autonegotiation of connection parameters with the no negotiation command.
3.1.10.8 n	o negotiation
Description	
	With this command, you disable autonegotiation of connection parameters on an interface.
Requirement	
	You are in the Interface Configuration mode.
	The command prompt is as follows:
	cli(config-if-\$\$\$)#
Syntax	
	Call the command without parameters:
	no negotiation
Result	
	The automatic negotiation of connection parameters on an interface is deactivated.

3.1 System

Further notes

You enable the autonegotiation of connection parameters with the ${\tt negotiation}$ command.

3.1.10.9 mtu

Description

With this command, you configure the size of the Maximum Transmission Unit (MTU) for an interface.

Requirement

• The Interface must be shut down.

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

mtu <frame-size(64-1514)>

The parameter has the following meaning:

Parameter Description		Range of values / note
frame-size Size of the MTU in bytes		64 1514

At system start or when using the restart command with the option memory or factory, the following defaults apply:

• The size of the MTU is configured to 1500 bytes.

Result

The setting for the size of the MTU is configured.

Further notes

You can shut down the interface with the ${\tt shutdown}$ complete command.

You display this setting with the ${\tt show}$ interface ${\tt mtu}$ command.

You display this setting and other information with the show interfaces command.

3.1.10.10 shutdown complete Description With this command, you shut down the interface. Requirement You are in the Interface Configuration mode. The command prompt is as follows: cli(config-if-\$\$\$)# **Syntax** Call the command without parameters: shutdown complete Result The Interface is shut down. Note If you use this command in the Interface Configuration mode for a VLAN (input prompt CLI (config-if-vlan-\$) #, management access to the device is no longer possible. This relates to configuration using CLI, WBM and SNMP. Access is only possible again after resetting the device to the factory settings with the Reset button.

Further notes

You activate the interface with the no shutdown command.

You can display the status of this function and other information with the show interfaces command.

Configuration	
3.1 System	
3.1.10.11	no shutdown
Description	
	With this command, you shut down an interface.
Requirement	
	You are in the Interface Configuration mode.
	The command prompt is as follows:
	cli(config-if-\$\$\$)#
Syntax	
	Call the command without parameters:
	no shutdown
Result	
	The Interface is activated.
Further notes	
	You activate the interface with the shutdown complete command.
	You can display the status of this function and other information with the ${\tt show}$
	interfaces command .
3.1.10.12	speed
Description	
	With this command, you configure the transmission speed of an interface.
	Note
	Availability of this function
	The transmission speed can only be configured for electrical data transfer.
	On optical connections, the transmission speed is fixed.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

speed {10|100}

The parameters have the following meaning:

Parameter	Description
10	Transmission speed 10 Mbps
100	Transmission speed 100 Mbps

Result

The transmission speed of the interface is configured.

3.2 Load and Save

This section describes commands for displaying, copying, saving and downloading files for the device.

Note

Note that during the installation of a previous version, the configuration data can be lost. In this case, the device starts up with the factory configuration settings after the firmware has been installed.

3.2.1 The "show" commands

This section describes commands with which you display various settings.

3.2.1.1 show loadsave files

Description

This command shows the current Load&Save file information.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show loadsave files

Result

The current Load&Save file information is displayed.

3.2.1.2	show loadsave tftp
Description	This command shows the current configuration of the TFTP server for Load&Save.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Syntax	
	Call the command without parameters:
	show loadsave tftp
Result	The current configuration of the TFTP server for Load&Save is displayed.
3.2.2	load tftp
Description	With this command, you load the files from a TFTP server.
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	
	Call up the command with the following parameters:
	load tftp {ipv4 <ucast_addr> fqdn-name <fqdn>} [port <tcp (1-65535)="" port="">] file <filename> filetype <filetype></filetype></filename></tcp></fqdn></ucast_addr>

3.2 Load and Save

The parameters have the following meaning:

Parameter	Description Range of values / note		
ipv4	Keyword for an IPv4 address		
ucast_addr	IPv4 unicast address of the TFTP Enter a valid unicast IPv4 dress.		
fqdn-name	Keyword for a domain name	-	
FQDN	Domain name (Fully Qualified Domain Name) of the TFTP server	Maximum of 100 characters	
port	Keyword for the port of the server via - which the TFTP connection runs		
tcp port	Number of the port	1 65535	
file	eyword for a file name to be assigned -		
filename	Name of the file Maximum of 100 character		
filetype	Keyword for the file type to be loaded -		
filetype	Name of the file type	Maximum of 100 characters	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The file is loaded on the device from the TFTP server.

3.2.3 save filetype

Description

With this command, you save files on a TFTP server.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call up the command with the following parameters:

save filetype <filetype> tftp {ipv4 <ucast_addr> | fqdn-name <FQDN>} [port <tcp port
(1-65535)>] file <filename>

The parameters have the following meaning:

Parameter	Description	Range of values / note		
filetype	Keyword for a file type to be loaded	-		
filetype	Name of the file type	Maximum of 100 characters		
tftp	Keyword for a TFTP server	-		
ipv4	Keyword for an IPv4 address			
ucast_addr	IPv4 unicast address of the TFTP Enter a valid unicast I dress.			
fqdn-name	Keyword for a domain name	-		
FQDN	Domain name (Fully Qualified Domain Name) of the TFTP server	Maximum of 100 characters		
port	Keyword for the port of the server via which the TFTP connection runs	-		
tcp port	Number of the port	1 65535		
file	Keyword for a file name to be assigned -			
filename	Name of the file	Maximum of 100 characters		

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The file is saved on the TFTP server.

3.2.4 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

3.2.4.1 loadsave

Description

With this command, you change to the LOADSAVE configuration mode.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

3.2 Load and Save

cli(config)# **Syntax** Call the command without parameters: loadsave Result You are now in the LOADSAVE configuration mode. The command prompt is as follows: cli(config-loadsave)# Further notes You exit the LOADSAVE configuration mode with the exit command. 3.2.5 Commands in the LOADSAVE configuration mode This section describes commands that you can call up in the LOADSAVE configuration mode. In the Global Configuration mode, enter the loadsave command to change to this mode. You display the valid file types for the commands in the LOADSAVE Configuration mode with the global command show loadsave tftp. If you exit the LOADSAVE configuration mode with the exit command, you return to the Global Configuration mode. If you exit the LOADSAVE configuration mode with the end command, you return to the Privileged EXEC mode. 3.2.5.1 delete Description With this command, you call up the possible files or delete a specific file. Requirement You are in the LOADSAVE configuration mode. The command prompt is as follows: cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

delete{showfiles|filetype<filetype>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
showfiles	Shows the available files	-
filetype	Keyword for the file type to be deleted	-
filetype	Name of the file type	max. 100 characters

Result

The files are displayed or the file is deleted.

Further notes

With the "show loadsave files" command, you can display the file types.

3.2.5.2 tftp filename

Description

With this command, you assign a name to a file type.

The file type decides the type that is affected by the tftp load or tftp save action. The name decides the file to be copied to or from the TFTP server.

Requirement

You are in the LOADSAVE configuration mode.

The command prompt is as follows:

cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

tftp filename {showfiles|filetype< filetype >name<filename>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
showfiles	Shows the available files	-
filetype	Keyword for a file type to be assigned a name	-
filetype	Name of the file type	max. 100 characters

3.2 Load and Save

Parameter	Description	Range of values / note
name	Keyword for a file name to be assigned to the file type	-
filename	Name of the file	max. 100 characters

Result

The file types are displayed or the file type is assigned a name.

Further notes

With the "show loadsave files" command, you can display the file types.

3.2.5.3 tftp load

Description

With this command, you load a file from a TFTP server into the file system of the device. The TFTP protocol is used for the transfer. You can also display a list of available files.

Requirement

- The name of the file is specified
- You are in the LOADSAVE configuration mode. The command prompt is: cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

tftp load{showfiles|filetype<filetype>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
showfiles	Shows the available files	-
filetype	Keyword for a file type to be loaded	-
filetype	Name of the file type	max. 100 characters

Result

The file types are displayed or the file is downloaded to the device.

Further notes				
	You configure the name of the file with the tftp filename command.			
	With the "show los	With the "above loadeave files" command you can display the file types		
			the me types.	
3.2.5.4	tftp save			
Description				
	With this comman TFTP protocol is u	d, you copy a file from the file system of used for the transfer. You can also displa	the device to a TFTP server. The y a list of available files.	
Requirement				
	 The name of the second s	ne file is specified		
	• You are in the The command cli(config-loa	 You are in the LOADSAVE configuration mode. The command prompt is: cli(config-loadsave)# 		
Syntax				
	Call up the comm	and with the following parameters:		
	The nerver tere b			
	The parameters h	ave the following meaning:		
	Parameter	Description	Range of values / note	
	showfiles	Shows the available files	-	
	filetype	Keyword for a file type to be loaded	-	
	filetype	Name of the file type	max. 100 characters	
Result				
Result	The file types are	displayed or the file is conied		
	The life types are	displayed of the life is copied.		
Further notes				
	You configure the name of the file with the tates stronger command			
	With the " a second second very second index the file trace			
	vviuluie snow loa	ausave files command, you can display	ине ше турез.	
3.2.5.5	tftp server			

Description

With this command, you configure the access to a TFTP server.

3.2 Load and Save

Requirement

You are in the LOADSAVE configuration mode.

The command prompt is as follows:

cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

tftp server {ipv4 <ucast-addr> | fqdn-name <FQDN>} [port<tcp port(1-65535)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IPv4 address	-
ucast-addr	Value for an IPv4 unicast address	Enter a valid IPv4 unicast ad- dress.
fqdn-name	Keyword for a domain name	-
FQDN	Domain name (Fully Qualified Domain Name)	Maximum 100 characters
port	Keyword for the port of the server via which the TFTP connection runs	-
tcp port	Number of the port	1 65535

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The settings for the access to the selected TFTP server are configured.

3.2.5.6 password

Description

With this command, you activate and configure the password for a file.

Requirement

You are in the LOADSAVE configuration mode.

The command prompt is as follows:

cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

password {showfiles|filetype<filetype>[pw<password>]}

The parameters have the following meaning:

Parameter	Description	Values
showfiles	Shows the available files	-
filetype	Shows that the file type follows that will be loaded	-
filetype	Name of the file type	max. 100 characters
pw	Keyword for the password	-
password	Password	Enter the password for the file.

Result

The password for the file is configured and activated.

Further notes

You disable the password with the no password command.

3.2.5.7 no password

Description

With this command, you disable the password for a file.

Requirement

You are in the LOADSAVE configuration mode.

The command prompt is as follows:

cli(config-loadsave)#

Syntax

Call up the command with the following parameters:

no password {showfiles|filetype<filetype>}

The parameters have the following meaning:

Parameter	Description	Values
showfiles	Shows the available files	-
filetype	Shows that the file type follows that will be loaded	-
filetype	Name of the file type	max. 100 characters

3.2 Load and Save

Result

The password for the file is disabled.

Further notes

You enable the password for the user certificate with the password command.

3.3 Reset and Defaults

This section describes commands for restarting the device and for restoring the original configuration.

3.3.1 restart

Description

With this command, you restart the device.

Select one of the following configuration settings:

- Device restart with the current configuration
- Device restart with the factory configuration settings with the exception of the following parameters:
 - IP addresses
 - Subnet mask
 - IP address of the default gateway
 - DHCP client ID
 - DHCP
 - System name
 - System location
 - System contact
 - User names and passwords
 - Mode of the device
- Device restart with the factory configuration settings.

Requirement

You are in the Privileged EXEC mode.

The command prompt is as follows:

cli#

3.3 Reset and Defaults

Syntax

Call up the command with the following parameters:

restart[{memory|factory}]

The parameters have the following meaning:

• if no parameters are specified: restarts the system with the current configuration

Parameter	Description
memory	Resets the system to the factory configuration settings and restarts the system. The parameters listed above are unaffected by a reset.
factory	Resets the system to the factory configuration settings and restarts the system.

Note

By resetting to the factory configuration settings, the device loses its configured IP address and is reachable again with the IP address 192.168.1.1 set in the factory.

Result

The device is restarted with the selected settings.

3.4 Configuration Save & Restore

This section describes commands for displaying, saving and restoring configuration settings.

3.4.1 The "show" commands

This section describes commands with which you display various settings.

3.4.1.1 show running-config

Description

This command shows configuration settings of the device.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

The parameters have the following meaning:

Parameter	Description	Range of values
syslog	Shows the configuration settings of the Syslog function.	-
dhcp	Shows the configuration settings of the Dynam- ic Host Configuration Protocol.	-
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
interface	Shows that an interface description follows.	-
interface-type	Type or speed of the interface	Specify a valid interface.
interface-id	Module no. and port no. of the interface	
ррр	Keyword for the PPP interface	
id	Number of the interface	0 6
ssh	Shows the configuration settings of the Secure Shell protocol.	-

3.4 Configuration Save & Restore

Parameter	Description	Range of values
ssl	Shows the configuration settings of the Secure Sockets Layer protocol.	-
ip	Shows the configuration settings of the Internet protocol.	-
snmp	Shows the configuration settings of the Simple Network Management protocol.	-
http	Shows the configuration settings of the Hyper- text Transfer Protocol.	-
sntp	Shows the configuration settings of the Simple Network Time Protocol.	-
http	Shows the configuration settings of the Hyper- text Transfer Protocol.	-
auto-logout	Shows the configuration settings of the auto logout function.	-
time	Shows the configuration settings of the system time.	-
ntp	Shows the configuration settings of the Network Time Protocol.	-
auto-save	Shows the configuration settings of the auto save function.	-
events	Shows the configuration settings of the system events.	-
firewall	Shows the configuration settings of the firewall.	-
firewallnat	Shows the configuration settings of the NAT.	-
openvpn	Shows the configuration settings of OpenVPN.	
sinemarc	Shows the configuration settings of the SINEMA RC connection.	-
proxyserver	Shows the configuration settings of the proxy servers.	-
srs	Shows the configuration settings of SRS.	-
ipsec	Shows the configuration settings of the IPsec.	-
ddnsclient	Shows the configuration settings of the dynamic DNS client.	-
dnsclient	Shows the configuration settings of the DNS client.	-
dnsproxy	Shows the configuration settings of the DNS proxy.	-
modem	Shows configuration of the device.	-
all	Shows all configuration settings.	-

For information on names of addresses and interfaces, refer to the section "Auto-Hotspot".

If you call up the command without parameters, only the active operational settings of all modules and all interfaces that do not match the preset values are displayed.

Result

The selected configuration settings of the device are displayed.

3.4.2 write startup-config

Description

With this command, you save the changes to the configuration in the configuration file. The use of this command is required in the Trial mode. It can also be used in "auto save mode".

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows: *cli# **Or** cli#

Syntax

Call the command without parameter assignment:

write startup-config

Result

The changes are saved in the configuration file. Use the restart command without parameters to restart the system with this configuration.

Further notes

You enable the auto save function or disable the Trial mode with the auto-save command. You disable the auto save function or enable the Trial mode with the no auto-save command.

3.4.3 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

3.4 Configuration Save & Restore

3.4.3.1 auto-save

Description

The CLI can save changes to the configuration automatically.
If you first want to test changes made to the configuration so that you can discard them afterwards if necessary, you can disable the auto save function.
You are then in the Trial mode.
Changes to the configuration that you have not saved, are indicated by an asterisk in front of the command prompt: *cli(...)#.
You save the changes to the configuration with the write startup-config command.
With the auto-save command, you enable the auto save function.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

auto-save

As default the function is "enabled".

Result

The auto save function is enabled.

Further notes

You save changes to the configuration in the Trial mode with the $\tt write \ startup-config$ command.

You disable the function with the no auto-save command.

You can display the status of this function and other information with the $\tt show \ device$ information command.

3.4 Configuration Save & Restore

3.4.3.2	no auto-save
Description	With this command, you disable the auto save function.
Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	no auto-save
Result	The auto save function is disabled. The Trial mode is activated.
Further notes	
	You enable the function with the auto-save command.
	You can display the status of this function and other information with the show device information command.
	You save changes to the configuration in the Trial mode with the write startupconfig command.

3.4 Configuration Save & Restore

Functions specific to SCALANCE

This part contains the sections that describe functions specific to SCALANCE.

4.1 PLUG

The C-PLUG or KEY-PLUG stores the configuration of a device and can therefore transfer the configuration of the old device to the new device when a device is replaced.

In addition to the configuration, the KEY-PLUG also contains a license that enables the use of certain functions.

This section describes commands relevant for working with the C-PLUG or KEY-PLUG.

4.1.1 The "show" commands

This section describes commands with which you display various settings.

4.1.1.1 show plug

Description

This command shows the current information of the PLUG.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show plug

Result

The current information of the PLUG is diplayed.

4.1.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the $\tt end$ or $\tt exit$ command and are then in the Privileged EXEC mode again.

4.1.2.1 plug

Description

With this command, you change to the Plug Configuration mode.

Requirement

You are in the Global Configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameters:

plug

Result

You are now in the Plug Configuration mode. The command prompt is as follows:

cli(config-plug)#

Further notes

You exit the Plug Configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

4.1.3 Commands in the Plug Configuration mode

This section describes commands that you can call up in the Plug Configuration mode.

In the Global Configuration mode, enter the ${\tt plug}$ command to change to this mode.

- If you exit the Plug Configuration mode with the exit command, you return to the Global Configuration mode.
- If you exit the Plug Configuration mode with the end command, you return to the Privileged EXEC mode.

4.1.3.1 factoryclean

Description

With this command, you delete the device configuration stored on the PLUG.

Requirement

- There is a device configuration on the PLUG.
- You are in the Plug Configuration mode. The command prompt is: cli(config-plug)#

Syntax

Call the command without parameters:

factoryclean

Result

The device configuration on the PLUG is deleted.

4.1.3.2 write

Description

With this command, you format the PLUG and copy the current device configuration to it.

Requirement

- The PLUG is formatted.
- You are in the Plug Configuration mode. The command prompt is: cli(config-plug)#

Functions specific to SCALANCE	-
4.1 PLUG	

Syntax

Call the command without parameter assignment:

write

Result

The current device configuration has been copied to the formatted PLUG.

4.2 WBM

On the device, you can limit the time available for access with Web Based Management. If no entry is made for a specific time, the WBM session is closed.

This section describes commands relevant for the configuration of this feature.

4.2.1 The "show" commands

This section describes commands with which you display various settings.

4.2.1.1 show web-session-timeout

Description

This command shows the timeout setting for the WBM.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show web-session-timeout

Result

The timeout setting for the WBM is displayed.

4.2.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

4.2.2.1 web-session-timeout

Description

With this command, you enable the automatic logoff and you configure the timeout setting for the WBM.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

web-session-timeout[seconds(60-3600)]

The parameter has the following meaning:

Parameter	Description	Range of values / note
seconds	Time in seconds until automatic logout	60 3600
	after the last entry	Default: 900

Result

The time is configured and automatic logout is enabled.

Further notes

You disable automatic logoff with the no web-session-timeout command. You display the current timeout setting with the show web-session-timeout command.

4.2.2.2 no web-session-timeout

Description

With this command, you disable the automatic logoff.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameters:

no web-session-timeout

Result

Automatic logoff is disabled.

Further notes

You enable automatic logoff with the web-session-timeout command. You display the current timeout setting with the show web-session-timeout command. 4.3 Digital input/output

4.3 Digital input/output

Introduction

The SCALANCE S device has a digital input/output. The connection is made using two 2-pin terminal blocks. You will find information about the pin assignment in the operating instructions of the device.

With CLI commands, you can open or close the digital output.

Application examples

- Digital input to signal one item of information, for example "door open", "door closed"
- Digital output, for example for "go to sleep" for devices on an automated guided transport system.

4.3.1 The "show" commands

This section describes commands with which you display various settings.

4.3.1.1 show digital input

Description

This command shows the current setting of the digital input.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters: show digital output

Result

The current setting of the digital input is displayed.

4.3.1.2	show digital output
Description	This command shows the current setting of the digital output.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	
•	Call the command without parameters: show digital output
Result	The current setting of the digital output is displayed.
4.3.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the $\tt end$ or $\tt exit$ command and are then in the Privileged EXEC mode again.
4.3.2.1	digital output closed
Description	
	This command closes the digital output.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#

Functions specific to SCALANCE

4.3 Digital input/output

Syntax	
	Call the command without parameters:
	digital output close
Result	
	The digital output is closed.
Eurther potes	
Further notes	
	You open the digital output with the digital output open command.
	You can display the setting of the digital output with the show digital output command
4.3.2.2	digital output open
D	
Description	
	This command opens the digital output.
Requirement	
-	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	digital output open
Result	
	The digital output is opened.
Further notes	
	You close the digital output with the digital output close command.
	You can display the setting of the digital output with the ${\tt show}$ digital output command

4.4 cRSP / SRS

This section describes commands for the cRSP / SRS.

Note

Common Remote Service Platform (cRSP) / Siemens Remote Service (SRS) is a remote maintenance platform via which remote maintenance access is possible.

To use the platform, additional service contracts are necessary and certain constraints must be kept to. If you are interested in cRSP / SRS, call your local Siemens contact or visit the following Web page (<u>http://www.industry.siemens.com/topics/global/en/service/remote-service/seiten/home.aspx</u>).

4.4.1 The "show" commands

This section describes commands with which you display various settings.

4.4.1.1 show srs

Description

This command shows whether use of cRSP / SRS is enabled and whether the device checks the received server certificate for validity.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

cli#

Syntax

Call the command without parameters:

show srs

Result

The configuration is displayed.

4.4 cRSP / SRS

4.4.1.2 show srs logon

Description

This command shows the configured destination server of the Common Remote Service Platform (cRSP) / Siemens Remote Service (SRS).

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show srs overview

Result

The configuration is displayed.

4.4.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

4.4.2.1 srs

Description

With this command, you change to the SRS configuration mode.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#
Syntax

Call the command without parameters:

srs

Result

You are now in the SRS configuration mode. The command prompt is as follows:

cli(config-srs)#

Further notes

You exit the SRS configuration mode with the ${\tt end} \ or \ {\tt exit}$ command.

4.4.3 Commands in the SRS configuration mode

This section describes commands that you can call up in the SRS configuration mode.

In the Global configuration mode, enter the srs command to change to this mode.

- If you exit the SRS configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the SRS configuration mode with the end command, you return to the Privileged EXEC mode.

4.4.3.1 logon

Description

With this command you specify which destination server will be used.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

logon {idx <num(1-20)> | all} {enabled|disabled}

The parameters	have	the	following	meaning:
----------------	------	-----	-----------	----------

Parameter	Description	Range of values / note
idx	Keyword for the number of the destina- tion server	-
index	Number corresponding to a specific destination server.	Enter the required number. 1 20
all	Uses all destination servers	-
enabled	Enables the entry	-
disabled	Disables the entry.	

Result

The specified destination server is enabled.

Further notes

You display this setting and other information with the show srs logon command. You disable the destination server with the no logon command.

You display the numbers of the destination servers with the ${\tt logon \ show-idx}$ command.

4.4.3.2 no logon

Description

With this command, you delete a specific destination server or all destination servers.

Requirement

You are in the SRS configuration mode. The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

no logon {idx <num(1-20)> | all}

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for the number of the destina- tion server	-
num	Number corresponding to a specific destination server.	Enter the required number.
all	Deletes all destination servers	-

Result

The specified destination server entry is deleted.

Further notes

You display the numbers of the destination servers with the logon show-idx command.

4.4.3.3 logon idx authority

Description

With this command, you configure the address of a specific destination server.

Requirement

You are in the SRS configuration mode. The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

logon idx <num(1-20)> authority <string(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
num	Number corresponding to a specific destination server.	Enter the required number.
string	Address of the destination server	Enter the address of the destina- tion server.

Result

The address of the destination server has been configured.

4.4 cRSP / SRS

Further notes

You display this setting and other information with the show srs logon command. You display the numbers of the entry with the logon show-idx command.

4.4.3.4 logon idx fragment

Description

With this command you can address local parts of the resource e.g. the anchor attribute of a Web page.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

logon idx <num(1-20)> fragment <string(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
num	Number corresponding to a specific destination server.	Enter the required number.
string	Part of the resource	Maximum of 255 characters

Result

The setting is configured.

Further notes

You display this setting and other information with the show srs logon command. You display the numbers of the destination servers with the logon show-idx command.

4.4.3.5 logon idx path

Description

With this command, you specify destination path to the resource.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

logon idx <num(1-20)> path <string(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
num	Number corresponding to a specific destination server.	Enter the required number.
string	Destination path to the resource.	Maximum of 255 characters

Result

The setting is configured.

Further notes

You display this setting and other information with the show srs logon command. You display the numbers of the destination servers with the logon show-idx command.

4.4.3.6 logon idx query

Description

With this command, you configure queries that can contain the parameter values for an application.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

logon idx <num(1-20)> query <string(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
num	Number corresponding to a specific destination server.	Enter the required number.
string	Query	Maximum of 255 characters

Result

The setting is configured.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt srs}\ {\tt logon}$	command.
You display the numbers of the destination servers with the logon show	-idx command.

4.4.3.7 logon show-idx

Description

With this command, you display the available destination servers.

Requirement

You are in the SRS configuration mode. The command prompt is as follows: cli(config-srs)#

Syntax

Call the command without parameter assignment:

Result

The destination servers are listed.

Further notes

You create a destination server entry with the logon addr command.

Description

With this command, you disable the use of SRS.

Requirement	
	You are in the SRS configuration mode.
	The command prompt is as follows:
	cli(config-srs)#
Suptov	
Syntax	Call the command without parameter assignment: shutdown
Result	The use of SRS is disabled.
Further notes	You enable the use with the no shutdown command.
4.4.3.8 r	no shutdown
Description	With this command, you enable the use of SRS.
Requirement	
	You are in the SRS configuration mode.
	The command prompt is as follows:
	cli(config-srs)#
Syntax	Call the command without parameter assignment:
	no shutdown
Result	The use of SRS is enabled.
Further notes	You disable use with the shutdown command.

4.4 cRSP / SRS

4.4.3.9 interval

Description

With this command, you configure the time after which the IPv4 address will be transferred to the required destination server.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

interval <time (60-86400)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
time	Interval in seconds	60 86400

Result

The interval is configured.

Further notes

You display this setting and other information with the show srs logon command.

4.4.3.10 validate cert

Description

With this command, you specify whether the device checks the received server certificate for validity.

Requirement

You are in the SRS configuration mode.

The command prompt is as follows:

cli(config-srs)#

Syntax

Call up the command with the following parameters:

validate cert {enabled|disabled}

The parameters have the following meaning:

Parameter	Description
enabled	Enables the check
disabled	Disables the check

Result

The setting is configured.

Further notes

You display this setting and other information with the ${\tt show}~{\tt srs}~{\tt command}.$

4.5 SINEMA RC

4.5.1 Introduction to the SRC section

This section describes commands for access to the SINEMA RC Server. You will find further information on this in the Operating Instructions of the SINEMA RC Server.

4.5.2 The "show" commands

This section describes commands with which you display various settings.

4.5.2.1 show sinemarc

Note

This command is only available with a KEY-PLUG.

Description

This command shows information on SINEMA RC.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

cli#

Syntax

Call the command without parameters:

show sinemarc

Result

The information is displayed.

4.5.3 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the $\tt end$ or $\tt exit$ command and are then in the Privileged EXEC mode again.

4.5.3.1 sinemarc

Note	
This command is only available with a KEY-PLUG.	

Description

With this command, you change to the SINEMARC configuration mode.

Requirement

You are in the Global configuration mode
The command prompt is as follows:
cli(config)#

Syntax

Call the command without parameters:

sinemarc

Result

You are now in the SINEMARC configuration mode. The command prompt is as follows:

cli(config-sinemarc)#

Further notes

You exit the SINEMARC configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

4.5.4 Commands in the SINEMARC configuration mode

This section describes commands that you can call up in the SINEMARC configuration mode.

In the Global configuration mode, enter the sinemarc command to change to this mode.

- If you exit the SINEMARC configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the SINEMARC configuration mode with the end command, you return to the Privileged EXEC mode.

4.5.4.1 addr

Note

This command is only available with a KEY-PLUG.

Description

With this command you configure the IPv4 address or the DNS host name of the SINEMA RC Server.

Requirement

You are in the SINEMARC configuration mode.

The command prompt is as follows:

cli(config-sinemarc)#

Syntax

Call up the command with the following parameters:

addr <ip addr|dns(50)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
ip_addr	IPv4 address	Enter the IPv4 address of the SINEMA RC Server.
dns	DNS host name	Enter the DNS host name of the SINEMA RC Server.
		Maximum of 50 characters

Result

The IPv4 address of the SINEMA RC Server is configured.

Further notes		
	You display this setting and other information with the show sinemarc command.	
4.5.4.2 autofwnat		
	Note	
	This command is only available with a KEY-PLUG.	
5		
Description	With this command, you enable the automatic creation of the firewall and NAT rules for the connection to the SINEMA RC Server.	
Requirement		
	You are in the SINEMARC configuration mode.	
	The command prompt is as follows:	
	cli(config-sinemarc)#	
Syntax		
	Call the command without parameter assignment:	
	autofwnat	
Result		
	The automatic firewall and NAT rules are created. The connections between the configured exported subnets and the subnets that can be reached via the SINEMA RC Server are allowed. The NAT settings are implemented as configured in the SINEMA RC Server.	
Further notes		
	You enable the setting with the autofwnat command.	
	You disable the setting with the no autofwnat command.	
4.5.4.3	no autofwnat	
	Note	
	This command is only available with a KEY-PLUG.	

Functions specific to SCALANCE

4.5 SINEMA RC

Description	
	With this command, you disable the firewall and NAT rules.
Requirement	
	You are in the SINEMARC configuration mode.
	The command prompt is as follows:
	<pre>cli(config-sinemarc)#</pre>
Syntax	
	Call the command without parameter assignment:
	autofwnat
Result	
	The firewall and NAT rules are disabled.
Further notes	
	You enable the setting with the autofwnat command.
	You display this setting and other information with the show sinemarc command.
4.5.4.4 de	evice id
	Note
	This command is only available with a KEY-PLUG.
Description	
	With this command, you configure the device ID. The device ID is assigned when configuring the device on the SINEMA RC Server. You will find further information on this in the Operating Instructions of the SINEMA RC Server.
Requirement	
	You are in the SINEMARC configuration mode.
	The command prompt is as follows:
	cli(config-sinemarc)#

Syntax

Call the command without parameter assignment:

device id <number(0-20000)>

Syntax

Call up the command with the following parameters:

device id <number>

The parameter has the following meaning:

Parameter	Description	Range of values / note
number	Device ID	Enter the device ID.

Result

The device ID is configured.

Further notes

You display this setting and other information with the show sinemarc command.

4.5.4.5 device pw

Note

This command is only available with a KEY-PLUG.

Description

With this command, you configure the password with which the device logs on to the SINEMA RC Server. The password is assigned when configuring the device on the SINEMA RC Server. You will find further information on this in the Operating Instructions of the SINEMA RC Server.

Requirement

You are in the SINEMARC configuration mode.

The command prompt is as follows:

cli(config-sinemarc)#

Syntax

Call up the command with the following parameters:

```
device pw <password(256)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
password	Device password	Enter the password.
		Maximum of 256 characters

Result

The device password is configured.

Further notes

You display this setting and other information with the show sinemarc command.

4.5.4.6 port

Note

This command is only available with a KEY-PLUG.

Description

With this command, you set the port via which the WBM of the SINEMA RC Server can be reached.

Requirement

You are in the SINEMARC configuration mode.

The command prompt is as follows:

cli(config-sinemarc)#

Syntax

Call up the command with the following parameters:

port <number(1-65535)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
number	Port number	Specify the port.
		1 65535

Result

The port is configured.

Further notes

You display this setting and other information with the show sinemarc command.

4.5.4.7 proxy

Note

This command is only available with a KEY-PLUG.

Description

With this command, you specify that the connection to the defined SINEMA RC Server is established via a proxy server.

Requirement

- The proxy server is configured.
- You are in the SINEMARC configuration mode.

The command prompt is as follows:

```
cli(config-sinemarc)#
```

Syntax

Call up the command with the following parameters:

```
proxy <string(128)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters

Result

The proxy server via which the connection is established is configured.

Further notes

You remove the proxy server with the no proxy command.

You display the available proxy server names with the srv show-names command. You display this setting and other information with the show sinemarc command. 4.5.4.8 no proxy Note This command is only available with a KEY-PLUG. Description With this command, you remove the proxy server. Requirement You are in the SINEMARC configuration mode. The command prompt is as follows: cli(config-sinemarc)# **Syntax** Call the command without parameter assignment: no proxy Result The proxy server is removed. **Further notes** You configure the proxy server with the proxy command. You display this setting and other information with the show sinemarc command.

4.5.4.9	shutdown		
	Note		
	This command is only available with a KEY-PLUG.		
Description			
	With this command, you disable the connection to the configured SINEMA RC Server.		
Requirement			
	You are in the SINEMARC configuration mode.		
	The command prompt is as follows:		
	<pre>cli(config-sinemarc)#</pre>		
Syntax			
	Call the command without parameter assignment:		
	shutdown		
Result			
	The connection to the SRC server is terminated.		
Further notes			
	You enable the connection with the no shutdown command.		
	You display this setting and other information with the show sinemarc command.		
4.5.4.10	no shutdown		
	Note		
	This command is only available with a KEY-PLUG.		
Description			
•	With this command, you establish a connection to the configured SINEMA RC Server.		
Dequirement			
requirement	You are in the SINEMARC configuration mode.		

	The command prompt is as follows:
	<pre>cli(config-sinemarc)#</pre>
Syntax	
	Call the command without parameter assignment:
	no shutdown
Result	
	The connection is enabled.
Further notes	
	You disable the connection with the shutdown command.
	You display this setting and other information with the show sinemarc command.
4.5.4.11 ve	erification cacert
	Note
	This command is only available with a KEY-PLUG.
Description	
Description	
	certificate.
Requirement	
-	The certificate is loaded.
	You are in the SINEMARC configuration mode.
	The command prompt is as follows:
	cli(config-sinemarc)#
Syntax	
-	Call up the command with the following parameters:
	verification cacert [<name(256)>]</name(256)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the server certificate	Enter the name of the server certificate. Maximum of 256 characters.

Result

The CA certificate of the server is configured.

Further notes

You load certificates with the tftp load command.

You display this setting and other information with the show sinemarc command.

4.5.4.12 verification fingerprint

Note

This command is only available with a KEY-PLUG.

Description

With this command, you configure the fingerprint of the device. The fingerprint is assigned during commissioning of the SINEMA RC Server. You will find further information on this in the Operating Instructions of the SINEMA RC Server.

Requirement

You are in the SINEMARC configuration mode.

The command prompt is as follows:

cli(config-sinemarc)#

Syntax

Call up the command with the following parameters:

verification fingerprint [<string(59)>]

The parameter has the following meaning:

Parameter	Description	Range of values / note
string	Fingerprint of the device	Specify the fingerprint of the device.
		Maximum of 59 characters

Result

The fingerprint is configured. Based on the fingerprint, the device checks whether the correct SINEMA RC Server is involved.

Further notes

You display this setting and other information with the show sinemarc command.

System time

This part contains the sections describing how the system time is obtained and the settings.

5.1	System time setting
	This section describes commands relevant for the configuration of the system time.
5.1.1	The "show" commands
	This section describes commands with which you display various settings.
5.1.1.1	show time
Description	
	This command shows the settings of the system clock.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Syntax	
	Call the command without parameters:
	show time
Result	
	The settings for the system clock are displayed.

5.1 System time setting

5.1.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

5.1.2.1 time

Description

With this command, you configure the way in which the system time is obtained.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

time{manual|ntp|sntp|SINEC}

The parameters have the following meaning:

Parameter	Description
manual	The system time is entered by the user
ntp	The system time is obtained from an NTP server
sntp	The system time is obtained from an SNTP server
SINEC	The system time is obtained using the "SIMATIC time protocol"

Result

The method of obtaining the system time is configured.

Further notes

You display the settings for the system clock with the ${\tt show}$ time command.

5.1.2.2 time set

Description

With this command, you set the system clock.

Requirement

You are in the Global Configuration mode. The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
time set hh:mm:ss <day (1-31)>
{january|february|march|april|may|june|july|august|september|october|november|decembe
r}
<year (2000 - 2035)>
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
hh:mm:ss	Time of day	Hour, minute, second each sepa- rated by ":" no link
day	Day of the month	1 31
-	Month	january, february, march, april, may, june, july, august, septem- ber, october, november, decem- ber
year	Year	2000 2035

Result

The system time is set.

Further notes

You display the settings for the system clock with the show time command.

5.2 NTP client

This section describes commands relevant for configuration of the NTP client.

5.2.1 The "show" commands

This section describes commands with which you display various settings.

5.2.1.1 show ntp info

Description

This command shows the current settings for the Network Time Protocol (NTP).

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show ntp info

Result

The current NTP settings are displayed.

5.2.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

5.2.2.1	ntp
Description	With this command, you change to the Network Time Protocol (NTP).
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	ntp
Result	
	You are now in the NTP configuration mode.
	The command prompt is as follows:
	cli(config-ntp)#
Further notes	
	You exit the NTP configuration mode with the end or exit command.
523	Commands in the NTP configuration mode
01210	This section describes commands that you can call up in the NTP configuration mode
	In the Global configuration mode, enter the ntp command to change to this mode.
	 If you exit the NTP configuration mode with the exit command, you return to the Global configuration mode.
	 If you exit the NTP configuration mode with the end command, you return to the Privileged EXEC mode.
5.2.3.1	ntp server
Description	
-	With this command, you configure the connection to a server on the NTP client.

System time

5.2 NTP client

Requirement

You are in the NTP configuration mode.

The command prompt is as follows:

cli(config-ntp)#

Syntax

Call up the command with the following parameters:

ntp server{ipv4 <ip_addr> | fqdn-name <Fully Qualified Domain Name>}[port {<1025-36564>]|default}[poll <seconds(64-1024)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IPv4 address	-
ip_addr	Value for the IPv4 address of the time server	Enter a valid IPv4 address.
fqdn-name	Keyword for a domain name	-
Fully Qualified Domain Name	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters
port	UDP port of the time server	• 1025 36564
		Default: 123
default	Standard port of the time server	123
poll	Keyword for the time after which the time of day is requested again	-
seconds	Value for the time in seconds	64 1024

For information on identifiers of addresses and interfaces, refer to the section "Addresses and interface identifiers".

Result

The connection to a server is configured on the NTP client.

Further notes

You delete the connection to a server with the no ntp server command.

5.2.3.2	no ntp server
Description	With this command, you delete the connection to a server on the NTP client.
Requirement	
	You are in the NTP configuration mode.
	The command prompt is as follows:
	cli(config-ntp)#
Syntax	
	Call up the command with the following parameters:
	no ntp server
Result	
	The connection to a server is deleted on the NTP client.
Further notes	You configure the connection to a server with the ntp server command.
5.2.3.3	ntp time diff
Description	
	With this command, you configure the time difference between the device and the NTP server.
Requirement	
	You are in the NTP configuration mode.
	The command prompt is as follows:
	cli(config-ntp)#
Syntax	
	Call up the command with the following parameters:
	<pre>ntp time diff <(+/-hh:mm)></pre>

```
System time
```

5.2 NTP client

The parameter has the following meaning:

Parameter	Description
+	Time zones to the west of the NTP server time zone
-	Time zones to the east of the NTP server time zone
hh	Number of hours difference
mm	Number of minutes difference

Enter the number of hours and number of minutes with two digits each. Default: No time difference.

Result

The time difference between the device and the NTP server is configured.

5.3 SNTP client

This section describes commands relevant for configuration of the SNTP client.

5.3.1	The "show" commands	
	This section describes commands with which you display various settings.	
5.3.1.1	show sntp broadcast-mode status	
Description		
	This command shows the current configuration of the broadcast mode of SNTP.	
Requirement		
	You are in the User EXEC mode or in the Privileged EXEC mode.	
	The command prompt is as follows:	
	cli> OF cli#	
Syntax		
	Call the command without parameters:	
	show sntp broadcast-mode status	
Result		
	The current SNTP broadcast configuration is displayed.	

System	time

5.3 SNTP client

5.3.1.2 show sntp status

Description

This command shows the settings of the Simple Network Time Protocol.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show sntp status

Result

The settings of SNTP are displayed.

5.3.1.3 show sntp unicast-mode status

Description

This command shows the current configuration of the unicast mode of SNTP.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> Of cli#

Syntax

Call the command without parameters:

show sntp unicast-mode status

Result

The current SNTP unicast configuration is displayed.

5.3.2	Commands in the global configuration mode	
	This section describes commands that you can call up in the Global configuration mode.	
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.	
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.	
	You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.	
5.3.2.1	sntp	
Description		
	With this command, you change to the SNTP configuration mode.	
Requirement		
	You are in the Global configuration mode.	
	The command prompt is as follows:	
	cli(config)#	
Syntax		
	Call the command without parameters:	
	sntp	
Result		
	You are now in the SNTP configuration mode.	
	The command prompt is as follows:	
	cli(config-sntp)#	
Further notes		
	You exit the SNTP configuration modewith the end or exit command.	

5.3.3 Commands in the SNTP configuration mode

This section describes commands that you can call up in the SNTP configuration mode.

In the Global configuration mode, enter the sntp command to change to this mode.

- If you exit the SNTP configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the SNTP configuration mode with the end command, you return to the Privileged EXEC mode.

5.3.3.1 sntp time diff

Description

With this command, you configure the time difference of the system time relative to the UTC time.

Requirement

- The SNTP server must have started up.
- You are in the SNTP Configuration mode. The command prompt is: cli(config-sntp)#

Syntax

Call up the command with the following parameters:

sntp time diff <(+/-hh:mm)>

The parameter has the following meaning:

Parameter	Description
+	Time zones to the west of the SNTP server time zone
-	Time zones to the east of the SNTP server time zone
hh	Number of hours difference
mm	Number of minutes difference

Enter the time difference as follows:

- with sign
- without spaces
- Hours and minutes both two digits (with leading zero)

Default: no time difference

Result

The time zone of the system time is configured.

Further notes

You can display the settings of this function and other information with the $\tt show \ sntp \ status \ command.$

5.3.3.2 sntp unicast-server

Description

With this command, you configure an SNTP unicast server.

Requirement

- The addressing mode of the SNTP client is configured as "unicast".
- You are in the SNTP Configuration mode. The command prompt is: cli(config-sntp)#

Syntax

Call up the command with the following parameters:

sntp unicast-server {ipv4 <ucast_addr> | fqdn-name <FQDN> | ipv6 <ip6_addr>}
[port<1025-36564>][poll<seconds(16-16284)>] [secondary]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IP address	-
ucast_addr	Value for an IPv4 unicast address	Enter a valid IPv4 unicast ad- dress.
fqdn-name	Keyword for a domain name	-
FQDN	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters
ipv6	Keyword for an IPv6 address	-
ip6_addr	Value for the IPv6 address of the time server	Enter a valid IPv6 address.
port	UDP port of the time server	1025 36564 Default: 123
poll	Keyword for the time after which the time of day is requested again	-
seconds	Value for the time in seconds	16 16284
secondary	Keyword to store the second SNTP server	If you do not specify this parame- ter, the first SNTP server is stored.

5.3 SNTP client

Result

The SNTP unicast server is configured.

Further notes

You can reset the setting to the default with the no sntp unicast-server command. You display this setting and other information with the show sntp unicast-mode status command.

5.3.3.3 no sntp unicast-server

Description

With this command, you delete the attributes for an SNTP unicast server and reset the address.

Requirement

You are in the SNTP configuration mode.

The command prompt is as follows:

cli(config-sntp)#

Syntax

Call up the command with the following parameters:

no sntp unicast-server {ipv4 <ucast_addr> | fqdn-name <Fully Qualified Domain
Name(100)> | ipv6 <ip6_addr>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IP address	-
ucast_addr	Value for an IPv4 unicast address	Enter a valid IPv4 unicast address
fqdn-name	Keyword for a domain name	-
Fully Qualified Domain Name(100)	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters
ipv6	Keyword for an IPv6 address	-
ip6_addr	Value for the IPv6 address of the time server	Enter a valid IPv6 address.
Result

The SNTP unicast server is reset to the default value.

Further notes

You configure the setting with the sntp unicast-server command.

You display this setting and other information with the ${\tt show \ sntp \ unicast-mode \ status}$ command.

5.3.3.4 sntp client addressing-mode

Description

With this command, you configure the addressing mode of the SNTP client as unicast or broadcast.

Requirement

- The SNTP client is activated.
- You are in the SNTP Configuration mode. The command prompt is: cli(config-sntp)#

Syntax

Call up the command with the following parameters:

sntp client addressing-mode{unicast|broadcast}

The parameters have the following meaning:

Parameter	Description	Range of values / note
unicast	configures the SNTP client in unicast mode	Default: unicast enabled
broadcast	configures the SNTP client in broad- cast mode	Supports only IPv4 addresses

Result

The addressing mode of the SNTP client is configured.

Further notes

You display this setting and other information with the show sntp status command.

You display the settings for the unicast mode with the ${\tt show \ sntp \ unicast-mode \ status}$ command.

5.3 SNTP client

You display the settings for the broadcast mode with the show sntp broadcast-mode status command.

Network structures

6.1 VLAN

This section describes commands for configuring and managing virtual networks (VLANs).

6.1.1 The "show" commands

This section describes commands with which you display various settings.

6.1.1.1 show subnet-vlan mapping

Description

This command shows the subnets for the selected interface or for all interfaces.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

```
show subnet-vlan mapping
```

[{interface<interface-type><interface-id>}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface	Keyword for a an interface description	-
interface-type	Type or speed of the interface	Specify a valid interface.
interface-id	Module no. and port no. of the interface	

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameter from the parameter list, all entries are displayed.

Network structures		
6.1 VLAN		

Result

The entries are displayed.

6.1.1.2 show vlan

Description

This command shows the specific information for all or a selected VLAN.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call up the command with the following parameters:

show vlan[brief|id<vlan-range>|summary]

The parameters have the following meaning:

Parameter	Description	Range of values / note
brief	Shows brief information about all VLANs	-
id	Keyword for a VLAN or VLAN range	-
vlan-range	Number of the addressed VLAN or VLAN range	1 4094 Enter the range limits with a hy- phen or a space.
summary	Shows a summary of the VLANs	

If you do not select any parameter from the parameter list, the entries of all available interfaces are displayed.

Result

The information for the selected VLAN is displayed.

6.1.1.3	show vlan device info
Description	This command shows all the global information that is valid for all VLANs.
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	Call the command without parameters: show vlan device info
Result	The global information is displayed.
6.1.1.4	show vlan learning params
Description	This command shows the parameters for the automatic learning of addresses for selected or all VLANs (active and inactive VLANs).
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	Call up the command with the following parameters: show vlan learning params[vlan <vlan-range>]</vlan-range>

Parameter	Description	Range of values / note
vlan	Keyword for a VLAN or VLAN range	-
vlan-range Number of VLAN rang	Number of the addressed VLAN or	1 4094
	VLAN range	Enter the range limits with a hy phen or a space.

If you do not select any parameter from the parameter list, the entries of all available interfaces are displayed.

Result

The settings for the automatic learning of addresses are displayed.

The parameters have the following meaning:

6.1.1.5 show vlan port config

Description

This command shows the VLAN-specific information for ports.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call up the command with the following parameters:

show vlan port config[{port<interface-type><interface-id>}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
port	Keyword for a port	-
interface-type	Type of interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameter from the parameter list, the entries of all available interfaces are displayed.

Result	The information about the ports is displayed.
6.1.1.6	show vlan protocols-group
Description	This command displays the table with the protocol group entries.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	
	Call the command without parameter assignment:
	show vlan protocols-group
Result	The table of protocol groups is displayed.
6.1.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.
6.1.2.1	base bridge-mode
Description	
	With this command, you configure whether or not the device forwards frames with VLAN tags transparently (IEEE 802.1D/VLAN-unaware mode) or takes VLAN information into

account (IEEE 802.1Q/VLAN-aware mode).

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

base bridge-mode {dot1d-bridge|dot1q-vlan}

The parameters have the following meaning:

Parameter	Description	Range of values / notes
dot1d-bridge	Sets the mode "VLAN-unaware" for the device.	-
	VLAN tags are not taken into account or changed but are forwarded transparently.	
dot1q-vlan	Sets the mode "VLAN-aware" for the device.	-n
	VLAN information is taken into account.	

Result

The device mode is configured.

Further notes

You display the status of this function and other VLAN information with the show vlan device info command.

6.1.2.2 interface range

Description

With this command, you can put several interfaces or the interfaces of VLANs together and configure them together. The configurations are valid for all interfaces of the specified range.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
interface range
(
    {<interface-type> <0/a-b,0/c,...>}
    {vlan <vlan-id(1-4094)> - <vlan-id(2-4094)>}
)
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface-type	Keyword for an interface	Enter a valid interface.
0/a-b, 0/c,	Module no. and port no. of the interface	
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
vlan-id	Number of the addressed VLAN	2 4094

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you want to address several VLANs with this command, you must insert a blank before and after the hyphen, for example interface range vlan 5 - 10.

Result

The interfaces or interfaces of VLANs were put together to form an interface range.

The command prompt is as follows:

cli(config-if-vlan-range)#

The configuration commands you enter in a mode apply to all interfaces of this area.

Further notes

With the no interface range command, you remove VLANs from this range or break it up.

6.1.2.3 no interface range

Description

With this command, you remove the interfaces or interfaces of VLANs from the interface range or break it up if you first remove all previously added interfaces.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
no interface range vlan <vlan-id(1-4094)> - <vlan-id(2-4094)>
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
vlan-id	Number of the addressed VLAN	2 4094

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you address several VLANs, you must insert a blank before and after the hyphen, for example no interface range vlan 5 - 10.

Result

The VLANs have been removed from the specified interface area.

Further notes

With the interface range command, you can put several interfaces or VLANs together to be able to configure them together.

6.1.2.4 map protocol

Description

With this command, you assign a protocol to a protocol group.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
map protocol
{ip | novell | netbios | appletalk | other <aa:aa>}
enet-v2 protocols-group <Group id integer(1-100)>
```

Parameter	Description	Range of values / note
ip	Internet Protocol v4	HEX 08:00
novell	Novell Netware protocol	HEX 81:38
netbios	Netbios via TCP/IP	HEX f0:f0
appletalk	Appletalk	HEX 80:9b
other	Other protocol.	enter the hexadecimal protocol value.
		• other: aa:aa
		• IPV6:86:DD
		• LLDP: 88:CC
		• PTP IEEE1588: 88: F7
		• EAP (802.1X): 88:8E
enet-v2	Frame structure is Ethernet II	-
protocols-group	Keyword for a protocol group	-
Group id integer	Number of the group	decimal 1 100

The parameters have the following meaning:

Result

The protocol group is created.

Further notes

You delete the protocol group with the no map protocol command.

You can display the status of this function and other information with the show vlan protocols-group command.

6.1.2.5 no map protocol

Description

With this command, you delete a protocol from all protocol groups.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
no map protocol
{ip | novell | netbios | appletalk | other <aa:aa>}
enet-v2
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
ip	Internet Protocol v4	HEX 08:00
novell	Novell Netware protocol	HEX 81:38
netbios	Netbios via TCP/IP	HEX f0:f0
appletalk	Appletalk	HEX 80:9b
other	Other protocol.	enter the hexadecimal protocol value.
		• other: aa:aa
		• IPV6:86:DD
		• LLDP: 88:CC
		• PTP IEEE1588: 88: F7
		• EAP (802.1X): 88:8E
enet-v2	Frame structure is Ethernet II	-

Result

The protocol is removed from all protocol groups.

Further notes

You create the protocol group with the map protocol command.

You can display the status of this function and other information with the show vlan protocols-group command.

6.1.2.6 no protocol-vlan

Description

With this command, you disable the protocol-based classification on all interfaces.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

	no protocol-vlan
Result	The classification is disabled.
Further notes	
	You enable the setting with the protocol-vlan command.
	You can display the status of this function and other information with the show vlan device infocommand.
6.1.2.7	protocol-vlan
Description	
	With this command, you enable the protocol-based classification on all interfaces.
Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	protocol-vlan
Result	
	The classification is enabled.
Further notes	
	You disable the setting with the no protocol-vlan command.
	You can display the status of this function and other information with the show vlan device infocommand.

Network structu	lires
6.1 VLAN	
6.1.2.8	subnet-vlan
Description	
•	With this command, you enable IPv4 subnet-based VLAN on all interfaces.
Requirement	
Roquiromoni	You are in the Global Configuration mode
	The command prompt is as follows.
	cli(config)#
-	
Syntax	
	Call the command without parameters:
	subnet-vlan
Result	
	The classification is enabled.
Further notes	
	You disable the setting with the no subnet-vlan command.
	You can display the status of this function and other information with the show vlan device
	info command.
	You configure IPv4 subnet-based VLAN with the map subnet command.
6.1.2.9	no subnet-vlan
Description	
	With this command, you disable IPv4 subnet-based VLAN on all interfaces.
Requirement	
·	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Suptox	
Symax	

Call the command without parameters:

no subnet-vlan

Result

The setting is disabled.

Further notes

You enable the setting with the subnet-vlan command.

You can display the status of this function and other information with the show vlan device info command.

6.1.2.10 vlan

Description

With this command, you create a VLAN on the device and change to the VLAN configuration mode.

Note

The device supports up to 24 virtual networks.

In the provider backbone bridge mode, this command is used to create user, service and backbone VLANs.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
vlan <vlan-id(1-4094)>
```

The parameter has the following meaning:

Parameters	Description	Range of values / note
vlan-id	Number of the addressed VLAN	1 4094

Do not enter any leading zeros with the number of the VLAN.

Result

	The VLAN is crea	ated.	
	You are now in the	ne VLAN configuration mode.	
	The command pr	ompt is as follows:	
	cli(config-vlan-	\$\$\$)#	
Further notes			
	You delete the V	LAN with the no vlan command.	
	You can display i	nformation about the VLAN with the sh	ow vlan command.
6.1.2.11	no vlan		
Description			
•	With this comman	nd, you delete a VLAN on the device.	
Requirement			
	 The VLAN mu 	ist not be assigned to a physical port.	
	• You are in the	Global Configuration mode.	
	The command	d prompt is as follows:	
	cli(config)#		
Syntax			
	Call up the comm	nand with the following parameter:	
	no vlan <vlan-id< th=""><th>1(1-4094)></th><th></th></vlan-id<>	1(1-4094)>	
	Parameter	Description	Range of values / note
	vlan-id	Number of the addressed VLAN	1 4094
	The VLAN with n	umber 1 cannot be deleted.	
Result			
	The VLAN is dele	eted	
Further notes			
	With the star con	nmand you create a V/LAN on the davi	<u>^</u>

With the vlan command, you create a VLAN on the device.

You can display information about the VLAN with the $\tt show \ vlan \ command.$

6.1.3 Commands in the interface configuration mode

This section describes commands that you can call up in the interface configuration mode. Depending on the Interface selected, various command sets are available.

In the Global configuration mode, enter the interface command to change to this mode.

Commands relating to other topics that can be called in the interface configuration mode can be found in the relevant sections.

- If you exit the Interface configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the Interface configuration mode with the end command, you return to the Privileged EXEC mode.

6.1.3.1 map subnet

Description

With this command, you configure IPv4 subnet-based VLAN.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

map subnet <ip-subnet-address> vlan <vlan-id(1-4094)>
<mask> [arp {suppress | allow}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ip-subnet-address	IPv4 subnet address	Enter a valid subnet address.
vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
mask	Subnet mask	aaa.bbb.ccc.ddd
arp	Keyword ARP protocol	-
suppress	Suppress the ARP protocol	-
allow	Allow the ARP protocol	-

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameters from the parameter list, the default value is used.

٨	letu	/ork	str	uct	ure	s

Result

The subnet with subnet mask and subnet address is assigned to a VLAN.

Further notes

You cancel the setting with the no map subnet command.

You can display the status of this function and other information with the show subnet-vlan mapping command.

6.1.3.2 no map subnet

Description

With this command, you remove an IPv4 subnet from a VLAN.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

no map subnet <ip-subnet-address>

The parameter has the following meaning:

Parameter	Description	Range of values / note
ip-subnet-address	IPv4 subnet address	Enter a valid subnet address

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The IPv4 subnet was removed.

Further notes

You configure the setting with the map subnet command.

You can display the status of this function and other information with the show subnet-vlan mapping command.

6.1.3.3	shutdown complete
Description	With this command, you shut down the interface.
Requirement	
	You are in the Interface configuration mode.
	The command prompt is as follows:
	cli(config-if-\$\$\$)#
Syntax	
	Call the command without parameters:
	shutdown complete
Result	
	The Interface is shut down. A connection continues to be indicated if a switch port is turned off. The LED for the port status flashes 3 times cyclically. However no data is sent or received.
Further notes	
	You activate the interface with the no shutdown command.
	You can display the status of this function and other information with the show interfaces command.
6.1.3.4	no shutdown
Description	
	With this command, you shut down an interface.
Requirement	
	You are in the Interface configuration mode.
	The command prompt is as follows:
	cli(config-if-\$\$\$)#
Syntax	

Call the command without parameters:

Network structur	res
6.1 VLAN	
	no shutdown
_	
Result	
	The Interface is activated.
Further notes	
	You deactivate the interface with the shutdown command
	You can display the status of this function and other information with the show interfacescommand.
6.1.3.5	switchport
Description	
Description	With this command, you configure the interface on a switch part
	with this command, you compute the interface as a switch port.
Requirement	
	 The Interface is shut down.
	 You are in the Interface configuration mode.
	The command prompt is:
	CII (CONIIG-II-\$\$\$)#
Svntax	
- J	Call the command without parameters:
	switchport
Result	
	The interface is configured as a switch port. Activate the interface again.
Further notes	
	You shut down the interface with the shutdown command.
	You activate the interface with the no shutdown command.
	You configure the interface with the no switchport command.
	You can display the status of this function and other information with the show ip interfacecommand.

6.1.3.6 no switchport

Description

With this command you configure the interface as a router port. This disables all switching and layer 2 functions.

Requirement

- The Interface is shut down.
- You are in the Interface configuration mode. The command prompt is: cli(config-if-\$\$\$)#

Syntax

Call the command without parameters:

no switchport

Result

The interface is configured as a router port. Activate the interface again.

Further notes

You shut down the interface with the shutdown complete command. You activate the interface with the no shutdown command. You configure the interface as a switch port with the switchport command. You display the status of this function and other information with the show interfaceCommand.

6.1.3.7 switchport acceptable-frame-type

Description

With this command, you configure which types of frames are accepted.

Requirement

You are in the Interface configuration mode. The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

switchport acceptable-frame-type{all|tagged}

The parameters have the following meaning:

Parameter	Description	Range of values / note
all	All frames are accepted.	Default: all
	Note: On a ring port only the parameter "all" is supported.	
tagged	Untagged frames are discarded.	-

Result

The setting is enabled.

Further notes

You can reset the setting to the default with the no switchport acceptable-frame-type command.

You can display the status of this function and other information with the $\tt show vlan port config command.$

6.1.3.8 no switchport acceptable-frame-type

Description

With this command, you reset the setting for the types of frames accepted by the interface to the default value.

The default value is all.

The interface accepts tagged and untagged frames.

Requirement

You are in the Interface Configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call the command without parameters:

no switchport acceptable-frame-type

Result

The setting is reset to the default value.

Further notes

You configure the setting with the switchport acceptable-frame-type command. You can display the status of this function and other information with the show vlan port configcommand.

6.1.3.9 switchport mode

Description

With this command, you specify the operating mode for the switch port.

Requirement

- The interface is configured as a switch port.
- You are in the Interface configuration mode. The command prompt is: cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

switchport mode { trunk | hybrid }

The parameters have the following meaning:

Parameter	Description	Range of values / note
trunk	Configures the port as a trunk port that only forwards tagged frames. The port can then only be configured as the trunk port if the port is not entered in any VLAN that exchanges untagged frames.	-
	For the trunk port to forward tagged frames, all VLAN IDs to which the trunk port forwards frames must be stored.	
	If a new VLAN is created, the VLAN ID is automatically en- tered at the trunk port.	
	With a trunk port, the VLAN assignment is dynamic. Static configurations can only be created if, in addition to the trunk port property, the port is also entered statically as a member in the VLANs involved. An example of a static configuration is the assignment of the multicast groups in certain VLANs.	
	If you execute the "acceptable frame-type all" command at the trunk port, the port also receives untagged frames.	
hybrid	Configures the port as a hybrid port that accepts tagged and untagged frames.	Default: hybrid

Result

The operating mode is configured.

Further notes

You reset the operating mode to the default with the no switchport mode command. You display this setting and other information with the show vlan port config command. You configure the interface as a switch port with the switchport command.

6.1.3.10 no switchport mode

Description

With this command, you reset the operating mode for the switch port to the default. The default value is Hybrid.

Requirement

- The interface is configured as a switch port.
- You are in the Interface configuration mode. The command prompt is: cli(config-if-\$\$\$)#

Syntax

Call the command without parameters:

no switchport mode

Result

The setting is reset to the default value.

Further notes

You configure the operating mode with the switchport mode command. You display this setting and other information with the show vlan port config command. You configure the interface as a switch port with the switchport command.

6.1.3.11 switchport pvid

Description

With this command, you assign an interface to a VLAN and configure the port VLAN identifier (PVID) for it. If a received frame has no VLAN tag, it has a tag added with the VLAN ID specified here and is sent according to the switch rules for the port.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

switchport pvid <vlan-id(1-4094)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
vlan-id	Number of the addressed VLAN	1 4094

Result

The PVID is configured

Further notes

You can reset the setting to the default with the no switchport pvid command. You configure the VLAN ID with the switchport access vlan command. You display the setting and other information with the show vlan port config command.

6.1.3.12 no switchport pvid

Description

With this command, you reset the setting for the port VLAN identifier (PVID) for an interface to the default value.

The default value is 1.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call the command without parameters:

no switchport pvid

Result

The setting is reset to the default value.

Further notes

You configure the setting with the switchport pvid command.

You configure the VLAN ID with the $\tt switchport$ access $\tt vlan$ command.

You can display the status of this function and other information with the show vlan port config command.

6.1.4 Commands in the VLAN configuration mode

This section describes commands that you can call up in the VLAN Configuration mode.

In the Global Configuration mode, enter the vlan \$\$\$ command to change to this mode. When doing this, you need to replace the \$\$\$ placeholders with the relevant VLAN ID.

Commands relating to other topics that can be called in the VLAN Configuration mode can be found in the relevant sections.

- If you exit the VLAN Configuration mode with the exit command, you return to the Global Configuration mode.
- If you exit the VLAN Configuration mode with the end command, you return to the Privileged EXEC mode.

6.1.4.1 ip address

Description

With this command, you assign an IP address.

Requirement

You are in the Interface Configuration mode of VLAN.

The command prompt is as follows:

cli(config-if-vlan-\$\$\$)#

Syntax

Call up the command with the following parameters:

ip address <ip-address> {<subnet-mask>| / <prefix-length(0-32)>}

The parameter has the following meaning:

Parameter	Description	Range of values / note
ip-address	IP address	Specify a valid IP address.
subnet-mask	Subnet mask	Enter a valid subnet mask.
prefix-length	Decimal representation of the mask as a number of "1" bits	0 32

For information on names of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

The IP address is assigned.

Note

Effectiveness of the command

The command is effective immediately. If you configure the interface via which you access the device, the connection will be lost!

Further notes

You delete the setting with the no ip address command.

6.1.4.2 no ip address

Description

With this command, you delete the assignment of an IP address and disable DHCP.

Requirement

You are in the Interface Configuration mode of VLAN.

The command prompt is as follows:

cli(config-if-vlan-\$\$\$)#

Syntax

Call up the command with the following parameters:

no ip address [{ <ucast_addr> | dhcp }]

The parameter has the following meaning:

Parameter	Description	Range of values / note
ucast-addr	Value for an IPv4 unicast address	Enter a valid IPv4 unicast ad- dress.
dhcp	Specify this parameter if you want to disable the DHCP function explicitly.	-

For information on names of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

If DHCP was enabled on this interface, DHCP is now disabled. Any existing dynamically learned IP address will be automatically converted to a static IP address.

If static IP addresses were configured and if no explicit IP address was transferred as a parameter, all static IP addresses will be deleted from this interface.

If a static IP address was specified explicitly, this address is deleted from this interface.

Note

Effectiveness of the command

The command is effective immediately.

If you configure the interface via which you access the device, you can lose the connection!

Further notes

You assign an IP address with the $\tt ip$ address or $\tt ip$ address dhcp command.

6.1.4.3 name

Description

With this command, you assign a name to the VLAN.

Requirement

You are in the VLAN Configuration mode.

The command prompt is as follows:

cli(config-vlan-\$\$\$)#

Syntax

Call up the command with the following parameters:

name <vlan-name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
vlan-name	Name that will be assigned to the VLAN	max. 32 characters

Result

The VLAN is assigned a name.

Further notes

You delete name assignment for a VLAN with the no name command.

6.1.4.4 no name

Description

With this command, you delete the name assignment for a VLAN.

Requirement

You are in the VLAN configuration mode. The command prompt is as follows:

cli(config-vlan-\$\$\$)#

Syntax

Call the command without parameters:

no name

Result

The name of the VLAN is deleted.

Further notes

You assign the VLAN a name with the command name.

6.1.4.5 ports

Description

With this command, you generate a list that specifies the behavior of the interfaces and replaces the existing VLAN configuration.

• Member ports (tagged ports)

The interface is added permanently to the list of incoming and outgoing connections. Tagged and untagged frames are transferred.

- Untagged Ports
 The interface transfers untagged frames. If the VLAN ID (PVID) is set, incoming
 untagged frames are given a tag with the VLAN ID specified there. If the received frames
 already contain a VLAN ID, frames are only accepted if their VLAN ID matches the set
 PVID. With outgoing frames, the tag with the VLAN ID is removed.
- Forbidden Ports This interface is not used for communication in a VLAN.

The "tagged port" and "untagged port" you specify with this command are used for outgoing data traffic.

Requirement

You are in the VLAN configuration mode.

The command prompt is as follows:

```
cli(config-vlan-$$$)#
```

Syntax

Call up the command with the following parameters:

```
ports
   (
    [<interface-type><0/a-b,0/c,...>]
    [<interface-type><0/a-b,0/c,...>]
    )
   [
    untagged<interface-type> <0/a-b,0/c,...>
    (
     [<interface-type><0/a-b,0/c,...>] [all]
    )
   ]
   [
    forbidden<interface-type><0/a-b,0/c,...>
    [<interface-type><0/a-b,0/c,...>]
       1
   [name<vlan-name>]
```

The parameters have the following meaning:

Parameter	Description	Values
interface-type	Type or speed of the interface	Specify a valid interface.
/a-b,0/c,	Port no. of the interface	
untagged	Keyword for interfaces or ports that transfer - data packets without VLAN marking	
all	Specifies that all interfaces or ports are set to "untagged"	-
forbidden	Keyword for forbidden interfaces or ports	-
name	Keyword for the name assignment -	
vlan-name	Name of the VLAN max. 32 characters	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The settings are enabled.

Further notes

You display details of the function with the show vlan command. You reset the settings with the no ports command.

6.1.4.6 no ports

Description

With this command, you reset the ports for a VLAN.

Requirement

You are in the VLAN Configuration mode. The command prompt is as follows:

```
cli(config-vlan-$$$)#
```

Syntax

Call up the command with the following parameters:

```
no ports
[<interface-type><0/a-b,0/c,...>]
[<interface-type><0/a-b,0/c,...>] [all]
[
untagged ([<interface-type> <0/a-b,0/c,...>]
```

```
[<interface-type> <0/a-b,0/c,...>] [all])
]
[
forbidden ([<interface-type><0/a-b,0/c,...>
  [<interface-type><0/a-b,0/c,...>] [all])
]
[name <vlan-name>]
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface-type	Type or speed of the interface	Enter a valid interface.
/a-b,0/c,	Port no. of the interface	
untagged	Keyword for interfaces or ports that transfer data packets without VLAN marking	-
all	Specifies that all interfaces or ports are set to "untagged"	-
forbidden	Keyword for forbidden interfaces or ports	-
name	Keyword for the name assignment	-
vlan-name	Name of the VLAN	max. 32 characters

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The ports are reset.

Further notes

You display details of the function with the ${\tt show}$ vlan command.

You reset the setting with the no ports command.

6.1.4.7 tia interface

Description

With this command, you enable or disable the property TIA interface. The interface can be used for PROFINET.

Requirement

- The interface is enabled.
- You are in the Interface configuration mode of the VLAN interface. The command prompt is: cli (config-if-vlan-\$\$\$) #

\$\$\$ stands for the numbering of the interface.

Syntax

Call the command without parameters: ${\tt tia-interface}$

Result

The TIA interface property is enabled exclusively for the specified VLAN. The function was disabled on the other interfaces.

Further notes

Note that only one VLAN interface can become the TIA interface.

6.2	PPP
	This section describes commands relevant for connecting to the WAN.
6.2.1	The "show" commands
	This section describes commands with which you display various settings.
6.2.1.1	show ppp information
Description	This command shows the settings and status of PPP.
Requirement	
	You are now in the Interface configuration mode xDSL.
	The command prompt is as follows:
	CLI(config-ppp-X)#
Syntax	
	Call the command without parameters:
	show ppp information
Result	
	The information is displayed.
6.2.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or $exit$ command and are then in the Privileged EXEC mode again.

6.2.2.1 interface ppp

Description

With this command, you change to the Interface configuration mode.

There you can edit the settings for one interface. You select the interface with the parameters of this command. If you specify a logical interface that does not exist, it will be created. The name of the selected interface is displayed in the command prompt.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

interface ppp <interface-id>

The parameter has the following meaning:

Parameter	Description	Values
interface-id	Module no. and port no. of the interface	Specify a valid interface.

Result

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-ppp-\$)#

The placeholder \$ is replaced by the following module no. and port no. of the interface:

Further notes

You exit the Interface configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

You display the status and the configuration of the interfaces with the ${\tt show}$ interfaces command.

6.2.3 Commands in the Interface configuration mode

This section describes commands that you can call up in the interface configuration mode. Depending on the Interface selected, various command sets are available.

In the Global configuration mode, enter the interface command to change to this mode.

Commands relating to other topics that can be called in the interface configuration mode can be found in the relevant sections.

- If you exit the Interface configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the Interface configuration mode with the end command, you return to the Privileged EXEC mode.

6.2.3.1 forced disconnect

Description

With this command you specify whether you want the forced disconnect of your provider to be shifted to a specific time of day.

Requirement

- The "PPPoE Passthrough" function is disabled
- You are in the Interface configuration mode

The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command with the following parameters:

forced disconnect{enabled | disabled}

The parameters have the following meaning:

Parameter	Description	Range of values / note
enabled	Enables the forced disconnect	-
disabled	Disables the forced disconnect	-

Result

The setting is configured.

Further notes

You configure the time of day with the forced disconnect time command. You display this setting and other information with the show ppp information command.
6.2.3.2 forced disconnect time

Description

With this command you specify the time of day to which you want to shift the forced disconnect of the DSL provider. This is only possible if the correct system time is set on the device.

Requirement

You are in the MODEM configuration mode The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command with the following parameters:

forced disconnect time <hh:mm:ss>

The parameter has the following meaning:

Parameter	Description	Range of values / note
-	Time of day	Enter the time of day in the following format:
		hh:mm:ss

Result

The time is specified:

Further notes

You display this setting and other information with the show ppp information command. You enable the forced disconnect with the forced disconnect command.

6.2.3.3 interface vlan

Description

With this command, you specify the interface via which the PPP connection is established.

Requirement

You are in the Interface configuration mode The command prompt is as follows:

```
cli(config-ppp-X)#
```

Syntax

Call up the command with the following parameters:

interface vlan <vlan-id (1-4094)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
vlan	Keyword for a VLAN connection.	-
vlan-id	Number of the addressed VLAN	1 4094

For information on identifiers of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

The interface is assigned.

Further notes

You display this setting and other information with the show ppp informations command. You enable the PPP connection with the pool-enable command.

6.2.3.4 ip address

Description

With this command, you assign an IPv4 address to the interface.

Requirement

You are in the Interface configuration mode

The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command with the following parameters:

ip address <ip-address>

The parameters have the following meaning:

	Parameter	Description	Range of values / note
	ip-address	IPv4 address for the Interface	Enter a valid IPv4 address
	For information on	names of addresses and interfaces, i	refer to the section "Auto-Hotspot".
Result			
	The IP address is a	assigned to the PPP interface.	
Further notes			
	You delete the IPv	4 address with the no ip address con	nmand.
	You display this se	tting and other information with the st	now ip interface command .
6.2.3.5 ip	address dhcp		
Description			
	With this command	d, the interface obtains the IPv4 addre	ess via DHCP.
Requirement			
	You are in the Inte	rface configuration mode	
	The command pro	mpt is as follows:	
	cli(config-ppp-X)	#	
Syntax			
	Call the command	without parameters:	
	ip address dhcp		
Result			
	The DHCP assigns	s the IPv4 address to the interface.	
Further notes			
	You delete the set	tings with the no ip address command	d.
	You display this se	tting and other information with the st	now ip interface command.

6.2.3.6 no ip address

Description

With this command, you delete the assignment of an IPv4 address to an interface and disable DHCP.

Requirement

You are in the Interface configuration mode

The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command without parameters or with the following parameter assignment:

no ip address [<ip-address> | dhcp]

The parameter has the following meaning:

Parameter	Description	Range of values / note
ip-address	IPv4 address of the interface that will be deleted	Enter a valid IPv4 address
dhcp	Specify this parameter if you want to disable the DHCP function explicitly.	-

For information on names of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

The setting is configured.

Further notes

You configure the static IPv4 address with the ip address command. You display this setting and other information with the show ip interface command. You enable DHCP with the ip address dhcp command.

6.2.3.7 password

Description

With this command, you configure the password.

Requirement

You are in the Interface configuration mode

The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command with the following parameters:

password <pw(255)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
wq	Password	Enter the password for the user. You will receive the password from your DSL provider.
		Maximum of 255 characters

Result

The password is configured.

Further notes

You display this setting and other information with the show ppp informations command.

6.2.3.8 shutdown

Description

With this command, you shut down the interface.

Requirement

You are in the Interface configuration mode The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call up the command with the following parameters:

shutdown [complete]

Parameter	Description	Range of values / note
without pa- rameters	The interface is shut down but the connection remains.	-
complete	The interface is shut down and the PPP con- nection is terminated.	-

The parameter has the following meaning:

Result

The WAN interface is disabled.

If you execute this command without parameters, a connection remains displayed. The LED for the port status flashes. However no data is sent or received.

Further notes

You activate the interface with the no shutdown command.

6.2.3.9 no shutdown

Description

With this command, you enable the WAN interface.

Requirement

You are in the Interface configuration mode

The command prompt is as follows:

cli(config-ppp-X)#

Syntax

Call the command without parameter assignment:

no shutdown

Result

The Interface is shut down.

Further notes

You disable the WAN interface with the ${\tt shutdown}$ command.

6.2.3.10	type ppo-ex
Description	
	With this command you specify that the PPPoE (Point-to-Point over Ethernet) protocol is used for the PPP connection.
Requirement	
	You are in the Interface configuration mode
	The command prompt is as follows:
	cli(config-ppp-X)#
Syntax	
	Call the command without parameter assignment:
	type ppo-ex
Result	
	The PPPoE protocol is used.
Further notes	
	You display this setting and other information with the show ppp information command.
6.2.3.11	username
Description	
	With this command, you configure the user name.
Requirement	
	You are in the Interface configuration mode
	The command prompt is as follows:
	cli(config-ppp-X)#
Syntax	
	Call up the command with the following parameters:
	username <name(255)></name(255)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	User name	Specify the user name.
		You will receive the user name from your DSL provider.

Result

The user name is configured.

Further notes

You display this setting and other information with the show ppp information command. You configure the corresponding password with the password command.

Network protocols

This part contains the sections that describe the commands for working with the various network protocols.

7.1 IPv4 protocol

This section describes commands of the Internet Protocol (IP) version 4.

7.1.1 The "show" commands

This section describes commands with which you display various settings.

7.1.1.1 show ip dns

Description

This command shows information about the DNS client, for example the status of the DNS client and parameters for querying the DNS server.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show ip dns

Result

Information on the DNS client is displayed.

7.1 IPv4 protocol

7.1.1.2 show dcp forwarding

Description

This command shows an overview of the DCP forwarding behavior on one or all interfaces.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call up the command with the following parameters:

show dcp forwarding [port<interface-type><interface-id>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
port	Keyword for a an interface description	-
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The overview of the DCP forwarding behavior is displayed.

7.1.1.3 show dcp server

Description

This command shows whether or not the DCP function is enabled on the device. If the DCP function is enabled, the read and write permissions are displayed.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax	
	Call the command without parameters:
	show dcp server
Result	The overview of the status of the DCP function and access rights is displayed.
7.1.1.4	show ip route
Description	This command shows the routes currently being used.
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	Call up the command with the following parameters:
	<pre>show ip route[{<ip-address>[<mask>] connected static}]</mask></ip-address></pre>

The parameters have the following meaning:

Parameter	Description	Range of values
ip-address	Shows the information for a specific IP address.	Specify a valid IP address
mask	Defines an address range using the subnet mask.	/8, /16 or /24
connected	Shows the direct connections.	-
static	Shows the static connections.	-

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The routing table is displayed.

|--|

7.1 IPv4 protocol

7.1.1.5 show ip routing

Description

This command shows whether or not the "routing" function is enabled.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show ip routing

Result

The routing function is enabled.

7.1.1.6 show ip static route

Description

This command shows the routes that were generated statically.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

show ip static route

Result

The static routes are displayed.

7.1.1.7	show ip telnet
Description	This command shows the admin status and the port number of the Telnet server.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Syntax	
	Call the command without parameters:
	show ip telnet
Result	
	The admin status and the port number of the Telnet server are displayed.
712	Commands in the global configuration mode
/	This section describes commands that you can call up in the Global configuration mode
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or $exit$ command and are then in the Privileged EXEC mode again.
7.1.2.1	dcp server
Description	
	With this command, you configure the read and write permissions for the DCP server and enable it.
Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#

Network protocols

7.1 IPv4 protocol

Syntax

Call up the command with the following parameters:

dcp server {read-only|read-write}

The parameters have the following meaning:

Parameter	Description	Range of values / note
read-only	only reading is permitted on the DCP server	-
read-write	reading and writing is permitted on the DPC server	Default: read-write

Result

The read and write permissions for the DPC server are configured. The DCP server is enabled.

Further notes

You disable the DCP server with the no dcp server command.

7.1.2.2 no dcp server

Description

With this command, you disable the DCP server.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

no dcp server

Result

The DCP server is disabled.

Further notes	
	You enable and configure the DCP server with the dcp server command.
7.1.2.3	ip echo-reply
Description	
	To check the availability of a network node, packets of the Internet Control Message Protocol (ICMP) can be sent to it. These packets of type 8 request the recipient to send a packet back to the sender (echo reply).
	With this command you enable the network node to react to ping queries.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	ip echo-reply
Result	
	"ICMP echo reply messages" are enabled. The network node reacts to ping queries.
Further notes	
	You disable the setting with the no ip echo-reply command.
7.1.2.4	no ip echo-reply
Description	
·	With this command you stop the network node reacting to ping queries.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#

Network protocols	;		
7.1 IPv4 protocol			
Syntax			
	Call the command with	out parameters:	
	no ip echo-reply		
Result			
	"ICMP echo reply mess	sages" are disabled. The network nod	e does not react to ping queries
Further notes			
	You change the setting	with the ip echo-reply command.	
7.1.2.5 ip	route		
Description			
Description	With this command, you configure a static entry in the IP routing table.		
Requirement			
	You are in the Global c	configuration mode.	
	The command prompt is as follows:		
	cli(config)#		
Syntax			
	Call up the command v	vith the following parameters:	
	ip route <prefix> <mask> <next-hop> [<distance(1-255)>]</distance(1-255)></next-hop></mask></prefix>		
	The parameter has the following meaning:		
	Parameter	Description	Range of values / note
	prefix	Specifies the IP address or the address range	specify a valid IP address
	mask	Specifies the subnet mask used for prefix.	enter a valid subnet mask
	next-hop	Specifies the IP address to which the	specify a valid IP address
		selected addresses will be forwarded.	

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

The value for the administrative dis-

tance.

1 ... 255

distance

Result	
	The entry in the IP routing table is configured.
Further notes	
	You delete an entry from the IP routing table with the no ip route command
	You display the IP routing table with the show ip route command.
7.1.2.6	ip route
Description	
	With this command, you configure a static entry in the IP routing table.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call up the command with the following parameters:

ip route <prefix> <mask> <next-hop> [<distance (1-255)>] [interface { vlan <short (1-4094)> }]

The parameter has the following meaning:

Parameter	Description	Range of values / note
prefix	Specifies the IP address or the address range	specify a valid IP address
mask	Specifies the subnet mask used for prefix. Use decimal notation.	enter a valid subnet mask
next-hop	Specifies the IP address to which the selected addresses will be forwarded.	specify a valid IP address
distance	The value for the administrative dis- tance.	1 255
interface		
vlan	Keyword for a VLAN connection	-
short	Number of the addressed VLAN	1 4094

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Network protocols	
7.1 IPv4 protocol	
Result	
	The entry in the IP routing table is configured.
Further notes	
	You delete an entry from the IP routing table with the no ip route command.
	You display the IP routing table with the show ip route command.
7.1.2.7 nc	o ip route
Description	
·	With this command, you delete a static entry from the IP routing table.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#

Syntax

Call up the command with the following parameters:

no ip route <prefix> <mask> <next-hop>

The parameter has the following meaning:

Parameter	Description	Range of values / note
prefix	Specifies the IP address or the address range	specify a valid IP address
mask	Specifies the subnet mask used for prefix. Use decimal notation.	enter a valid subnet mask
next-hop	specifies the IP address to which the selected addresses were forwarded.	specify a valid IP address

Result

The entry is deleted.

Further notes

You configure an entry from the IP routing table with the ip route command. You display the IP routing table with the show ip route command.

7.1.2.8 no ip routing

Description

With this command, you disable IPv4 routing function on the device.

	Note			
	IPv6 routing			
	If IPv6 routing is enabled on the device, this is also disabled with this function.			
	N /			
	This command is available only with layer 3.			
Requirement				
	You are in the Global configuration mode.			
	The command prompt is as follows:			
	cli(config)#			
0				
Syntax				
	Call the command without parameters:			
	no ip routing			
Result				
	IPv4 routing is disabled.			
Further notes				
	You enable the function with the ip routing command.			
	You display the setting with the show ip route command.			
7.1.2.9	telnet-server			
Description				
	With this command, you enable the Telnet server.			

Network protocols			
7.1 IPv4 protocol			
Poquiromont			
Requirement	You are in the Global configuration mode		
	The command prompt is as follows:		
	C11 (CONI1g) #		
Syntax			
	Call the command without parameters:		
	telnet-server		
	As default the function is "enabled".		
Result			
	The Telnet server is enabled.		
Further notes			
	You disable the Telnet server with the no telnet-server command.		
7.1.2.10 no	o telnet-server		
Description			
Description	With this command you dischle the Talast conver		
	with this command, you disable the remet server.		
Requirement			
i toqui officin	You are in the Global configuration mode.		
	The command prompt is as follows:		
	cli(config)#		
Syntax			
	Call the command without parameters:		
	no telnet-server		
Result			
	The Telnet server is disabled.		
Further notes			
	You enable the Telnet server with the telnet-server command.		

7.1.3 Commands in the Interface configuration mode

This section describes commands that you can call up in the interface configuration mode. Depending on the Interface selected, various command sets are available.

In the Global configuration mode, enter the interface command to change to this mode.

Commands relating to other topics that can be called in the interface configuration mode can be found in the relevant sections.

- If you exit the Interface configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the Interface configuration mode with the end command, you return to the Privileged EXEC mode.

7.1.3.1 ip address

Description

With this command, you assign an IPv4 address or an IPv4 subnet to the interface.

Requirement

- DHCP was disabled with the no ip address command.
- You are in the Interface configuration mode of VLAN or a router port. The command prompt is as follows:

cli(config-if-vlan-\$\$\$)#

or with a router port:

cli(config-RPort-if-Int\$-\$)

Syntax

Call up the command with the following parameters:

ip address <ip-address> {<subnet-mask>|/<prefix-length(0-32)>}[secondary]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ip-address	IPv4 address for the Interface	Enter a valid IPv4 address
subnet-mask	Subnet mask of the corresponding subnet	enter a valid subnet mask
prefix-length	Decimal representation of the mask as a number of "1" bits	0 32
secondary	Further subnet for this interface	-

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Network protocols

7.1 IPv4 protocol

Result	
	The IPv4 address is assigned to the VLAN interface or the router port.
	Note
	I ne command is effective immediately.
	If you configure the interface via which you access the device, the connection will be lost!
Further notes	
	You delete the IPv4 address with the no ip address command.
	You display this setting and other information with the show ip interface command.
7.1.3.2	ip address dhcp
Description	With this server and the V/LANListerface abtains the ID address via DUCD
	with this command, the VLAN interface obtains the IP address via DHCP.
Requirement	
	You are in the Interface Configuration mode of VLAN.
	The command prompt is as follows:
	cli(config-if-vlan-\$\$\$)#
Syntax	
	Call the command without parameters:
	ip address dhcp
Result	
	The DHCP assigns the IP address to the VLAN interface.
Further notes	
	You delete the settings with the no ip address command.
	You display this setting and other information with the show ip interface command.

7.1.3.3 no ip address

Description

With this command, you delete the assignment of an IP address to a VLAN interface.

Requirement

You are in the Interface configuration mode of VLAN. The command prompt is as follows:

cli(config-if-vlan-\$\$\$)#

Syntax

Call up the command with the following parameters:

no ip address [{ <ucast addr>|dhcp}]

The parameter has the following meaning:

Parameter	Description	Range of values / note
ucast_addr	IP Address of the VLAN interface that will be deleted	enter a valid IP address
dhcp	Specify this parameter if you want to cancel the obtaining of the IP address from a DHCP server.	

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The assignment of the IP address to a VLAN interface is deleted and DHCP is disabled.

Note

Effectiveness of the command

The command is effective immediately.

If you configure the interface via which you access the device, you can lose the connection!

Further notes

You configure the setting with the ip address command.

You display this setting and other information with the show ip interface command.

7.2 ARP

This section describes commands of the Address Resolution Protocol (ARP).

7.2.1 The "show" commands

This section describes commands with which you display various settings.

7.2.1.1 show ip arp

Description

With this command, you display the IP ARP table.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

The parameters have the following meaning:

Parameter	Description	Range of values / note
Vlan	Keyword for a VLAN connection	-
vlan-id	Number of the addressed VLAN	1 4094
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	
ip-address	Shows the IP addresses of the entries in the ARP table	-
mac-address	Shows the MAC addresses of the en- tries in the ARP table	-
summary	Shows a summary of the entries in the ARP table	-
information	Displays information on the ARP con- figuration	-

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameter from the parameter list, the IP ARP table is displayed.

Result

The IP ARP table is displayed.

7.3 **DHCP** client

This section describes commands of the Dynamic Host Configuration Protocol (DHCP).

7.3.1	The "show" commands
	This section describes commands with which you display various settings.
7.3.1.1	show ip dhcp client
Description	
	With this command, you display the configuration settings of the DHCP client.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Syntax	
	Call the command without parameters:
	show ip dhcp client
Result	
	The configuration settings of the DHCP client are displayed.
7.3.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.

7.3.2.1 ip dhcp config-file-request

Description

If the DHCP config file request option is set, the device requests the TFTP address and the name of a configuration file from the DHCP server. If the device is restarted following the completed download, the configuration settings are read from this file.

With this command, you enable the DHCP config file request option.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameters:

ip dhcp config-file-request

Result

The DHCP config file request option is enabled.

Further notes

You disable the DHCP config file request option with the no ip dhcp config-file-request command.

7.3.2.2 no ip dhcp config-file-request

Description

With this command, you disable the DHCP config file request option.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

Network protocols

7.3 DHCP client

no ip dhcp config-file-request

Result

The DHCP config file request option is disabled.

Further notes

You enable the DHCP config file request option with the ${\tt ip\ dhcp\ config-file-request}$ command.

7.3.2.3 ip dhcp client mode

Description

With this command, you configure the type of identifier with which the DHCP client logs on with its DHCP server.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

ip dhcp client mode {mac|client-id<client-id>|sysname|pnio-name-of-station}

The parameters have the following meaning:

Parameter	Description	Range of values / note
mac	The client registers with its MAC address	-
client-id	The client registers with the assigned ID	-
client-id	Name of the assigned ID	max. 32 characters
sysname	The client registers with the assigned system	-
	name	
pnio-name-of- station	Name of the connected PROFINET device	-

Result

The registration mode of the DHCP client is configured.

7.4 DHCP server

This section describes commands relevant for configuring the DHCP server.

Requirement

The connected devices are configured so that they obtain the IPv4 address from a DHCP server.

7.4.1 The show comman

This section describes commands with which you display various settings.

7.4.1.1 show ip dhcp-server bindings

Description

This command shows the current assignments of IPv4 addresses of the DHCP server.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> Or cli#

Syntax

Call the	e command without parameter assignment:
show in	dhcp-server bindings

Result

The information is displayed.

7.4.1.2 show ip dhcp-server pools

Description

The command shows the DHCP server configuration of a specific IPv4 address band or all IPv4 address bands and the corresponding DHCP options.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

7.4 DHCP server

The command prompt is as follows:

```
cli> Or cli#
```

Syntax

Call up the command with the following parameters:

show ip dhcp-server pools [pool-id (1-5)]

The parameter has the following meaning:

Parameter	Description	Range of values / note
pool-id	ID of the addressed IPv4 address band	1 5

Result

The configuration of the DHCP server and the DHCP options is displayed.

7.4.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

7.4.2.1 ip dhcp-server

Description

With this command, you enable the DHCP server on the device.

Note

To avoid conflicts with IPv4 addresses, only one device may be configured as a DHCP server in the network.

Note

Maximum number of IP addresses

The maximum number of IPv4 addresses that the DHCP server supports is 100. In other words, a total of 100 IPv4 addresses (dynamic + static).

With the static assignments, you can create a maximum of 20 entries.

Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	Call the command without parameter assignment:
Result	The DHCP server is enabled.
Further notes	You disable the DHCP server with the no ip dhcp-server. command.
7.4.2.2 no	ip dhcp-server
Description	With this command, you disable the DHCP server on the device.
Requirement	You are in the Global Configuration mode. The command prompt is as follows: cli(config)#
Syntax	Call the command without parameter assignment:
Result	The DHCP server is disabled.
Further notes	You enable the DHCP server with the ip dhcp-server command.

Network protocols
7.4 DHCP server

7.4.2.3	no ip dhcp-server icmp-probe
Description	
	With this command you disable the function "Probe address with ICMP echo before offer".
Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameter assignment:
	no ip dhcp-server icmp-probe
Result	
	The function is disabled.
Further notes	
	You enable the function with the ip dhcp-server icmp-probe command.
7.4.2.4	ip dhcp-server icmp-probe
Description	
-	With this command you enable the function "Probe address with ICMP echo before offer". The DHCP server checks whether or not the IPv4 address has already been assigned. If no reply is received, the DHCP server can assign the IPv4 address.
Requirement	
	You are in the Global Configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameter assignment:
	ip dhcp-server icmp-probe

Result

The function is enabled.

Further notes

You disable the function with the no ip dhcp-server icmp-probe command.

7.4.2.5 ip dhcp-server pool

Description

With this command, you have three options of changing to the DHCPPOOL configuration mode and to assign an interface to the IPv4 address band.

- 1. If you call the command ip dhcp-server pool with the parameter pool-id (1-5), you change to the corresponding DHCPPOOL configuration mode. The corresponding pool ID must have already been created.
- 2. If you call the ip dhcp-server pool command with the parameter vlan or interfacetype/interface-id, an IPv4 address band with the next free pool ID is created and the specified interface assigned directly to it. This is followed by a change to the DHCPPOOL configuration mode. You then configure the other settings in the DHCPPOOL configuration mode.
- 3. If you call the ip dhcp-server pool command without parameters, an IPv4 address band with the next free pool ID is created and you change directly to the corresponding DHCPPOOL configuration mode.

You then configure the interface and the other settings in the DHCPPOOL configuration mode.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

ip dhcp-server pool [{ <pool-id (1-5)> | [{ vlan <vlan-id (1-4094)> | <interface-type> <interface-id> }]}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
pool-id	ID of the addressed IPv4 address band	1 5
vlan	Keyword for a VLAN connection	-

7.4 DHCP server

Parameter	Description	Range of values / note
vlan-id	Number of the addressed VLAN	1 4094
interface-type	Type of interface	Specify a valid interface.
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

The ID of the addressed IPv4 address band is configured.

You are now in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Further notes

	You exit the DHCPPOOL configuration mode with the ${\tt exit}$ command.
	You delete the entry with the no ip dhcp-server pool command.
See also	
	Interface identifiers and addresses (Page 34)
7.4.2.6	no ip dhcp-server pool
Description	
	With this command, you delete the required IPv4 address band.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call up the command with the following parameters:
	no ip dhcp-server pool <pool-id (1-5)=""></pool-id>

The parameter has the following meaning:

Parameter	Description	Range of values / note
pool-id	ID of the addressed IPv4 address band	1 5

Result

The required IPv4 address band is deleted.

Further notes

You create the IPv4 address band with the ip dhcp-server pool command.

7.4.3 Commands in the DHCPPOOL configuration mode

This section describes commands that you can call up in the DHCPPOOL Configuration mode.

In the Global Configuration mode, enter the $\tt ip\ dhcp-server\ pool\ command\ to\ change\ to\ this\ mode.$

- If you exit the DHCPPOOL Configuration mode with the exit command, you return to the Global Configuration mode.
- If you exit the DHCPPOOL Configuration mode with the end command, you return to the Privileged EXEC mode.

7.4.3.1 lease-time

Description

With this command, you specify how long the assigned IPv4 address remains valid. When half the period of validity has elapsed. the DHCP client can extend the period of the assigned IPv4 address. When the entire time has elapsed, the DHCP client needs to request a new IPv4 address.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

lease-time <seconds (60-31536000)>

Network protocols

7.4 DHCP server

The parameter has the following meaning:

Parameter	Description	Range of values / note
seconds	Time until renewal of the assigned IPv4 address in seconds	60 31536000

Result

The time is configured.

Further notes

You display the setting with the show ip dhcp-server pools command.

7.4.3.2 network

Description

With this command you configure the IPv4 address band from which the DHCP client receives any IPv4 address.

Note

Maximum number of IP addresses

The maximum number of IPv4 addresses that the DHCP server supports is 100. In other words, a total of 100 IPv4 addresses (dynamic + static).

With the static assignments, you can create a maximum of 20 entries.

Assignment of IP addresses

The requirement for the assignment is that the IPv4 address of the interface is located within the IPv4 address band. If this is not the case, the interface does not assign any IPv4 addresses

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

network <lower-IP> <upper-IP> { <subnet-mask> | / <prefix-length (1-32)> }
The parameters have the following meaning:

Parameter	Description	Range of values / note
lower-IP	Start of the IPv4 address band	Enter a valid IPv4 address.
upper-IP	End of the IPv4 address band	Enter a valid IPv4 address.
subnet-mask	Subnet mask of the corresponding subnet	Enter a valid subnet mask
prefix-length	Decimal representation of the mask as a number of "1" bits	1 32

Result

The IPv4 address band is configured. The DHCP options 1, 3, 6, 66 and 67 are created automatically. With the exception of option 1, the options can be deleted.

Further notes

You display the setting with the show ip dhcp-server pools command. You assign an IP address to an interface with the set interface command. You configure the DHCP option 67 with the option value-string command. You configure the DHCP options 3, 6 and 66 with the option command. You delete the DHCP option with the no option command.

7.4.3.3 option (IP address)

Description

With this command, you create DHCP options that contain an IPv4 address or an IPv4 address list as DHCP parameter. The various DHCP options are defined in RFC 2132.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

option <option-code> { <ip-address-list> | int-ip }

7.4 DHCP server

Parameter	Description	Range of values / note
option-code	Code of the DHCP option	Enter a valid DHCP option. The following DHCP options are not supported:
		 50 - 60 255 The following DHCP options are created
		automatically when the IPv4 address band is created.
		• 3 - Router
		6 - DNS server
		• 66 - TFTP server name
ip-adress- list	IPv4 address or IPv4 address list	Enter the IPv4 address or the IPv4 ad- dress list.
		DHCP options 3 (Router) and 6 (DNS):
		Enter the DHCP parameter as an IPv4 address, e.g. 192.168.100.2. With DHCP option 6, you can specify several IPv4 addresses separated by commas.
		DHCP option 66 (TFTP Server):
		Enter the DHCP parameter as an IPv4 address, e.g. 192.168.100.2 or the FQDN name. You can specify several IPv4 addresses separated by commas.
int-ip	Uses IPv4 address of the interface that is assigned to the IPv4 address band.	-

The parameters have the following meaning:

Result

The DHCP option is created. In total a maximum of 20 DHCP options are possible.

Further notes

You display the setting with the show ip dhcp-server pools command.

You disable the IPv4 address band with the no pool-enable command.

You delete the DHCP option with the $\tt no \ option$ command.

You configure the DHCP option with a string with the ${\tt option\ value-string\ command.}$

You configure all other DHCP options with a hexadecimal value with the ${\tt option\ value-hex}$ command.

You configure the interface with the ${\tt set}$ interface command.

7.4.3.4 option value-hex

Description

With this command, you create DHCP options that contain a hexadecimal value as DHCP parameter. The various DHCP options are defined in RFC 2132.

The exceptions are the DHCP options: 1, 3, 12, 66 and 67. You configure the DHCP options 3, 6 and 66 with the command $_{option}$ (IP address) and the DHCP options 12 and 67 with the command $_{option}$ value-string.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

option <option-code> value-hex <dhcp-param>

The parameters have the following meaning:

Parameter	Description	Range of values / note
option-code	Code of the DHCP option	Enter a valid DHCP option.
		The following DHCP options are not sup- ported:
		• 50 - 60
		• 255
dhcp-param	DHCP parameter in hexadecimal	Enter a valid hexadecimal value.
		Format: XXXXX e.g. C0A86402

Result

The DHCP option is configured. In total a maximum of 20 DHCP options are possible.

Further notes

You display the setting with the show ip dhcp-server-pools command. You disable the IPv4 address band with the no pool-enable command. You delete the DHCP option with the no option command. 7.4 DHCP server

7.4.3.5 option value-string

Description

With this command you configure DHCP options 12, 66 and 67 that contain a string as DHCP parameter. The DHCP options 66 and 67 are created automatically when the IPv4 address band is created.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

option <option-code> value-string <dhcp-param>

The parameters have the following meaning:

Parameter	Description	Range of values / note
option-code	Code of the DHCP option	• 12 - Host name
		66 - TFTP server
		• 67 - Bootfile name
dhcp-param	Name of the file	Enter the name in the string format.

Result

The DHCP option is configured.

Further notes

You display the setting with the show ip dhcp-server pools command. You delete the DHCP option with the no option command. You configure the DHCP options 3 and 6 with the option (IP address) command. You disable the IPv4 address band with the no pool-enable command.

7.4.3.6 no option

Description

With this command, you delete the DHCP option with the specified number.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

no option <option-code>

The parameter has the following meaning:

Parameter	Description	Range of values / note
option-code	Code of the DHCP option	Enter a valid DHCP option code.

Result

The specified DHCP option is deleted.

Further notes

You configure the DHCP options 12, 66 and 67 with the option value-string command. You configure the DHCP options 3 and 6 with the option command.

7.4.3.7 pool-enable

Description

With this command you specify that this IPv4 address band will be used.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

```
cli(config-dhcp-pool-<ID>) #
```

Syntax

Call the command without parameter assignment:

pool-enable

7.4 DHCP server

Result

The setting is enabled.

Note

If the IPv4 address band is enabled, the following parameters can no longer be edited:

- DHCP options (option ...)
- Static Leases (static-lease)

Further notes

You display the setting with the show ip dhcp-server pools command. You disable the setting with the no pool-enable command.

7.4.3.8 no pool-enable

Description

With this command you specify that this IPv4 address band will not be used.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call the command without parameter assignment: no pool-enable

Result

The setting is disabled.

Further notes

You display the setting with the show ip dhcp-server pools command. You enable the setting with the pool-enable command.

7.4.3.9 set-interface

Description

With this command, you specify the interface via which the IPv4 addresses are dynamically assigned.

The requirement for the assignment is that the IPv4 address of the interface is located within the IPv4 address band. If this is not the case, the interface does not assign any IPv4 addresses.

Requirement

You are in the DHCPPOOL configuration mode.

The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

set-interface {vlan <vlan-id (1-4094)> | <interface-type> <interface-id> }

The parameters have the following meaning:

Parameter	Description	Range of values / note
vlan	Keyword for a VLAN connection.	-
vlan-id	Number of the addressed VLAN	1 4094
interface-type	Type or speed of the interface	Enter a valid interface
interface-id	Module no. and port no. of the interface	

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The interface is assigned. Before the IPv4 address band can be used, it still needs to be activated.

Further notes

You display the setting with the show ip dhcp-server pools command. You enable the IPv4 address band with the pool-enable command. 7.4 DHCP server

7.4.3.10 static-lease

Description

With this command you specify that devices with a certain MAC address or client ID are assigned to the preset IPv4 address.

Requirement

- The assignment has not yet been created.
- You are in the DHCPPOOL configuration mode. The command prompt is as follows:

cli(config-dhcp-pool-<ID>) #

Syntax

Call up the command with the following parameters:

static-lease {mac <mac-address> | client-id <string>} <ip-address>

The parameters have the following meaning:

Parameter	Description	Range of values / note
mac	Keyword for a MAC address	-
mac-address	Unicast MAC address	Specify the MAC address.
		aa:bb:cc:dd:ee:ff
client-id	Keyword for a DHCP client ID	-
string	Freely definable DHCP client ID	Enter the required designation.
		Maximum of 254 characters
ip-address	Unicast IPv4 address	Enter a valid IPv4 address.
		The IPv4 address must match the subnet of the IPv4 address band.

Result

The assignment is specified.

Further notes

You display the setting with the show ip dhcp dhcp-server bindings command. You disable the IPv4 address band with the no pool-enable command. You delete the assignment with the no static-lease command.

7.4.3.11 no static-lease

Description

With this command, you delete the assignment of an IPv4 address to a MAC address.

Requirement

You are in the DHCPPOOL configuration mode. The command prompt is as follows: cli(config-dhcp-pool-<ID>)#

Syntax

Call up the command with the following parameters:

no static-lease { mac <mac-address> | client-id <string> }

The parameter has the following meaning:

Parameter	Description	Range of values / note
mac	Keyword for a MAC address	-
mac-address	Unicast MAC address	Specify the MAC address.
		aa:bb:cc:dd:ee:ff
client-id	Keyword for a DHCP client ID	-
string	Freely definable DHCP client ID	Enter the required designation.

Result

The assignment is deleted.

Further notes

You configure the assignment with the ${\tt static-lease}$ command.

7.5	DNS This section describes commands of the Domain Name System (DNS).
7.5.1	The "show" commands This section describes commands with which you display various settings.
7.5.1.1	show dnsclient information
Description	This command shows the configuration of the DNS client.
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:
Syntax	Call the command without parameters: show dnsclient information
Result	The information is displayed.
7.5.1.2	show ddnsclient information
Description	This command shows the configuration of the dynamic DNS client.
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show ddnsclient overview

Result

The configuration is displayed.

7.5.2 Commands in the global configuration mode

7.5.2.1 Introductory sentence for the global configuration mode

This section describes commands that you can call up in the Global configuration mode. In Privileged EXEC mode, enter the configure terminal command to change to this mode. Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

7.5.2.2 dnsclient

Description

With this command, you change to the DNS CLIENT configuration mode.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameter assignment: dnsclient

Result

You are now in the DNS CLIENT configuration mode. The command prompt is as follows:

cli(config-dnsclient)#

Network protoc	cols
7.5 DNS	
Further notes	
	You exit the DNS CLIENT configuration mode with the end or exit command.
7523	dnsproxy
7.0.2.0	
Description	
Description	With this command, you share to the DNC DDOV/ configuration mode
	with this command, you change to the DNS PROXY conliguration mode.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameter assignment:
	dnsproxy
Result	
	You are now in the DNS PROXY configuration mode.
	The command prompt is as follows:
	cli(config-dnsproxy)#
Further notes	
	You exit the DNS PROXY configuration mode with the end or exit command.
7524	ddnsclient
7.0.2.4	
Description	
Description	With this command, you change to the DDNS Client configuration mode
	with this command, you change to the DDNS Client configuration mode.
Deartherest	
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#

Syntax

Call the command without parameters:

ddnsclient

Result

You are now in the DDNS Client configuration mode. The command prompt is as follows:

cli(config-ddnsclient)#

Further notes

You exit the DDNS Client configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

7.5.3 Commands in the DNS CLIENT configuration mode

This section describes commands that you can call up in the DNS CLIENT configuration mode.

In the Global configuration mode, enter the dnsclient command to change to this mode.

- If you exit the DNS CLIENT configuration mode with the $\tt exit$ command, you return to the Global configuration mode.
- If you exit the DNS CLIENT configuration mode with the end command, you return to the Privileged EXEC mode.

7.5.3.1 manual srv

Description

With this command, you specify a manually configured DNS server. A maximum of three DNS servers can be configured.

Requirement

You are in the DNS CLIENT configuration mode.

The command prompt is as follows:

cli(config-dnsclient)#

Syntax

Call up the command with the following parameters:

manual srv <ip_addr>

Network protocols

7.5 DNS

The parameter has the following meaning:

Parameter	Description	Range of values / note
ip_addr	IPv4 address	Enter a valid IPv4 address.

Result

The DNS server is configured.

Further notes

	You display this setting and other information with the show dnsclient informationen command.
	You configure the DNS server type with the server type command.
	You delete the DNS server with the manual command.
See also	
	Interface identifiers and addresses (Page 34)
7.5.3.2	no manual srv
Description	
	With this command, you delete a specific DNS server or all DNS servers.
Requirement	
	You are in the DNS CLIENT configuration mode.
	The command prompt is as follows:
	cli(config-dnsclient)#
Syntax	
	Call up the command with the following parameters:
	no manual {srv <ip_addr> all}</ip_addr>

The parameters have the following meaning:

Parameter	Description	Range of values / note
srv	Keyword for DNS server	-
ip address	IPv4 address	Enter the IPv4 address of the DNS server.
all	Deletes all DNS servers	-

Result

The specified DNS server is deleted.

Further notes

You create a DNS server entry with the manual srv command. You display this setting and other information with the show dnsclient information command.

7.5.3.3 server type

Description

With this command, you specify which DNS server the device uses.

Requirement

You are in the DNS CLIENT configuration mode.
The command prompt is as follows:
cli(config-dnsclient)#

Syntax

Call up the command with the following parameters:

server type {all | manual | learned}

The parameters have the following meaning:

Parameter	Description	Range of values / note
all	The device uses all available DNS servers.	Default
manual	The device uses only the manually configured DNS servers.	-
learned	The device uses the DNS servers that are transferred automatically.	-

Result

The device uses the specified DNS servers.

Further notes

You display this setting and other information with the show dnsclient information command.

You create a manually configured DNS server with the manual srv command.

Network protoc	rols
7.5 DNS	
7.5.3.4	shutdown
Description	
	With this command, you end the DNS client.
Requirement	
-	You are in the DNS CLIENT configuration mode.
	The command prompt is as follows:
	cli(config-dnsclient)#
Syntax	
•	Call the command without parameter assignment:
	shutdown
Result	
	The DNS client is ended.
Further notes	
	You start the DNS client with the no shutdown command.
	You display this setting and other information with the show dnsclient information
	command.
7.5.3.5	no shutdown
Description	
	With this command, you start the DNS client of the device. To be able to use the function, a
	DNS server must be reachable.
Doguiromont	
Requirement	Veu ere in the DNC OLIENT configuration mode
	The command prompt is as follows:
	<pre>cli(config-dnsclient)#</pre>
Suntax	
Syntax	Call the command without peremeter accience and
	Can the command without parameter assignment:

no shutdown

Result

The DNS client of the device is enabled and when necessary sends queries to the DNS server.

Further notes

You end the DNS client with the shutdown command.

You display this setting and other information with the show dnsclient information command.

7.5.4 Commands in the DNS PROXY configuration mode

This section describes commands that you can call up in the DNS PROXY configuration mode.

In the Global configuration mode, enter the dnsproxy command to change to this mode.

- If you exit the DNS PROXY configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the DNS PROXY configuration mode with the end command, you return to the Privileged EXEC mode.

7.5.4.1 cachenxdomain

Description

With this command, you enable the caching of NXDOMAIN responses. This means that the domain names that were unknown to the DNS server remain in the cache.

Requirement

You are in the DNS PROXY configuration mode.

The command prompt is as follows:

cli(config-dnsproxy)#

Syntax

Call the command without parameter assignment:

cache nxdomain

Network protoco	ols
7.5 DNS	
Result	The setting is enabled.
Further notes	You disable the setting with the no cachenxdomain command.
7.5.4.2	no cachenxdomain
Description	With this command, you disable the caching of NXDOMAIN responses.
Requirement	You are in the DNS PROXY configuration mode. The command prompt is as follows: cli(config-dnsproxy)#
Syntax	Call the command without parameter assignment:
Result	The setting is disabled.
Further notes	You enable the setting with the cachenxdomain command.
7.5.4.3	shutdown
Description	With this command, you disable the proxy of the DNS server.
Requirement	You are in the DNS PROXY configuration mode. The command prompt is as follows: cli(config-dnsproxy)#

Syntax	Call the command without parameter assignment:
Result	The setting is disabled.
Further notes	You enable the setting with the no shutdown command.
7.5.4.4	no shutdown
Description	With this command, you enable the proxy of the DNS server.
Requirement	
	You are in the DNS PROXY configuration mode.
	cli(config-dnsproxy)#
Syntax	Call the command without parameter assignment:
Result	The setting is enabled.
Further notes	You disable the setting with the shutdown command.
7.5.5	Commands in the DDNS Client configuration mode This section describes commands that you can call up in the DDNS CLIENT configuration mode.

In the Global configuration mode, enter the ddnsclient command to change to this mode.

- If you exit the DDNS CLIENT configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the DDNS CLIENT configuration mode with the end command, you return to the Privileged EXEC mode.

7.5.5.1 service

Description

With this command, you enable the dynamic DNS provider.

Requirement

You are in the DDNS Client configuration mode.

The command prompt is as follows:

cli(config-ddnsclient)#

Syntax

Call up the command with the following parameters:

service {show-services | <index>}

The parameters have the following meaning:

Parameter	Description	Range of values
show- services	Lists the available providers.	-
index	Number corresponding to a specific provider.	Specify a valid number.

Result

The specified entry is enabled.

Further notes

You display this setting and other information with the show ddnsclient information command.

You disable an entry with the no service command.

7.5.5.2 no service

Description

With this command, you disable the dynamic DNS provider.

Requirement

You are in the DDNS Client configuration mode.

The command prompt is as follows:

cli(config-ddnsclient)#

Syntax

Call up the command with the following parameters:

no service {show-services | <index>}

The parameters have the following meaning:

Parameter	Description	Range of values
show- services	Lists the available providers.	-
index	Number corresponding to a specific provider.	Specify a valid number.

Result

The specified entry is disabled.

Further notes

You display this setting and other information with the show ddnsclient information command.

You enable an entry with the no service command.

7.5.5.3 userhost

Description

With this command, you configure the host name that you have agreed with your dynamic DDNS provider for the device, e.g. example.no-ip.com.

Requirement

You are in the DDNS Client configuration mode.

The command prompt is as follows:

cli(config-ddnsclient)#

Syntax

Call up the command with the following parameters:

userhost {show-services | <index> <host>}

7.5 DNS

The parameters have the following meaning:

Parameter	Description	Range of values / note
show-services	Lists the available providers.	-
index	Number corresponding to a specific provider.	Specify a valid number.
host	Host name	Specify the agreed host name.

Result

The host name is configured.

Further notes

You display this setting and other information with the $\tt show \ ddnsclient \ information \ command.$

You configure the user name with the username command.

You configure the password with the password command.

7.5.5.4 username

Description

With this command, you configure the user name with which the device logs on to the dynamic DNS server.

Requirement

You are in the DDNS Client configuration mode.

The command prompt is as follows:

cli(config-ddnsclient)#

Syntax

Call up the command with the following parameters:

username {show-services | <index> <username>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
show-services	Lists the available providers.	-
index	Number corresponding to a specific provider.	Specify a valid number.
username	User names	Specify the negotiated user name.

Result

The user name is configured.

Further notes

You display this setting and other information with the show ddnsclient information command.

You configure the password with the password command.

7.5.5.5 password

Description

With this command, you configure the password with which the device logs on to the dynamic DNS server.

Requirement

You are in the DDNS Client configuration mode.

The command prompt is as follows:

cli(config-ddnsclient)#

Syntax

Call up the command with the following parameters:

password {show-services | <index> <password>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
show-services	Lists the available providers.	-
index	Number corresponding to a specific provider.	Specify a valid number.
password	Password	Enter the negotiated password.

Result

The password is configured.

Further notes

You display this setting and other information with the show ddnsclient information command.

You configure the user name with the username command.

7.6 SNMP

This section describes commands of the Simple Network Management Protocol (SNMP).

7.6.1 The "show" commands

This section describes commands with which you display various settings.

7.6.1.1 show snmp

Description

This command shows the status information of SNMP.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show snmp

Result

The status information is displayed.

7.6.1.2 show snmp community

Description

This command shows the details of the configured of SNMP communities.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax	
	Call the command without parameters:
	show snmp community
Result	
	The details of the configured SNMP communities are displayed.
7.6.1.3	show snmp engineID
Description	
Description	This command shows the SNMP identification number of the device.
Requirement	
·	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Syntax	
	Call the command without parameters:
	show snmp engineID
Pocult	
Nesul	The SNMP identification number of the device is displayed
7.6.1.4	show snmp filter
Description	
	This command shows the configured SNMP filters.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#

Network protoc	cols
7.6 SNMP	
e (
Syntax	
	Call the command without parameters:
	show snmp filter
Result	
	The configured SNMP filters are displayed.
7.6.1.5	show snmp group
Description	
	This command shows the configured SNMP groups.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	nie command prompt is as follows.
Syntax	
	Call the command without parameters:
	show snmp group
Result	
	The configured SNMP groups are displayed.
7.6.1.6	show snmp group access
Description	
Description	This command shows the rights of the configured SNMP groups
	This command shows the rights of the comigared or win groups.
Requirement	
-	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#

Syntax	
	Call the command without parameters:
	show snmp group access
.	
Result	
	The rights of the configured SNMP groups are displayed.
7.6.1.7	show snmp inform statistics
Description	
	This command shows the statistics of the Inform Messages.
Requirement	
rtoquironioni	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Svntax	
-j	Call the command without parameters:
	show snmp inform statistics
Result	
	The statistics of the Inform Messages are displayed.
7.6.1.8	show snmp notif
Description	
	With this command, you display the configured SNMP notification types.
Requirement	
-	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#

Network protoc	cols
7.6 SNMP	
Svntax	
- ,	Call the command without parameters:
	show snmp notif
Result	
	The configured SNMP notification types are displayed.
7.6.1.9	show snmp targetaddr
Description	
Decemption	This command above the configured SNMD target addresses
	This command shows the configured Siving target addresses.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Svntax	
- ,	Call the command without parameters:
	snow snmp targetadar
Result	
	The configured SNMP target addresses are displayed.
7.6.1.10	show snmp targetparam
Description	
•	This command shows the configured SNMP target parameters.
Doquiromont	
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#

Syntax	
	Call the command without parameters:
	show snmp targetparam
Result	
	The configured SNMP target parameters are displayed.
7.6.1.11	show snmp tcp
Description	
	This command shows the configuration for SNMP via TCP.
.	
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Of cli#
Suntax	
Syntax	Call the command without parameters:
	Show Sharp cop
Result	
	The configuration for SNMP via TCP is displayed.
7.6.1.12	show snmp user
	•
Description	
	This command shows the settings for the SNMP user.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#

Network protoc	ols
7.6 SNMP	
Syntax	
	Call the command without parameters:
	show snmp user
Result	
	The settings for the SNMP user are displayed.
7.6.1.13	show snmp viewtree
Description	This command shows the settings for the SNMP tree view.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#
Syntax	
	Call the command without parameters:
	show snmp viewtree
Popult	
Result	The settings for the SNMP tree view are displayed.
7.6.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or $exit$ command and are then in the Privileged EXEC mode again.

7.6.2.1	snmpagent
Description	
	With this command, you enable the SNMP agent function.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	snmpagent
Result	
	The SNMP agent function is enabled.
Further notes	
	You disable the SNMP agent function with theno snmpagent command.
7.6.2.2	no snmpagent
Description	
	With this command, you disable the SNMP agent function.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	no snmpagent

....

Result

The SNMP agent function is disabled.

Further notes

You enable the SNMP agent function with the ${\tt snmpagent}$ command.

7.6.2.3 snmp agent version

Description

With this command, you configure whether all SNMP queries or only SNMPv3 queries are processed.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp agent version {v3only|all}

The parameters have the following meaning:

Parameter	Description	Range of values / note
v3only	Only SNMPv3 queries are processed	-
all	All SNMP queries are processed	Default: all

Result

The setting is configured.

7.6.2.4 snmp access

Description

With this command, you configure the access to an SNMP group.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
snmp access <GroupName> {v1|v2c|v3 {auth|noauth|priv}}
[read <ReadView|none>][write <WriteView|none>][notify <NotifyView|none>]
[{volatile|nonvolatile}]
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
GroupName	Name of the group to which access is configured	max. 32 characters
Version	Selects the version of the protocol used	 v1 v2c v3
Authentication	Selects the authentication method.	 auth Enables MD5 or SHA as au- thentication method noauth No authentication priv Enables authentication and encryption
read	The data can be read. Keyword	ReadView none
write	The data can be read and written Keyword	WriteViewnone
notify	Changes can be sent as a tag. Keyword	NotifyViewnone
Storage Type	Specifies whether the settings remain following a restart.	 volatile : The settings are lost after a restart nonvolatile : The settings are retained after a restart

The keywords need to be specified.

If optional parameters are not specified when configuring a group, the default value will be used.

7.6 SNMP

Result	The settings for access to an SNMP group are configured.			
Further notes				
	You delete the acces	You delete the access to an SNMP group with the no snmp access command.		
	You display the config	gured SNMP groups with the show snm	p group command.	
	You display the accest command.	You display the access configurations for SNMP groups with the show snmp group access command.		
	You display the confi	gured SNMP tree views with the show	snmp viewtree command .	
7.6.2.5	no snmp access			
Description	scription With this command, you delete the access to an SNMP group.			
Requirement				
	You are in the Global configuration mode.			
	The command prompt is as follows:			
	cli(config)#			
Syntax				
Call up the command with the following parameters:				
	no snmp access <groupname> {v1 v2c v3 {auth noauth priv}}</groupname>			
The parameters have the following meaning:				
	Parameter	Description	Range of values / note	
	GroupName	Name of the group to which access is deleted	max. 32 characters	
	Version	Selects the version of the protocol used	 v1 v2c v3 	
	Authentication	Selects the authentication method.	• auth	

Result

The access to an SNMP group is deleted.

•

noauthpriv

Further notes

You configure the setting with the snmp access command.

You display the configured SNMP groups with the show snmp group command.

You display the access configurations for SNMP groups with the $\tt show \ snmp \ group \ access \ command.$

You display the configured SNMP tree views with the show snmp viewtree command.

7.6.2.6 snmp community index

Description

With this command, you configure the details of an SNMP community.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp community index <CommunityIndex> name <CommunityName>
 security <SecurityName> [context <Name>][{volatile|nonvolatile}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
CommunityIndex	Index of the community	max. 32 characters
name	Keyword for the name of the communi- ty	-
CommunityName	Name of the community	max. 32 characters
security	Keyword for the security name	-
SecurityName	Security name	max. 32 characters
context	Keyword for the context name	-
Name	Context name	max. 32 characters
Storage type	Specifies whether the settings remain following a restart.	 : The settings are lost after a restart : The settings are retained after a restart

If optional parameters are not specified when configuring a community, the default values apply.

Network protocols	
7.6 SNMP	
D "	
Result	
	The settings are configured.
Further notes	
	You delete the details of an SNMP community with the no snmp community index command.
	You show the details of an SNMP community with the show snmp community command.
	You show the status information of the SNMP communication with the ${\tt show \ snmp}$ command.
7627 рс	somo community index
1.0.2.1 IIC	
Description	

With this command, you delete the details of an SNMP community.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call up the command with the following parameters:

no snmp community index <CommunityIndex>

The parameter has the following meaning:

Parameter	Description	Range of values / note
CommunityIndex	Name of the community	max. 32 characters

Result

The details of an SNMP community are deleted.

Further notes

You configure the details of an SNMP community with the snmp community index command. You show the details of an SNMP community with the show snmp community command. You show the status information of the SNMP communication with the show snmp command.
7.6.2.8 snmp filterprofile

Description

With this command, you configure a filter that describes the access rights to the MIB tree.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp filterprofile <profile-name> <OIDTree> [mask<OIDMask>]
 {included|excluded}[{volatile|nonvolatile}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
profile- name	Name of the filter profile	max. 32 characters
OIDTree	Object ID	Path information of the MIB tree
mask	Keyword for the OID mask	-
OIDMask	Mask that filters access to the elements of the MIB tree	A series of "0" and "1" separated by dots in keeping with the path infor- mation of the MIB tree
-	Specifies whether the filtered elements are used or excluded	includedexcluded
-	specifies whether the settings remain fol- lowing a restart:	 volatile (volatile): The default settings are used after a restart nonvolatile (non-volatile): The saved settings are used after a restart

Note that the meaning of the filter mask changes depending on the "included/excluded" parameter:

- ...0... and "included" means: Access denied
- ...0... and "excluded" means: Access permitted
- ...1... and "included" means: Access permitted
- ...1... and "excluded" means: Access denied

Network protocols	
7.6 SNMP	

Result	
	The filter is created.
Further notes	
	You delete a filter with the no snmp filterprofile command.
	You display the created filter with the show snmp filter table command.
7.6.2.9 r	no snmp filterprofile
Description	
	With this command, you delete a filter.
Requirement	
·	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call up the command with the following parameters:
	no snmp filterprofile <profilename><oidtree></oidtree></profilename>
	The parameters have the following meaning:

Parameters	Description	Range of values / note
profilename	Name of the filter profile	max. 32 characters
OIDTree	Object ID	Path information of the MIB tree

Result

The filter is deleted.

Further notes

You create a filter with the snmp filterprofile command. You display the created filter with the show snmp filter table command.

7.6.2.10 snmp group

Description

With this command, you configure the details of an SNMP group.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp group <GroupName> user <UserName> security-model {v1|v2c|v3}
 [{volatile|nonvolatile}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
GroupName	Name of the group	max. 32 characters
user	Keyword for the user name	-
UserName	Name of the user	max. 32 characters
security-model	Specifies which security settings will be	• v1
	used.	• v2c
		• v3
Storage type	Specifies whether the settings remain following a restart.	 volatile : The settings are lost after a restart
		• nonvolatile : The settings are retained after a restart.

If optional parameters are not specified when configuring a group, the default values apply.

Result

The details of the group are configured.

Further notes

You delete the details of an SNMP group with the no snmp group command. You display the created SNMP groups with the show snmp group command. You display the created SNMP user with the show snmp user command.

7.6.2.11 no snmp group

Description

With this command, you delete the details of an SNMP group.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no snmp group <GroupName> user <UserName> security-model {v1|v2c|v3}

The parameters have the following meaning:

Parameter	Description	Range of values / note
GroupName	Name of the group	max. 32 characters
user	Keyword for the user name	-
UserName	Name of the user	max. 32 characters
security-model	Specifies which security settings are	• v1
	used for sending.	• v2c
		• v3

Result

The details of the group are deleted.

Further notes

You change the details of an SNMP group with the snmp group command. You display the created SNMP groups with the show snmp group command. You display the created SNMP user with the show snmp user command.

7.6.2.12 snmp notify

Description

With this command, you configure the details of the SNMP notifications.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp notify <NotifyName> tag <TagName> type {Trap|Inform}
 [{volatile|nonvolatile}]

The parameters have the following meaning:

Parameter	Description	Range of values / note
NotifyName	Name of the SNMP notification	max. 32 characters
tag	Keyword for a target key	-
TagName	Name of the target key	max. 32 characters
Туре	Type of the SNMP notification	 Trap Generates a trap. Inform Generates a log entry or sends an entry to the log server.
Storage type	Specifies whether the settings remain following a restart.	 : The settings are lost after a restart : The settings are retained after a restart

Result

The details of the SNMP notifications are configured.

Further notes

You delete the details of an SNMP notification with the no snmp notify command.

You display the configured SNMP notifications with the show snmp notif command.

You display the configured SNMP target addresses with the ${\tt show \ snmp \ targetaddr}$ command.

7.6.2.13 no snmp notify

Description

With this command, you delete the details of the SNMP notifications.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no snmp notify <NotifyName>

The parameter has the following meaning:

Parameter	Description	Range of values / note
NotifyName	Name of the notification	max. 32 characters

Result

The details of the SNMP notifications are deleted.

Further notes

You change the details of an SNMP group with the snmp notify command.

You display the configured SNMP notifications with the show snmp notif command.

You display the configured SNMP target addresses with the ${\tt show \ snmp \ targetaddr}$ command.

7.6.2.14 snmp targetaddr

Description

With this command, you configure the SNMP target address.

Requirement

• The SNMP target parameters are configured.

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
snmp targetaddr <TargetAddressName> param <ParamName> {ipv4<IPAddress>}
[timeout <Seconds(1-1500)] [retries <RetryCount(1-3)]
[taglist <TagIdentifier | none>] [{volatile | nonvolatile}]
[port <integer (1-65535)>]
```

The parameters have the following meaning:

Parameter	Description	Range of values
TargetAddressName	Name of the target address	max. 32 characters
param	Keyword for the parameter name	-
ParamName	Name of the destination address or the designation of the parameter name	max. 32 characters
ipv4	Keyword for an IPv4 address	-
IPAddress	Value for an IPv4 unicast address	Enter a valid IPv4 unicast address.
timeout	Keyword for the time the SNMP agent waits for a response before it repeats the inform request message	-
Seconds	Time in seconds	1 1500
retries	Keyword for the maximum number of attempts to obtain a response to an inform request message	-
RetryCount	Number of attempts	1 3
taglist	Keyword for tag list	-
TagIdentifier	Tag identifier that selects the target address for SNMP.	Specify the tag identifier.
none	No tag identifier	-
Storage Type	Specifies whether the settings re- main following a restart.	 volatile: The default settings are used after a restart. nonvolatile:
		The saved settings are used af- ter a restart.
port	Keyword for the port number at which the SNMP manager receives traps and inform messages	-
integer	Port number	1 65535

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

7.6 SNMP

If optional parameters are not specified when configuring, the following defaults apply:

Parameter	Default value
taglist	snmp
Storage Type	volatile
port	162

Result

The SNMP target address is configured.

Further notes

You delete the SNMP target address with the no snmp targetaddr command. You display the SNMP target address with the show snmp targetaddr command. You configure the SNMP target parameters with the snmp targetparams command. You display the SNMP target parameters with the show snmp targetparam command.

7.6.2.15 no snmp targetaddr

Description

With this command, you delete the SNMP target address.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no snmp targetaddr <TargetAddressName>

The parameter has the following meaning:

Parameter	Description	Range of values / note
TargetAddressName	SNMP target address	max. 32 characters

Result

The SNMP target address is deleted.

Further notes

You change the SNMP target address with the snmp targetaddr command. You display the SNMP target address with the show snmp targetaddr command.

7.6.2.16 snmp targetparams

Description

With this command, you configure the SNMP target parameters.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

```
snmp targetparams <ParamName>
    user <UserName>
    security-model {v1|v2c|v3 {auth|noauth|priv}}
    message-processing {v1|v2c|v3}[{volatile|nonvolatile}]
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
ParamName	Name of the SNMP parameter	max. 32 characters
user	Keyword for the user name	-
UserName	Value for the user name	max. 32 characters

Parameter	Description	Range of values / note
security-model	Specifies which SNMP version is used. With SNMPv3 a security level (authen- tication, encryption) can also be con- figured.	 SNMP version v1 v2c v3 Security level for v3 auth Authentication enabled / no encryption enabled noauth No authentication enabled priv Authentication enabled / encryption enabled
message-processing	Specifies which SNMP version is used for processing the messages and whether the settings remain following a restart.	 SNMP version v1 v2c v3 Settings after the restart : The settings are lost after a restart : The settings are retained after a restart

Network protocols

7.6 SNMP

Keywords need to be specified.

If optional parameters are not specified when configuring, the default values apply.

Result

The SNMP target parameters are configured.

Further notes

You delete the SNMP target parameters with the no snmp targetparams command. You display settings of this function with the show snmp targetparam command. You configure the user profile with the snmp user command. You display the list of users with the show snmp user command.

7.6.2.17 no snmp targetparams

Description

With this command, you delete the SNMP target parameters.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call up the command with the following parameters:

no snmp targetparams <ParamName>

The parameter has the following meaning:

Parameter	Description	Range of values / note
ParamName	Name of the SNMP parameter	max. 32 characters

Result

The SNMP target parameters are deleted.

Further notes

You change the SNMP target parameters with the snmp targetparams command. You display settings of this function with the show targetparam command.

7.6.2.18 snmp v1-v2 readonly

Description

With this command, you block write access for SNMPv1 and SNMPv2 PDUs.

Requirement

You are in the Global configuration mode. The command prompt is as follows: cli(config)#

Network protoc	rols
7.6 SNMP	
Syntax	
	Call the command without parameters:
	snmp v1-v2 readonly
Result	
	Write access for SNMPv1 and SNMPv2 PDUs is blocked.
Further notes	
	You release write access for SNMPv1 and SNMPv2 PDUs with the no snmp v1-v2 readonly command.
7.6.2.19	no snmp v1-v2 readonly
Description	
	With this command, you enable write access for SNMPv1 and SNMPv2 PDUs.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	no snmp v1-v2 readonly
Result	
	Write access for SNMPv1 and SNMPv2 PDUs is enabled.
Further notes	
	You block write access for SNMPv1 and SNMPv2 PDUs with the snmp v1-v2 readonly command.

7.6.2.20 snmp user

Description

With this command, you configure the details of an SNMP user.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

snmp user <UserName> [auth {md5|sha} <passwd> [priv DES <passwd>]]
[{volatile|nonvolatile}]

The parameters have the following meaning:

Parameter	Description	Range of values / note	
UserName	Name of the user	max. 32 characters	
auth	Specifies that authentication takes place and which algorithm is used	 md5 (Message Digest 5) sha (Secure Hash Algorithm) Default: No authentication 	
passwd	Password for authentication	max. 32 characters	
priv DES	Specifies that there is encryption.	- Default: No encryption	
passwd	Value for the password of the encryp- tion	max. 32 characters	
Storage type	Specifies whether the settings remain following a restart.	• volatile: The default settings are used after a restart.	
		 nonvolatile: The saved settings are used after a restart. 	

If optional parameters are not specified when configuring an SNMP user, the default values apply.

Result

The details of the SNMP user are configured.

Further notes			
	You delete the se	ttings with the no snmp user command.	
	You display the co	onfigured users with the show snmp user CO	mmand.
7.6.2.21	no snmp user		
Description			
Description	With this common	ad you delete the details of an SNMD upor	
Requirement			
	You are in the Glo	obal configuration mode.	
	The command pro	ompt is as follows:	
	cli(config)#		
Syntax			
	Call up the comm	and with the following parameters:	
	no snmp user <us< th=""><th>erName></th><th></th></us<>	erName>	
	The parameter ha	as the following meaning:	
	Parameter	Description	Range of values / note
	UserName	Name of the user	max. 32 characters
Result			
	The details of the	SNMP user are deleted.	
Further notes			
	You change the s	ettings with the snmp user command.	
	You display the co	onfigured users with the show snmp userCor	nmand.
76222	snmn view		
1.0.2.22			
Description			
	With this comman	nd, you configure an SNMP view.	

Requirement

- An SNMP group has been created
- The access to the group is configured with snmp access
- You are in the Global Configuration mode. The command prompt is: cli(config)#

Syntax

Call up the command with the following parameters:

```
snmp view <ViewName> <OIDTree> [mask<OIDMask>] {included|excluded}
  [{volatile|nonvolatile}]
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
ViewName	Name of the SNMP view	max. 32 characters
OIDTree	Object ID	Path information of the MIB tree
mask	Keyword for the OID mask	-
OIDMask	Mask that filters access to the ele- ments of the MIB tree	A series of "0" and "1" separated by dots in keeping with the path information of the MIB tree
View type	Specifies whether the filtered elements are used or excluded.	included (Default)excluded
Storage type	Specifies whether the settings remain following a restart.	 volatile: The settings are lost after a restart
		 nonvolatile: The settings are retained after a restart (default).

If optional parameters are not specified when configuring, the default values apply.

Result

The SNMP view is configured.

Further notes

You delete the view with the no snmp view command. You display the configured SNMP tree views with the show snmp viewtree command. You display the SNMP group access rights with the show snmp group access command. You configure the SNMP group access rights with the snmp access command.

7.6.2.23 no snmp view

Description

With this command, you delete an SNMP view.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no snmp view <ViewName> <OIDTree>

The parameters have the following meaning:

Parameter	Description	Range of values / note
ViewName	Name of the view	max. 32 characters
OIDTree	Object ID	Path information of the MIB tree

Result

The SNMP view is deleted.

Further notes

You configure a view with the snmp view command.

You display the configured SNMP tree views with the show snmp viewtree command.

7.7 HTTP server

This section describes commands of the Hypertext Transfer Protocol (HTTP).

7.7.1	The "show" commands	
	This section describes commands with which you display various settings.	
7.7.1.1	show ip http server status	
Description		
	This command shows the status of the HTTP server.	
Requirement		
	You are in the User EXEC mode or in the Privileged EXEC mode.	
	The command prompt is as follows:	
	cli> OF cli#	
Syntax		
	Call the command without parameters:	
	show ip http server status	
Result		
	The status of the HTTP server is displayed.	
7.7.2	Commands in the Global Configuration mode	
	This section describes commands that you can call up in the Global configuration mode.	
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.	
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.	
	You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.	

Network protocols		
7.7 HTTP server		
7.7.2.1	ip http	
Description		
	With this command, you enable HTTP on the device.	
Requiremen	nt	
	You are in the Global configuration mode.	
	The command prompt is as follows:	
	cli(config)#	
_		
Syntax		
	Call the command without parameters:	
	ip http	
	As default the function is "enabled".	
D "		
Result		
	HITP is enabled on the device.	
Eurthor pote		
	Now can diaplay the actting of this function and other information with the state is a second	
	server status command.	
	You deactivate HTTP on the device with the no ip http command.	
7.7.2.2	no ip http	
Description		
	With this command, you disable HTTP on the device.	
Requiremen	ht	
	You are in the Global configuration mode.	
	The command prompt is as follows:	
	cli(config)#	
Syntax		
	Call the command without parameters:	

no ip http

Result

HTTP is disabled on the device.

Further notes

You can display the setting of this function and other information with the $\tt show ~ip~http$ server status command.

You enable HTTP with the $\tt ip\ http$ command.

7.8 HTTPS server

This section describes commands of the Hypertext Transfer Protocol Secure (HTTPS).

7.8.1	The "show" commands	
	This section describes commands with which you display various settings.	
7.8.1.1	show ip http secure server status	
Description		
	This command shows the status of the HTTPS server.	
Requirement		
	You are in the User EXEC mode or in the Privileged EXEC mode.	
	The command prompt is as follows:	
	cli> OF cli#	
Syntax		
	Call the command without parameters:	
	show ip http secure server status	
Result		
	The status, cipher suite and version of the HTTPS server are displayed.	
7.8.1.2	show ssl server-cert	
Description		
	This command shows the SSL server certificate.	
Requirement		
	You are in the User EXEC mode or in the Privileged EXEC mode.	
	The command prompt is as follows:	
	cli> OF cli#	

Syntax

Call the command without parameters:

show ssl server-cert

Result

The SSL server certificate is displayed.

7.9 Proxy server

7.9 Proxy server

This section describes commands for the proxy server.

7.9.1 The "snow" commands	7.9.1	The "show"	commands
---------------------------	-------	------------	----------

This section describes commands with which you display various settings.

7.9.1.1 show proxyserver table

Description

This command shows the configuration of the proxy server.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show proxyserver table

Result

The configuration is displayed.

7.9.2 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

7.9.2.1 proxyserver

Description

With this command, you change to the PROXYSERVER configuration mode.

Requirement

You are now in the Global configuration mode. The command prompt is as follows: cli(config)#

Syntax

Call the command without parameters:

proxyserver

Result

You are now in the PROXYSERVER configuration mode. The command prompt is as follows: cli(config-proxysrv)#

Further notes

You exit the PROXYSERVER configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

7.9.3 Commands in the PROXYSERVER configuration mode

This section describes commands that you can call up in the PROXYSERVER configuration mode.

7.9 Proxy server

In the Global configuration mode, enter the proxyserver command to change to this mode.

- If you exit the PROXYSERVER configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the PROXYSERVER configuration mode with the end command, you return to the Privileged EXEC mode.

7.9.3.1 srv name

Description

With this command, you create a proxy server entry. You assign a name and configure the parameters.

Requirement

You are in the PROXYSERVER configuration mode.

The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

srv name <name(128)> type {http|socks} port <num(0-65535)> auth {basic|ntlm|none}
[addr <ip addr|dns(255)>] [user <string(255)>] [pw <string(255)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
name	Proxy server name	Specify a unique name for the proxy server.
		Maximum of 128 characters
type	Keyword the type of the proxy server	-
http	Proxy server only for access using HTTP	-
socks	Universal proxy server	-
port	Keyword for port	-
num	Port number	0 65535
		Specify the port on which the proxy ser- vice runs.
auth	Keyword for the authentication method	-
basic	Standard authentication. User name and password are sent unencrypted	-
ntlm	Authentication according to the NTML standard (Windows user logon)	-
none	No authentication	-
addr	Keyword for IPv4 address	-

7.9 Proxy server

Parameter	Description	Range of values / note
ip_addr	IPv4 address	Enter the IPv4 address of the proxy serv- er.
dns	DNS host name	Enter the DNS host name of the proxy server.
user	Keyword for a user name	-
string	Name	Specify the user name for access to the proxy server.
		Maximum of 255 characters
pw	Keyword for a password	-
string	Password	Specify the password for access to the proxy server.
		Maximum of 255 characters

Result

The proxy server is configured.

Further notes

You delete this proxy server with the no srv command.
You change the parameters with the srv name commands.
You display this setting and other information with the show proxyserver table command.

7.9.3.2 no srv

Description

With this command, you delete a specific proxy server or all proxy servers.

Requirement

- The corresponding proxy server name has been created and is not being used anywhere.
- You are in the PROXYSERVER configuration mode. The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

```
no srv {name <string(128)> | all}
```

Network protocols

7.9 Proxy server

The parameters have the following meaning:

Parameter	Description	Range of values / note
name	Keyword for proxy server name	-
string	Proxy server name	Specify a valid proxy server name.
		Maximum of 128 characters
all	Deletes all proxy servers	-

Result

The specified proxy server is deleted.

Further notes

You create the proxy server with the srv name command. You display the available proxy server names with the srv show-names command.

7.9.3.3 srv name addr

Description

With this command, you change the address of the proxy server.

Requirement

- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode. The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

```
srv name <string(128)> addr <ip_addr|dns(50)>
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
ip_addr	IPv4 address	Enter the IPv4 address of the proxy server.
dns	DNS host name	Enter the DNS host name of the proxy server.
		Maximum of 50 characters

Result

The IPv4 address of the proxy server has been changed.

Further notes

You display the available proxy server names with the srv show-names command. You create the proxy server with the srv name command.

7.9.3.4 srv name auth

Description

With this command, you change the authentication method of the proxy server.

Requirement

- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode. The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

srv name <string(128)> auth <none|basic|ntlm>

Network protocols

7.9 Proxy server

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
none	No authentication	-
basic	Standard authentication	-
	The user name and password are sent unencrypted.	
ntlm	Authentication according to the NTML standard (Windows user logon)	-

Result

The authentication method has been changed.

Further notes

You display the available proxy server names with the srv show-names command. You create the proxy server with the srv name command.

7.9.3.5 srv name port

Description

With this command, you change the port of the proxy server.

Requirement

- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode.
 The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

srv name <string(128)> port <number(0-65535)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
Port	Port number	Specify the port number on which the proxy service runs.
		0 - 65535

Result

The port has been changed.

Further notes

You display the available proxy server names with the srv show-names command. You create the proxy server with the srv name command.

7.9.3.6 srv name pw

Description

With this command, you change the password for access to the proxy server.

Requirement

- When selecting the authentication method <code>basic</code> is used.
- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode. The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

srv set name <string(255)> pw <name(255)>

Network protocols

7.9 Proxy server

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
рw	Password	Specify the changed pass- word for access to the proxy server.
		Maximum of 255 characters

Result

The password is changed.

Further notes

You display the available proxy server names with the srv show-names command. You create the proxy server with the srv name command.

7.9.3.7 srv name type

Description

With this command, you change the type of the proxy server.

Requirement

- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode.
 The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

srv name <string(128)> type <http|socks>

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
http	Universal proxy server	-
socks	Keyword for port	-

Result

The type of the proxy server has been changed.

Further notes

You display the available proxy server names with the srv show-names command. You create the proxy server with the srv name command.

7.9.3.8 srv name user

Description

With this command, you change the user name for access to the proxy server.

Requirement

- When selecting the authentication method <code>basic</code> is used.
- The proxy server name has been created.
- You are in the PROXYSERVER configuration mode. The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call up the command with the following parameters:

```
srv name <string(128)> user <name(255)>
```

Network protocols

7.9 Proxy server

Result

7.9.3.9

Further notes

Parameter	Description	Range of values / note
string	Proxy server name	Specify the proxy server name.
		Maximum of 128 characters
name	User name	Specify the user name for access to the proxy server.
		Maximum of 255 characters
You display the ava	ilable proxy server names with the sr	rv show-names command.
You create the prox	y server with the srv name command.	
- h		
show-names		

With this command, you display the available proxy server names.

The parameters have the following meaning:

Requirement

Description

You are in the PROXYSERVER configuration mode.

The command prompt is as follows:

cli(config-proxysrv)#

Syntax

Call the command without parameter assignment:

srv show-names

Result

The proxy server names are listed.

Further notes

You create a proxy server with the ${\tt srv}$ ${\tt name}$ command.

7.10 SMTP client

This section describes commands of the Simple Mail Transfer Protocol (SMTP).

7.10.1	The "show" commands
	This section describes commands with which you display various settings.
7.10.1.1	show events smtp-server
Description	
	This command shows the configured SMTP servers.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Of cli#
Syntax	
	Call the command without parameters:
	show events smtp-server
Result	
	The configured SMTP servers are displayed.
7.10.1.2	show events sender email
Description	
	This command shows the configured e-mail sender address.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> OF cli#

Net	wo	rk	pro	otoc	ols

7.10 SMTP client

Syntax	
	Call the command without parameters:
	show events sender email
Docult	
Result	The configured a mail conder address is displayed
	The configured e-mail sender address is displayed.
7.10.1.3	show events smtp-port
Description	
Decemption	This command shows the configured SNMP port.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Svntax	
- ,	Call the command without parameters:
	show events smtp-port
- "	
Result	The configured CMTD port is displayed
	The conligured SMTP port is displayed.
7.10.2	Commands in the Events configuration mode
	This section describes commands that you can call up in the EVENTS configuration mode.
	In the Global configuration mode, enter the events command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	 If you exit the EVENTS configuration mode with the exit command, you return to the Global configuration mode.
	 If you exit the EVENTS configuration mode with the end command, you return to the Privileged EXEC mode.

7.10.2.1 sender mail-address

Description

With this command, you configure the e-mail name of the sender.

Requirement

You are in the EVENTS configuration mode. The command prompt is as follows: cli(config-events)#

Syntax

Call up the command with the following parameters:

sender mail-address <mail-address>

The parameter has the following meaning:

Parameter	Description	Range of values / note
mail-address	Email name of the sender	max. 100 characters

Result

The e-mail name of the sender is configured.

Further notes

You reset the e-mail name of the sender with the no sender mail-address. You display the setting with the show events sender email command.

7.10.2.2 no sender mail-address

Description

With this command, you reset the e-mail name of the sender.

Requirement

You are in the EVENTS configuration mode.

The command prompt is as follows:

cli(config-events)#

Network	protocols

7.10 SMTP client

.

- /			
Syntax			
	cli(config-events)#		
	The command promp	t is as follows:	
	You are in the EVEN	TS configuration mode.	
Requirement			
Description	With this command, y	you configure an entry for an SMTP s	server.
7.10.2.3 8	smp-server		
71023	emtn-server		
	You display the settin	n g with the show events sender email	command.
	You configure the e-n	nail name of the sender with the send	der mail-address.
Further notes			
Result	The e-mail name of the	ne sender is reset.	
	no sender mail-addre	ess	
-	Call the command wit	thout parameters:	
Syntax			

Keyword for a domain name

Name of the recipient

Name)

Domain name (Fully Qualified Domain

For information on addresses and interfaces, refer to the section "Addresses and interface

Maximum of 100 characters

max. 100 characters

_

fqdn-name

FQDN(100)

receiver mailaddress

names (Page 34)".
Result	An entry for the SMTP server is configured.
Further notes	You delete an SMTP server entry with the no smtp-server command.
7.10.2.4	no smtp-server
Description	With this command, you delete an SMTP server entry.
Requirement	You are in the EVENTS configuration mode. The command prompt is as follows: cli(config-events)#
Syntax	

Call up the command with the following parameters:

no smtp-server {ipv4 <ucast_addr> | fqdn-name <FQDN(100)>}

The parameters have the following meaning:

Parameter	Description	Range of values/note
ipv4	Keyword for an IP address	-
ucast_addr	Value for an IPv4 unicast address	Enter a valid IPv4 unicast ad- dress.
fqdn-name	Keyword for a domain name	-
FQDN(100)	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters

For information on addresses and interfaces, refer to the section "Addresses and interface names (Page 34)".

Result

The SMTP server entry is deleted.

Further notes

You configure an SMTP server entry with the smtp-server command.

7.10 SMTP client

7.10.2.5 smtp-port

Description

With this command, you configure an SMTP port.

Requirement

You are in the EVENTS configuration mode. The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

smtp-port <smtp-port(1-65535)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
smtp-port	Value for the SMTP port	1 65535
		Default: 25

Result

An SMTP port is configured.

Further notes

You can reset the setting to the default with the no smtp-port command. You display the setting with the show smtp-port command.

7.10.2.6 no smtp-port

Description

With this command, you reset the SMTP port to the default. The default value is 25.

Requirement

You are in the EVENTS configuration mode. The command prompt is as follows:

cli(config-events)#

Syntax	
	Call the command without parameters:
	no smtp-port
Result	
	The SMTP port is reset to the default value.
Further notes	
	You configure the setting with the smtp-port command.
	You display the setting with the show smtp-port command.
7.10.2.7 se	end test mail
Description	
	With this command, you send an e-mail according to the currently configured SMTP settings.
Requirement	
	You are in the EVENTS configuration mode.
	The command prompt is as follows:
	cli(config-events)#
Syntax	
	Call the command without parameters:
	send test mail
Result	
	An e-mail according to the currently configured SMTP settings was sent.
Further notes	
	You can display the current SMTP settings with the show events emailserver command.

7.11 SSH server

7.11 SSH server

This section describes commands of the Secure Shell (SSH) Server.

7.11.1 The "show" commands

This section describes commands with which you display various settings.

7.11.1.1 show ip ssh

Description

This command shows the settings of the SSH server.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show ip ssh

Result

The settings for the SSH server are displayed.

7.11.2 Commands in the Global Configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

7.11.2.1	ssh-server
Description	With this command, you enable the SSH protocol on the device.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:
	ssh-server
	As default the function is "enabled".
Result	
	The SSH protocol is enabled on the device.
Further notes	You disable the SSH protocol with the no ssh-server command.
7.11.2.2	no ssh-server
Description	With this command, you disable the SSH protocol on the device.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
	Call the command without parameters:

no ssh-server

Network protocols

7.11 SSH server

Result

The SSH protocol is disabled on the device.

Further notes

You enable the SSH protocol with the *ssh-server* command.

Load control

This part contains the sections describing the functions for controlling and balancing network load.

8.1 Flow control

The flow control function monitors the incoming data traffic of a port. If there is overload ("Congestion", "Overflow") it sends a signal to the connection partner. If the flow control function receives a signal at the sending end, it stops the data transmission to avoid loss of data.

This section describes commands of the flow control function.

8.1.1 The "show" commands

This section describes commands with which you display various settings.

8.1.1.1 show flow-control

Description

This command shows the settings of the flow control function.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call up the command with the following parameters:

show flow-control [interface <interface-type><interface-id>]

8.1 Flow control

The parameters have the following meaning:

Parameter	Description	Range of values / note
interface	Keyword for a an interface description	-
interface-type	Type or speed of the interface	Enter a valid interface.
interface-id	Module no. and port no. of the interface	

For information on names of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameters from the parameter list, the information for the router will be displayed.

Result

The settings of the flow control function are displayed.

8.1.2 Commands in the interface configuration mode

This section describes commands that you can call up in the interface configuration mode. Depending on the Interface selected, various command sets are available.

In the Global configuration mode, enter the interface command to change to this mode.

Commands relating to other topics that can be called in the interface configuration mode can be found in the relevant sections.

- If you exit the Interface configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the Interface configuration mode with the end command, you return to the Privileged EXEC mode.

8.1.2.1 flowcontrol

Description

The flow control function monitors a connection at the receiving end to make sure that not more data is received than can be processed. If flow control detects a threat of data overflow, the partner at the sending end is sent a signal to stop transmitting.

With this command, you configure the flow control function for an interface.

Requirement

You are in the Interface configuration mode.

The command prompt is as follows:

cli(config-if-\$\$\$)#

Syntax

Call up the command with the following parameters:

flowcontrol {on|off}

The parameters have the following meaning:

Parameter	Description
on	Enables the function
off	Disables the function

Result

The settings for the flow control function are configured.

Further notes

You can display the status of this function with the ${\tt show}$ flow-control command.

8.2 Dynamic MAC aging

The section describes commands with which the aging of dynamically learned entries is configured in a MAC address list.

8.2.1 The "show" commands

This section describes commands with which you display various settings.

8.2.1.1 show mac-address-table aging-time

Description

To ensure that the address entries are up-to-date, MAC addresses are only kept in the address table for a specified time.

This command shows the time after which the MAC addresses are removed from the address table.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show mac-address-table aging-time

Result

The time is displayed.

8.2.1.2	show mac-address-table aging-status
Description	
	This command shows whether or not MAC aging is enabled.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Syntax	
	Call the command without parameters:
	show mac-address-table aging-status
Result	
	The status of the MAC aging is displayed.
8.2.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

Load control

8.2 Dynamic MAC aging

8.2.2.1 mac-address-table aging

Description

With this command, you enable the "Aging" function. The "Aging" function ensures that an entry in the MAC address list that was learned dynamically is deleted again after a certain time.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

mac-address-table aging

Result

The "Aging" function is enabled.

Further notes

You configure the time with the mac-address-table aging-time command. You disable the "Aging" function with the no mac-address-table aging command.

8.2.2.2 no mac-address-table aging

Description

With this command, you disable the "Aging" function.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

no mac-address-table aging

Result

The "Aging" function is disabled.

Further notes

You enable the "Aging" function with the mac-address-table aging command.

8.2 Dynamic MAC aging

8.2.2.3 mac-address-table aging-time

Description

With this command, you configure the aging of a dynamically learned entry in the MAC address list.

Note

Addresses with light data traffic

For addresses with low data traffic, it is recommended to enter a higher value for the aging.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

mac-address-table aging-time <seconds(10-1000000)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
seconds	Life of the entry in seconds	10 1000000

At system start or when using the restart command with the option memory or factory, the following defaults apply:

• The default value is 300 seconds.

Result

The value of the aging of a dynamically learned entry is configured.

Further notes

You can reset the setting to the default with the no mac-address-table aging-time command. You display the setting with the show mac-address-table aging-time command.

Layer 3 functions

9.1	NAT This section describes commands relevant for NAT / NAPT.
9.1.1	The "show" commands This section describes commands with which you display various settings.
9.1.1.1	show firewallnat masquerading
Description	This command shows the interfaces on which IP masquerading is enabled.
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:
Syntax	Call the command without parameter assignment:
Result	The interfaces are displayed.
9.1.1.2	show firewallnat napt
Description	This command shows the configured NAPT rules.
Requirement	You are in the Privileged EXEC mode.

Layer 3 functions	
9.1 NAT	
	The command prompt is as follows:
	cli#
_	
Syntax	
	Call the command without parameter assignment:
	show firewallnat napt
Result	
	The configured NAPT rules are displayed.
0.4.4.0	
9.1.1.3 s	now firewalinat netmap-map
Description	
Description	This command shows the configured NETMAD rules
	This command shows the conligued NETWAF fulles.
Requirement	
Requirement	You are in the Privileged EXEC mode
	The command prompt is as follows:
Syntax	
Cymax	Call the command without parameter assignment:
	show firewallnat netman-nat
	biow filewalling heemap had
Result	
	The configured NETMAP rules are displayed.
	.

9.1.1.4	show firewallnat src-nat
Description	This command shows the configured source NAT rules.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
•	Call the command without parameter assignment:
	show firewallnat src-nat
Result	
	The configured source NAT rules are displayed.
9.1.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or $exit$ command and are then in the Privileged EXEC mode again.
9.1.2.1	firewallnat
Description	With this command, you change to the FIREWALL NAT configuration mode.
Requirement	
·	You are now in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#

Syntax

Call the command without parameters:

firewallnat

Result

You are now in the FIREWALL NAT configuration mode. The command prompt is as follows:

cli(config-fwnat)#

Further notes

You exit the FIREWALL NAT configuration mode with the ${\tt end} \ or \ {\tt exit}$ command.

9.1.3 Commands in the FIREWALL NAT configuration mode

9.1.3.1 Introductory sentence for the FirewallNAT configuration mode

This section describes commands that you can call up in the FIREWALL NAT configuration mode.

In the Global configuration mode, enter the firewallnat command to change to this mode.

- If you exit the FIREWALL NAT configuration mode with the $\tt exit$ command, you return to the Global configuration mode.
- If you exit the FIREWALL NAT configuration mode with the end command, you return to the Privileged EXEC mode.

Available interfaces

As the source and destination interfaces, the following interfaces are available:

Interface		masquerading- nat napt	netmap src-nat	
VLAN	VLANs with configured subnet	х	х	vlan num
PPP	WAN interface	х	х	ppp 2
IPsecVPN	All IPsecVPN connections	-	х	ipsecALL
	Specific IPsecVPN connection	-	х	ipsec num
SINEMA RC	Connection to SINEMA RC Server	-	х	sinemarcall

x: available

- : not available

9.1.3.2	ipsec connection show-idx
Description	With this command, you show the numbers of the configured IPsec VPN connections.
Requirement	You are in the FIREWALL NAT configuration mode.
	The command prompt is as follows: cli(config-fwnat)#
Syntax	Call the command without parameter assignment:
Result	The entries are listed.
9.1.3.3	masquerading
Description	With this command, you enable the rules for IP masquerading on the interface.
Requirement	 VLAN interface with subnet assignment You are in the FIREWALL NAT configuration mode. The command prompt is as follows: cli(config-fwnat)#
Syntax	Call up the command with the following parameters:
	<pre>masquerading {vlan ppp usb} <num(0-4094)></num(0-4094)></pre>

-

9.1 NAT

	Parameter	Description	Range of values / note	
	vlan	VLAN interface	-	
	ppp	WAN interface	-	
	usb		-	
	num	Number of the addressed VLAN	Specify a valid interface index.	
			0 4094	
	For information NAT configurati	on identifiers of interfaces, refer to the section "Commands in the FIREWALL ion mode (Page 306)".		
Result				
	The rules for IP	masquerading are enabled on the specified	d interface.	
Further notes				
	You disable IP	You disable IP masquerading with the no masquerading command		
	You configure the subject assignment with the new subject command			
	You display the	Setting with the show masquerading COMM	and.	
9.1.3.4 r	no masquerading)		
Description				
Description	With this command, you disable the rules for IP masquerading on the interface.			
			0	
Requirement				
	You are in the F	You are in the FIREWALL NAT configuration mode.		
	The command prompt is as follows:			
	cli(config-fwn	at)#		
Syntax				
	Call up the com	mand with the following parameters:		
	no masquerading {vlan ppp usb} <num(0-4094)></num(0-4094)>			

The parameters have the following meaning:

The parameters have the following meaning:

	Parameter	Description	Range of values / note
	vlan	VLAN interface	-
	ppp	WAN interface	-
	usb		-
	num	Number of the addressed VLAN	Specify a valid interface index.
Result	For information on ic NAT configuration m	dentifiers of interfaces, refer to the section "C node (Page 306)".	commands in the FIREWALL
Further notes	The rules for IP mas	querading are disabled on the relevant inter	face.
9.1.3.5 m Description	asquerading show-	idx	
	With this command,	you show the numbers of the configured rule	es for masquerading.
Requirement			
	You are in the FIREWALL NAT configuration mode.		
	The command prompt is as follows:		
	cli(config-fwnat)#		
Syntax			
	Call the command w	vithout parameter assignment:	
	masquerading show-i	.dx	
Result	The numbers are lis	ted.	
Further notes	You delete a rule for	masquerading with the no masquerading cor	nmand.

You create a rule for masquerading with the masquerading command.

9.1.3.6 napt type ipv4

Description

With this command, you create a NAPT rule.

Requirement

- VLAN interface with subnet assignment
- You are in the FIREWALL NAT configuration mode. The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call up the command with the following parameters:

napt srcint <vlan> <num(0-4094)> proto {udp|tcp} dstport <num(1-65535)|range> transport <num(1-65535)|range> type ipv4 transip <ip> [dstip <ip>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	VLAN interface	
num	Number of the addressed VLAN	0 4094
proto	Keyword for a protocol	-
udp	Address assignment for UDP valid.	-
tcp	Address assignment for TCP valid.	-
dstport	Keyword for destination port	
num	Destination port	1 65535
range	Port range	Specify the start port and end port, e.g. 10 - 20.
transport	Keyword for new destination port	
num	New destination port	1 65535
range	New port range	Specify the start port and end port, e.g. 10 - 20.
transip	Keyword for the IPv4 address of the node to which this frame will be forwarded	-
ip	IPv4 address	Enter a valid IPv4 address.

Parameter	Description	Range of values / note
destip	Keyword for the destination IP address	-
ip	IPv4 address	Enter a valid IPv4 address.

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode (Page 306)".

Note

If the port is already occupied by a local service, for example Telnet, a warning is displayed. In this case, avoid using the following ports: TCP port 23 (Telnet), port 22 (SSH), the ports 80/443 (http/https: reachability of the client with the WBM), UDP port 161 (SNMP), port 500 (ISAKMP), port 4500 (IPsec Nat-T).

Result

The NAPT rule is created. During creation, an entry with a unique number (index) is created.

Further notes

You delete a NAPT rule with the no napt command. You delete all NAPT rules with the no napt all command. You display the numbers of the NAPT rules with the napt show-idx command. You display the NAPT rule with the show firewallnat napt command.

9.1.3.7 no napt

Description

With this command, you delete a specific NAPT rule.

Requirement

- VLAN interface with subnet assignment
- You are in the FIREWALL NAT configuration mode. The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call up the command with the following parameters:

no napt srcint <vlan> <num(0-4094)> idx <num(1-200)>

	Parameter	Description	Range of values / note
	srcint	Keyword for the source interface	-
	VLAN	VLAN interface	-
	num	Number of the addressed VLAN	0 4094
	idx	Number corresponding to a specif- ic NAPT rule. Specify a valid num- ber.	0200
Result			
	The specified NAPT	rule is deleted.	
Further notes			
	You display the num	bers of the NAPT rules with the $\tt n$	apt show-idx command.
	You delete all NAPT	rules with the no napt all comm	and.
	You create a NAPT	rule with the napt type ipv4 com	mand.
9.1.3.8 no	napt all		
Description			
·	With this command,	you delete all NAPT rules.	
Requirement			
	You are in the FIREWALL NAT configuration mode.		
	The command prompt is as follows:		
	cli(config-fwnat)#		
Syntax			
	Call the command w	ithout parameter assignment:	
	no napt all		
Decult			
Result	All NAPT rules are d	eleted.	
Further notes			
	You create a NAPT r	rule with the napt type ipv4 com	mand.

The parameters have the following meaning:

9.1.3.9	napt show-idx
Description	
	With this command, you show the numbers of the configured NAPT rules.
Requirement	
	You are in the FIREWALL NAT configuration mode.
	The command prompt is as follows:
	<pre>cli(config-fwnat)#</pre>
Syntax	
	Call the command without parameter assignment:
	napt show-idx
Result	
	The numbers are listed.
Further notes	
	You delete a NAPT rule with the no napt command.
	You create a NAPT rule with the napt command.
9.1.3.10	netmap destination type ipv4
Description	
	With this command, you create the NETMAP rule for the address translation of the destination IP address.
Requirement	
	You are in the FIREWALL NAT configuration mode.
	The command prompt is as follows:
	<pre>cli(config-fwnat)#</pre>
Syntax	

Call up the command with the following parameters:

netmap source srcint <vlan|IPsec|IPsecall|SinemaRC> [<num(0-4094)>] dstint
<vlan|IPsec|IPsecall|SinemaRC> [<num(0-4094)>] type ipv4 srcip <subnet> transip
<subnet> dstip <*|subnet>

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	VLAN interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the interface or the VPN connection	0 4094
dstint	Keyword for the destination inter- face	-
vlan	VLAN interface	
IPsec IPsecall SinemaRC	Access to the VPN tunnel part- ners that can be reached via SINEMA RC via all VPN connec- tions (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the interface or the VPN connection	0 4094
srcip	Keyword for the source subnet (sender).	-
*	All IP addresses	-
subnet	The subnet can also be a single PC or another subset of the sub- net.	Specify the subnet in the CIDR notation.
dstip	Keyword for the destination sub- net (recipient)	-
subnet	The subnet can also be a single PC or another subset of the sub- net.	Specify the subnet in the CIDR notation.
transip	Keyword for the subnet with which the destination subnet is replaced.	-
subnet	The subnet can also be a single PC or another subset of the sub- net.	Specify the subnet in the CIDR notation.

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode (Page 306)".

Result

The NETMAP rule for the address translation of the destination IP address has been created. During creation, an entry with a unique number (index) is created.

Further notes

You delete a NETMAP rule with the no netmap command. You delete all NETMAP rules with the no netmap all command. You display the numbers of the NETMAP rules with the netmap show-idx command. You display the NETMAP rule with the show firewallnat netmap-nat command.

9.1.3.11 netmap source type ipv4

Description

With this command, you create the NETMAP rule for the address translation of the source IP address.

Requirement

You are in the FIREWALL NAT configuration mode.

The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call up the command with the following parameters:

netmap source srcint <vlan|ipsec|ipsecall|sinemarcall> [<num(0-4094)>] dstint
<vlan|ipsec|ipsecall|sinemarcall> [<num(0-4094)>] type ipv4 srcip <subnet> transip
<subnet> dstip <*|subnet>

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	VLAN interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the interface or the VPN connection	0 4094

Parameter	Description	Range of values / note
dstint	Keyword for the destination inter- face	-
vlan	VLAN interface	
IPsec IPsecall SinemaRC	Access to the VPN tunnel part- ners that can be reached via SINEMA RC via all VPN connec- tions (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the interface or the VPN connection	0 4094
srcip	Keyword for the source subnet (sender).	-
subnet	The subnet can also be a single PC or another subset of the subnet.	Specify the subnet in the CIDR notation.
transip	Keyword for the subnet with which the source subnet is replaced.	-
subnet	The subnet can also be a single PC or another subset of the sub- net.	Specify the subnet in the CIDR notation.
srcip	Keyword for the source subnet (sender).	-
*	All IP addresses	-
subnet	The subnet can also be a single PC or another subset of the subnet.	Specify the subnet in the CIDR notation.

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode (Page 306)".

Result

The NETMAP rule for the address translation of the source IP address has been created. During creation, an entry with a unique number (index) is created.

Further notes

You delete a NETMAP rule with the no netmap command. You delete all NETMAP rules with the no netmap all command. You display the numbers of the NETMAP rules with the netmap show-idx command. You display the NETMAP rule with the show firewallnat netmap command.

9.1.3.12 no netmap srcint

Description

With this command, you delete a specific NETMAP rule.

Requirement

You are in the FIREWALL NAT configuration mode.

The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call up the command with the following parameters:

no netmap srcint <vlan|IPsec|IPsecall|SinemaRC> [<num(0-4094)>] dstint vlan|IPsec|IPsecall|SinemaRC> [<integer(0-4094)>] idx <integer(1-200)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	Type or speed of the interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the addressed interface	0 4094
dstint	Keyword for the destination interface	-
vlan	Type or speed of the interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the addressed interface	0 4094
idx	Keyword for the number of the NETMAP rule	-
num	Number corresponding to a specific NETMAP rule.	Specify a valid number. 0 200

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode".

Result

The specified NETMAP rule is deleted.

Further notes	
	You display the numbers of the NETMAP rules with the netmap show-idx command.
	You delete all NETMAP rules with the no netpmap all command.
	You create a NETMAP rule with the commands netmap source type ipv4 and netmap destination type ipv4.
See also	Introductory sentence for the FirewallNAT configuration mode (Page 306)
9.1.3.13	no netmap all
Description	With this command, you delete all NETMAP rules.
Requirement	
-	You are in the FIREWALL NAT configuration mode.
	The command prompt is as follows:
	cli(config-fwnat)#
Syntax	
	Call the command without parameter assignment:
	no netmap all
Result	
	All NETMAP rules are deleted.
Further notes	You create a NETMAP rule with the commands netmap source type ipv4 and netmap destination type ipv4.
9.1.3.14	netmap show-idx
Description	With this command, you show the numbers of the configured NETMAP rules.

Requirement You are in the FIREWALL NAT configuration mode. The command prompt is as follows: cli(config-fwnat)# **Syntax** Call the command without parameter assignment: netmap show-idx Result The numbers are listed. **Further notes** You delete a NETMAP rule with the no netmap command. You delete all NETMAP rules with the no netmap all command. You create a NETMAP rule with the commands netmap source type ipv4 and netmap destination type ipv4. 9.1.3.15 src-nat type ipv4 Description With this command, you create a rule for source NAT. Requirement You are in the FIREWALL NAT configuration mode. The command prompt is as follows: cli(config-fwnat)# **Syntax** Call up the command with the following parameters: src-nat srcint <vlan|IPsec|IPsecall|SinemaRC> [<integer(0-4094)>] dstint <vlan|IPsec|IPsecall|SinemaRC> [<integer(0-4094)>] type ipv4 srcip <*|ip|subnet> dstip <* |ip|subnet> [transip <ip>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	VLAN interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer> .</integer>	-
integer	Number of the interface or the VPN connection	0 4094
dstint	Keyword for the destination inter- face	-
vlan	VLAN interface	
IPsec IPsecall SinemaRC	Access to the VPN tunnel part- ners that can be reached via SINEMA RC via all VPN connec- tions (all) or via a certain VPN connection <integer>.</integer>	-
integere	Number of the interface or the VPN connection	0 4094
srcip	Keyword for the source IP ad- dress	-
*	All IP addresses	-
ip	IPv4 address	Enter a valid IPv4 address.
subnet	The subnet can also be a single PC or another subset of the sub- net.	Specify the subnet in the CIDR notation.
dstip	Keyword for the destination IP address	-
*	All IP addresses	-
ip	IPv4 address	Enter a valid IPv4 address.
subnet	The subnet can also be a single PC or another subset of the subnet.	Specify the subnet in the CIDR notation.
transip	Keyword for the IPv4 address with which the IPv4 address of the source is replaced.	-
ip	If the interface has an IPv4 ad- dress, the parameter is optional. In this case, the IPv4 address of the interface is used.	Enter a valid IPv4 address.

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode".

Result

The source NAT rule is created. During creation, an entry with a unique number (index) is created.

Further notes

You delete a source NAT rule with the no src-nat command. You delete all source NAT rules with the no src-nat all command. You display the numbers of the source NAT rules with the src-nat show-idx command. You display the source NAT rule with the show firewallnat src-nat command.

9.1.3.16 no src-nat

Description

With this command, you delete a specific source NAT rule.

Requirement

You are in the FIREWALL NAT configuration mode.

The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call up the command with the following parameters:

no src-nat srcint <vlan|ipsec|ipsecall|sinemarcall> [<num(0-4094)>] dstint <vlan|ipsec|ipsecall|sinemarcall> [<num(0-4094)>] idx <num(1-200)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
srcint	Keyword for the source interface	-
vlan	VLAN interface	-
IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer> .</integer>	-
num	Number of the interface or the VPN connection	0 4094
dstint	Keyword for the destination inter- face	-
vlan	VLAN interface	

Parameter	Description	Range of values / note
IPsec IPsecall SinemaRC	Access to the VPN tunnel part- ners that can be reached via SINEMA RC via all VPN connec- tions (all) or via a certain VPN connection <integer>.</integer>	-
num	Number of the interface or the VPN connection	0 4094
idx	Keyword for the number of the source NAT rule	-
num	Number corresponding to a spe- cific source NAT rule.	Specify a valid number. 0 200

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL NAT configuration mode".

Result

The specified source NAT rule is deleted.

Further notes

You delete all source NAT rules with the no src-nat all command. You create a source NAT rule with the src-nat type ipv4. command. You display the numbers of the source NAT rules with the src-nat show-idx command.

9.1.3.17 no src-nat all

Description

With this command, you delete all source NAT rules.

Requirement

You are in the FIREWALL NAT configuration mode.

The command prompt is as follows:

cli(config-fwnat)#

Syntax

Call the command without parameter assignment:

src-nat del all

Result	The source NAT rules are created.
Further notes	You create a source NAT rule with the src-nat type ipv4. command.
9.1.3.18	src-nat show-idx
Description	With this command, you show the numbers of the configured source NAT rules.
Requirement	You are in the FIREWALL NAT configuration mode. The command prompt is as follows: cli(config-fwnat)#
Syntax	Call the command without parameter assignment:
Result	The numbers are listed.
Further notes	You delete a source NAT rule with the no src-nat. command You delete all source NAT rules with the no src-nat all command. You create a source NAT rule with the src-nat type ipv4 command.

Layer 3 functions 9.1 NAT
Security and authentication

This part contains the sections that describe the access rights and authentication methods.

10.1 User rights management

This section describes commands for access as administrator and the configuration of the authentication methods.

When you transfer the configuration of a device to TIA, the configured users, roles and groups are not transferred.

10.1.1 The "show" commands

This section describes commands with which you display various settings.

10.1.1.1 show password-policy

Description

This command shows which password policy is currently being used.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show password-policy

Result

The currently valid password policy is displayed.

Further notes

You configure the password policy with the password policy command.

Security	and	auther	ntication
----------	-----	--------	-----------

10.1 User rights management

10.1.1.2 show users

Description

This command displays the users that logged on via Telnet or SSH.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

Result

The logged in users are displayed.

10.1.1.3 show user-accounts

Description

This command shows the created users.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

show user-accounts

Result

The created users are shown.

10.1.2	whoami
Description	This command shows the user name of the logged in user.
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	Call the command without parameters:
Result	The user name of the logged in user is displayed.
10.1.3	Commands in the global configuration mode This section describes commands that you can call up in the Global configuration mode. In Privileged EXEC mode, enter the configure terminal command to change to this mode. Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections. You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.
10.1.3.1	change password
Description	With this command, you change the password of the logged in user.
Requirement	 You are logged into the device with a local user account You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#

10.1 User rights management

Syntax

Call up the command with the following parameters:

change password <passwd>

The parameter has the following meaning:

Parameter	Description	Range of values / note
passwd	Value for the password	Enter the password.
		The entry depends on the password policy.
		The show password-policy command shows which password policy is currently being used.

Result

The password is changed.

Note

Changing the password in Trial mode

Even if you change the password in Trial mode, this change is saved immediately.

Further notes

You create a user with the user-account command.

You delete a user with the no user-account command.

You show the created users with the ${\tt show}$ ${\tt user-accounts}$ command.

10.1.3.2 user-account

Description

With this command, you specify a new user. You can also change the password / role of an already created user.

Requirement

- The user is logged in with the "admin" role.
- You are in the Global configuration mode. The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

user-account <string> password <passwd> privilege {user | admin}

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	User name	Enter a user name. The name must be unique.
		The name must meet the following condi- tions:
		• It must be unique.
		 It must be between 1 and 32 charac- ters long.
		 The following characters must not be included: § ? " ; : < =
		 The following user names are not allowed: admin, user, service, debug
password	Keyword for a password	-
passwd	Value for the password	Enter the password.
		The password must meet the following conditions:
		Password length: at least 8 characters
		at least 1 uppercase letter
		at least 1 special character
		at least 1 number
privilege	Keyword for the role of the user	-
user	The user only has read rights.	-
admin	The user can create, edit or delete entries.	-

Note

User names: admin, user, service, debug

When shipped the following user names are predefined in the factory. user, admin, service, debug.

- admin: You can configure the device with this user name. If you log on the first time or log
 on after a "Restore Factory Defaults and Restart", you will be prompted to change the
 predefined password "admin".
- user, service, debug: These user names are reserved for service purposes.

10.1 User rights management

Result

The new user has been created or the password / role has been changed.

Note

User name cannot be changed

After creating a user, the user name can no longer be modified because the user name is used for encryption of the password. If a user name needs to be changed, the user must be deleted and a new user created.

Further notes

You change the password of the user "admin" preset in the factory with the username command.

You delete a user with the no user-account command.

You show the created users with the show user-accounts command.

10.1.3.3 no user-account

Description

With this command, you delete a user.

Note

Default users "admin" as well as logged in users cannot be deleted.

Requirement

You are in the Global Configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

no user-account <user-name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
user-name	User name	Enter a valid user name.

Result

The user has been deleted.

Further notes

You create a user with the user-account command. You show the created users with the show user-accounts command.

10.1.3.4 username

Description

With this command, you can only change the password of the factory set user "admin".

Requirement

- The user is logged in with the "admin" role.
- You are in the Global configuration mode. The command prompt is as follows:

cli(config)#

Syntax

Call up the command with the following parameters:

username {admin} password <passwd>

The parameters have the following meaning:

Parameter	Description	Range of values / note
admin	User name	Specify the user name.
password	Keyword for a password	-
passwd	Value for the password	Enter the password.
		The password must meet the following password policies:
		• Password length: at least 8 characters
		at least 1 uppercase letter
		at least 1 special character
		at least 1 number

10.1 User rights management

Result

The password of the user "admin" preset in the factory has been changed.

Note

Changing the password in Trial mode

Even if you change the password in Trial mode, this change is saved immediately.

Further notes

You change the password / role of an already created user with the user-account command.

You change the password of the currently logged in user with the ${\tt change\ password\ command}.$

You create a user with the user-account command.

You delete a user with the no user-account command.

You show the created users with the show user-accounts command.

10.2.1	Introduction to the Firewall section This section describes commands relevant for the firewall.
10.2.2	The "show" commands
	This section describes commands with which you display various settings.
10.2.2.1	show firewall icmp-services ipv4
Description	
	This command shows the configured ICMPv4 services.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show firewall icmp-services ipv4
Result	
	The configured ICMPv4 services are displayed.
10.2.2.2	show firewall information
Description	
	This command shows the configuration of the firewall.
Requirement	
-	You are in the Privileged EXEC mode.
	The command prompt is as follows:

Security and au	Ithentication
10.2 Firewall	
	cli#
Syntax	
	Call the command without parameter assignment:
	show firewall information
Result	
	The configuration is displayed.
10.2.2.3	show firewall ip-protocols
Description	
	This command displays the configured protocols.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show firewall ip-protocols
Result	
	The configured protocols are displayed.
10.2.2.4	show firewall ip-rules ipv4
Description	
	This command shows an overview of the IPv4 firewall rules.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#

Syntax	
	Call the command without parameter assignment:
	show firewall ip-rules ipv4
Result	
	The overview of the IPv4 firewall rules is displayed.
10 2 2 5	show firowall pro rulas inva
10.2.2.5	Show mewan pre-rules ipv4
Description	
	This command shows the predefined IPv4 rules available on the interface.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show firewall pre-rules ipv4
Result	
	The predefined IPv4 rules are displayed.
10 2 2 6	show firewall in convince
10.2.2.0	Show mewan ip-services
Description	
Decemption	This command shows the configured IP services.
Requirement	
-	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#

Security and authenticatior		
10.2 Einennell		

Syntax	
	Call the o

Call the command without parameter assignment: show firewall ip-services

Result

The configured	IP	services	are	displayed	
----------------	----	----------	-----	-----------	--

10.2.3 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the ${\tt end}$ or ${\tt exit}$ command and are then in the Privileged EXEC mode again.

10.2.3.1 firewall

Description

With this command, you change to the FIREWALL configuration mode.

Requirement

You are now in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

firewall

Result

You are now in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Further notes

You exit the FIREWALL configuration mode with the ${\tt end}$ command.

10.2.4 Commands in the FIREWALL configuration mode

10.2.4.1 Introductory sentence for the Firewall configuration mode

This section describes commands that you can call up in the FIREWALL configuration mode.

In the Global configuration mode, enter the firewall command to change to this mode.

- If you exit the FIREWALL configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the FIREWALL configuration mode with the end command, you return to the Privileged EXEC mode.

Available interfaces

As the source and destination interfaces, the following interfaces are available:

Interface		prede- fined firewall rules	own firewall rules	
VLAN	VLANs with configured subnet	х	x	<pre>vlan integer(0)</pre>
PPP (vlan)	WAN interface	x	x	ppp 2
IPsecVPN	All IPsec VPN connections	-	x	IPsecall
	Specific IPsec VPN connection	-	x	IPsec ifnum
Open VPN	All OpenVPN connections			OpenVPNall
	Specific OpenVPN connection	-	x	OpenVPN ifnum
SINEMA RC	Connection to Sinema RC Server	-	x	SinemaRC
Device	Connection to the device	-	x	Device

x: available

- : not available

Communication directions

from	to	Meaning	
vlan (1-x)	vlan (1-x)	Access from IP subnet vlan x to IP subnet vlan x.	
		Example:	
		vlan1 (INT) → vlan2 (EXT)	
		Access from the local IP subnet and the device to the external IP subnet.	
	ppp 2	Access from the IP subnet to the WAN interface of the device.	

from	to	Meaning
	Device	Access from the IP subnet to the device.
	SinemaRC	Access from the IP subnet and the device to the SINEMA RC server.
	IPsecall IPsec ifnum OpenVPNall OpenVPN ifnum	Access from the IP subnet to the VPN tunnel partners that can be reached via all VPN connections ^(all) or via a certain VPN connection (ifnum).
Device	vlan (1-x)	Access from the device to the IP subnet.
	ppp 2	Access from the device to the WAN interface of the device.
	SinemaRC	Access from the device to the SINEMA RC server.
	IPsecall IPsec ifnum OpenVPNall OpenVPN ifnum	Access from the device to the VPN tunnel partners that can be reached via all VPN connections ^(all) or via a certain VPN connection (ifnum).
SinemaRC	vlan (1-x)	Access from the SINEMA RC server to the IP subnet.
	ppp 2	Access from the SINEMA RC server to the WAN interface of the device.
	Device	Access from the SINEMA RC server to the device.
	IPsecall IPsec ifnum OpenVPNall OpenVPN ifnum	Access from the SINEMA RC server to the VPN tunnel partners that can be reached via all VPN connections ^(all) or via a certain VPN connection(ifnum).
IPsecall	vlan (1-x)	Access via VPN tunnel partners to the IP subnet.
OpenVPNall	ppp 2	Access via VPN tunnel partners to the WAN interface of the device.
OpenVPN ifnum	Device	Access via VPN tunnel partners to the device.
	SinemaRC	Access via VPN tunnel partners to the SINEMA RC server.
ppp 2	vlan (1-x)	Access from the WAN interface to the IP subnet.
	Device	Access from the WAN interface to the device.
	SinemaRC	Access from the WAN interface to the SINEMA RC server.
	IPsecall IPsec ifnum OpenVPNall OpenVPN ifnum	Access from the WAN interface to the VPN tunnel partners that can be reached via all VPN connections ^(all) or via a certain VPN connection (ifnum).

10.2.4.2 icmp name

Description

With this command, you create an ICMP service. You can also change the ICMP packet type and the code of an already created ICMP service.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

icmp name <string(32)> type <num(0-256)> code <num(0-256)> ver ipv4

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	ICMP service name	Enter a unique ICMP service name.
		Maximum of 32 characters
type	Keyword for the ICMP packet type	-
num	Number corresponding to a specific ICMP	Enter the required number.
	packet type.	Default: 256 = any
code	Keyword for the code of the ICMP packet type	-
num	Number corresponding to a specific code.	Enter the required number.
		Default: 256
ver	Keyword for the version of the ICMP protocol	-
ipv4	IP Version4	-

Result

The ICMP service is configured.

Further notes

You change the configuration with the icmp name set type command.

You display the available service names with the *icmp* show-names command.

You show the available ICMP packet types and codes with the $\tt icmp \ show-types-codes$ command.

You delete this service with the no icmp command.

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt icmp-services}\ {\tt ipv4}$ command.

10.2.4.3 no icmp

Description

With this command, you delete all ICMP services or a specific ICMP service.

Requirement

- The corresponding ICMP service has been created and is not being used anywhere.
- You are in the Firewall configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

```
no icmp {name <string(255)> | all}
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
name	Keyword for ICMP service name	-
string	ICMP service name	Specify a valid service name. Maximum of 255 characters
all	Deletes all ICMP service names	-

Result

The corresponding ICMP service is deleted.

Further notes

You create the ICMP service with the *icmp* name command.

You display the available service names with the ${\tt icmp\ show-names\ command}.$

You show the available ICMP packet types and codes with the $\verb"icmp" show-types-codes" command.$

10.2.4.4 icmp name set type

Description

With this command, you change the ICMP packet type and the code of an already created ICMP service.

Requirement

- The corresponding ICMP service is has been created.
- You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

icmp name <string(32)> set type <num(0-256)> code <num(0-256)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	ICMP service name	Specify a valid service name.
		Maximum of 32 characters
type	Keyword for the ICMP packet type	-
integer	Number corresponding to a specific ICMP packet type.	Enter the required number.
code	Keyword for the code of the ICMP packet type	-
integer	Number corresponding to a specific	Enter the required number.
	code.	The selection depends on the ICMP packet type.

Result

The ICMP packet type and code have been changed.

Further notes

You create an ICMP service with the icmp name ${\tt type}$ command.

You display the available service names with the *icmp* show-names command.

You show the available ICMP packet types and codes with the $\tt icmp \ show-types-codes$ command.

You delete this service with the no icmp command.

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt icmp-services}\ {\tt ipv4}$ command.

Security and	authentication
--------------	----------------

10.2.4.5 icmp show-names

Description

With this command, you display the available ICMP service names.

Requirement

You are in the FIREWALL configuration mode. The command prompt is as follows: cli(config-fw)#

Syntax

Call the command without parameter assignment: icmp show-names

Result

The list is displayed.

Further notes

You create a protocol with the icmp name command.

10.2.4.6 icmp show-types-codes

Description

With this command, you display the available ICMP packet types and codes.

Requirement

You are in the FIREWALL configuration mode. The command prompt is as follows: cli(config-fw)#

Syntax

Call the command without parameter assignment:

icmp show-types-codes

Result

The list is displayed.

Further notes

You create a protocol with the icmp name command.

10.2.4.7 idle timeout icmp

Description

With this command, you configure the required period for ICMP. If no data exchange takes place, the ICMP connection is terminated automatically when this time has elapsed.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

idle timeout icmp <second(1-4294967295)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
second	Interval in seconds	1 4294967295

Result

The interval is configured.

Further notes

You display this setting and other information with the show firewall information command.

10.2.4.8 idle timeout udp

Description

With this command, you configure the required period for UDP. If no data exchange takes place, the UDP connection is terminated automatically when this time has elapsed.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

idle timeout udp <second(1-4294967295)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
second	Interval in seconds	1 4294967295

Result

The interval is configured.

Further notes

You display this setting and other information with the ${\tt show}$ firewall information command.

10.2.4.9 idle timeout tcp

Description

With this command, you configure the required period for TCP. If no data exchange takes place, the TCP connection is terminated automatically when this time has elapsed.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

idle timeout tcp <second(1-4294967295)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
second	Interval in seconds	1 4294967295

Result

The interval is configured.

Further notes

You display this setting and other information with the show firewall information command.

10.2.4.10 ipv4rule

Description

With this command, you create your own IPv4 rules for the firewall. These IPv4 firewall rules have a higher priority than the predefined IPv4 firewall rules.

Requirement

- The service name or protocol name has been created.
- You are in the FIREWALL configuration mode.

The command prompt is as follows:

```
cli(config-fw)#
```

Syntax

Call up the command with the following parameters:

ipv4rule from <iftype|OpenVPN|OpenVPNall|IPsec|IPsecall|SinemaRC|Device> [<ifnum(0-4094)>] to <iftype|OpenVPN|OpenVPNall|IPsec|IPsecall|SinemaRC|Device> [<ifnum(0-4094)>] srcip <ip|subnet|range> dst

ip <ip|subnet|range> action {drop|acc|rej} [service <all|name(32)>] [log
{no|info|war|cri}] [prior <number(0-4096)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
from	Keyword for the outgoing direc- tion (from)	-
iftype	Interface that sends the IPv4 packet	Enter a valid interface

Parameter	Description	Range of values / note
OpenVPN OpenVPNall IPsec IPsecall SinemaRC	Access via VPN tunnel partners that can be reached via SINEMA RC via all VPN connections (all) or via a certain VPN connection <integer> .</integer>	-
Device	Access from the device	-
ifnum	Number of the interface or the VPN connection	0 4094
to	Keyword for the incoming direc- tion (to)	
iftype	Interface that receives the IPv4 packets	Enter a valid interface anvlan
OpenVPN OpenVPNall IPsec IPsecall SinemaRC	Access to the VPN tunnel part- ners that can be reached via SINEMA RC via all VPN connec- tions (all) or via a certain VPN connection <integer>.</integer>	-
Device	Access to the device	-
ifnum	Number of the interface or the VPN connection	0 4094
srcip	Keyword for the source	-
ip	IPv4 address	Specify the IP address.
range	IPv4 address range	Enter the IP address range with start ad- dress "-" end address, e. g. 192.168.100.10 - 192.168.100.20.
subnet	Subnet	Specify the subnet in the CIDR notation. all IP addresses: Specify " 0.0.0.0/0".
dstip	Keyword for the destination	-
ip	IPv4 address	Specify the IP address.
range	IPv2 address range	Enter the IP address range with start ad- dress "-" end address, e.g. 192.168.100.10 - 192.168.100.20.
subnet	Subnet	Specify the subnet in the CIDR notation. all IP addresses: Specify " 0.0.0.0/0".
action	Keyword for the action with in- coming IPv4 packets	-
acc	The data packets can pass through.	-
drop	The data packets are discarded without any notification to the sender.	-
rej	The data packets are rejected, and the sender receives a corre- sponding message.	-

Parameter	Description	Range of values / note
service	Keyword for service or protocol name	-
name	Service or protocol name for	Enter a valid name.
	which this rule is valid	Maximum of 32 characters
log	Keyword for making entries in the firewall log	-
no	The rule coming into effect is not logged.	-
info	Messages about event severity "information" are logged.	-
war	Messages about event severity "warning" are logged.	-
cri	Messages about event severity "critical" are logged.	-
prior	Keyword for the priority	-
number	Priority	Enter the priority for the IPv4 rule.
		0 64

For information on identifiers of interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The IPv4 rule is created. When it is created, the IPv4 rule is automatically given a unique number (index).

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt ip-rules}\ {\tt ipv4}$ command.

You create a service with the following commands: icmp name, service name.

You create a protocol with the proto name command.

You change the settings with the commands <code>ipv4rule</code> and <code>set....</code>

10.2.4.11 no ipv4 rule

Description

With this command, you delete all IPv4 firewall rules or a specific IPv4 firewall rule.

Requirement

- The corresponding IPv4 firewall rule has been created and is not being used anywhere.
- You are in the Firewall configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

```
no ipv4rule {all | idx <integer(1-64)>}
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
ALL	Deletes all IPv4 rules	-
idx	Keyword for index	-
integer	Number corresponding to a specific IPv4 rule.	Enter the required number. 1 64

Result

The corresponding IPv4 firewall rule is deleted.

Further notes

You display the IPv4 firewall rule with the ipv4rule command. You obtain the numbers with the ipv4rule show-rules command.

10.2.4.12 ipv4rule set action

Description

With this command, you change the action taken with incoming IPv4 packets.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set action {drop|acc|rej}

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64
action	Keyword for the action with in- coming IPv4 packets	-
acc	The data packets can pass through.	-
drop	The data packets are discarded without any notification to the sender.	-
rej	The data packets are rejected, and the sender receives a corre- sponding message.	-

Result

The action taken with the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the ${\tt show firewall ip-rules ipv4}$ command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.13 ipv4rule set dstip

Description

With this command, you change the destination.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set dstip <ip addr>

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64
dstip	Keyword for the destination	-
string	Address that receives IPv4 packets.	 Individual IP address: Specify the IP address.
		 IP range: Specify the range with the start address "-" end address, e.g.192.168.100.10 - 192.168.100.20.
		• All IP addresses: Specify " 0.0.0.0/0".

Result

The destination of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the show firewall ip-rules ipv4 command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.14 ipv4rule set from

Description

With this command, you change the outgoing direction.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set from <ifname(50)> [<ifnum(0-4094)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe-	Enter the required number.
	cific IPv4 rule.	1 64
from	Keyword for the outgoing direc- tion (from)	-
ifname	Interface that sends the IPv4	Specify a valid interface.
	packet	Maximum of 50 characters
ifnum	Number of the interface	0 4094

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode".

Result

The outgoing direction of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the show firewall ip-rules ipv4 command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.15 ipv4rule set log

Description

With this command, you change the making of entries in the firewall log.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set log {no|info|war|cri}

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe-	Enter the required number.
	cific IPv4 rule.	1 64
integer	Number of the interface	0 4094
log	Keyword for making entries in the firewall log	-
none	The rule coming into effect is not logged.	-
info	Messages about event severity "information" are logged.	-
war	Messages about event severity "warning" are logged.	-
cri	Messages about event severity "critical" are logged.	-

Result

Entering in the firewall log has been changed.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt ip-rules}\ {\tt ipv4}$ command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.16 ipv4rule set prior

Description

With this command, you change the priority of the IPv4 firewall rule.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set prior <number(0-64)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64
prior	Keyword for the priority	-
integer	Priority	Enter the priority for the IPv4 rule. 0 64

Result

The priority of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt ip-rules}\ {\tt ipv4}$ command.

You obtain the numbers with the *ipv4rule* show-rules command.

10.2.4.17 ipv4rule set service

Description

With this command, you change the service or protocol name.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set service <string(32)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64
integer	Number of the interface	0 4094
service	Keyword for service or protocol name	-

Result

The service or protocol name of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the show firewall ip-rules ipv4 command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.18 ipv4rule set srcip

Description

With this command, you change the source.

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set srcip <ip_addr>

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64

Parameter	Description	Range of values / note	
srcip	Keyword for the source		
string	Address that sends IPv4 packets.	 Individual IP address: Specify the IP address. 	
		 IP range: Specify the range with the start address "-" end address, e.g.192.168.100.10 - 192.168.100.20. 	
		• All IP addresses: Specify " 0.0.0.0/0".	

Result

The source of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the show firewall ip-rules ipv4 command.

You obtain the numbers with the <code>ipv4rule show-rules</code> command.

10.2.4.19 ipv4rule set to

Description

With this command, you change the incoming direction (to).

Requirement

- The IPv4 firewall rule has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

ipv4rule idx <number(1-64)> set to <ifname(50)> [<ifnum(0-4094)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Keyword for index	-
number	Number corresponding to a spe- cific IPv4 rule.	Enter the required number. 1 64

Parameter	Description	Range of values / note
to	Keyword for the incoming direc- tion (to)	-
ifname	Interface that receives the IPv4 packet	Specify a valid interface. Maximum of 50 characters
ifnum(Number of the interface	0 4094

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode".

Result

The incoming direction of the corresponding IPv4 firewall rule has been changed.

Further notes

You display this setting and other information with the show firewall ip-rules ipv4 command.

You obtain the numbers with the ipv4rule show-rules command.

10.2.4.20 ipv4rule ipsec connection

Description

With this command, you list the firewall rules for the IPsec connections.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call the command without parameter assignment:

ipv4rule ipsec connection show-idx

Result

The IPv4 firewall rules are listed.

Further notes

You display the IPv4 firewall rule with the *ipv4rule* command.

10.2.4.21	prerule ipv4 show-int
Description	With this command, you list the available interfaces and their interface indexes
Requirement	
	You are in the Firewall configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
	Call the command without parameter assignment:
	prerule show-int
Result	
	The list is displayed.
10.2.4.22	ipv4rule show-rules
Description	
	With this command, you display the available IPv4 firewall rules.
Requirement	
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
	Call the command without parameter assignment:
	Call the command without parameter assignment:
Result	Call the command without parameter assignment:

Security and au	Ithentication
10.2 Firewall	
Further notes	
	You display further information with the show firewall in-rules inv4 command
	You display the IPv4 firewall rule with the tracture to command
	Tou display the in v4 mewain the with the ipv4rule command.
10 2 4 23	prerule inv4 show-int
101211120	
Description	
Description	
	With this command, you list the available interfaces.
Requirement	
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
Cymax	Call the command without parameter accignment:
	Cair the command without parameter assignment.
	prerule ipv4 show-int
Result	
	The interfaces are listed.
10.2.4.24	prerule all ipv4
Description	
	With this command, you enable all predefined firewall rules on the selected interface.
Requirement	
Requirement	Vey are in the EIDEWALL configuration mode
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
	Call up the command with the following parameters:
	<pre>prerule all ipv4 {int <interface-type> <num(0-4049)> all-int} {enabled disabled}</num(0-4049)></interface-type></pre>

The parameters have the following meaning:

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables all predefined firewall rules on all inter- faces.	-
enabled	Enables the predefined firewall rules.	-
disabled	Disables the predefined firewall rules.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

All predefined firewall rules are enabled on the corresponding interface.

Further notes

You display this setting and other information with the show firewall pre-rules ipv4 command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.25 prerule dhcp ipv4

Description

With this command, you enable the predefined firewall rule DHCP on the selected interface.

Requirement

You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters: prerule dhcp ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

The parameters have the following meaning:

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule DHCP is enabled on the relevant interface. The DHCP server or the DHCP client can be accessed via the interface.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall\ pre-rules\ ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.26 prerule dns ipv4

Description

With this command, you enable the predefined firewall rule DNS on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule dns ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}
Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule DNS is enabled on the relevant interface. DNS queries to the device are possible via the interface.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt pre-rules}\ {\tt ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.27 prerule http ipv4

Description

With this command, you enable the predefined firewall rule HTTP on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule http ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

The parameters have the following meaning:

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule HTTP is enabled on the relevant interface. The WBM can be accessed using HTTP.

Further notes

You display this setting and other information with the show firewall pre-rules ipv4 command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.28 prerule https ipv4

Description

With this command, you enable the predefined firewall rule for HTTPS on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule https ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule HTTPS is enabled on the relevant interface. The WBM can be accessed using HTTPS.

Further notes

You display this setting and other information with the ${\tt show}$ firewall pre-rules ipv4 command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.29 prerule ip ipv4

Description

With this command, you enable the predefined firewall rule for IPv4 services on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule ip ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

The parameters have the following meaning:

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule IPv4 services is enabled on the relevant interface.

Further notes

You display this setting and other information with the show firewall pre-rules ipv4 command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.30 prerule ipsec ipv4

Description

With this command, you enable the predefined firewall rule IPsec on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule ipsec ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule IPsec is enabled on the relevant interface. IKE (Internet Key Exchange) data transfer from the external network to the device is allowed.

Further notes

You display this setting and other information with the ${\tt show}$ firewall pre-rules ipv4 command.

You list the available interfaces with the ${\tt prerule ipv4 show-int}$ command.

10.2.4.31 prerule snmp ipv4

Description

With this command, you enable the predefined firewall rule SNMP on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule snmp ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

The parameters have the following meaning:

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule SNMP is enabled on the relevant interface. Incoming SNMP connections are possible via the interface.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall\ pre-rules\ ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.32 prerule ssh ipv4

Description

With this command, you enable the predefined firewall rule SSH on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule ssh ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule SSH is enabled on the relevant interface. Encrypted access to the CLI is possible.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt pre-rules}\ {\tt ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.33 prerule telnet ipv4

Description

With this command, you enable the predefined firewall rule Telnet on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule telnet ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note	
int	Keyword for the interface	-	
interface-type	Type or speed of the interface	Specify a valid interface.	
num	Interface index	Specify a valid interface index.	
		0 4049	
all-int	Enables the predefined firewall rule on all inter- faces.	-	
enabled	Enables the predefined firewall rule.	-	
disabled	Disables the predefined firewall rule.	-	

The parameters have the following meaning:

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule Telnet is enabled on the relevant interface. Unencrypted access to the CLI is possible.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall\ pre-rules\ ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.34 prerule tftp ipv4

Description

With this command, you enable the predefined firewall rule TFTP on the selected interface.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule tftp ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule TFTP is enabled on the interface. Communication using TFTP is allowed.

Further notes

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt pre-rules}\ {\tt ipv4}$ command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.35 prerule ping ipv4

Description

With this command, you enable the predefined firewall rule Ping on the selected interface.

Requirement

You are in the Firewall configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

prerule telnet ipv4 {int <interface-type> <num(0-4049)> | all-int} {enabled|disabled}

Parameter	Description	Range of values / note
int	Keyword for the interface	-
interface-type	Type or speed of the interface	Specify a valid interface.
num	Interface index	Specify a valid interface index.
		0 4049
all-int	Enables the predefined firewall rule on all inter- faces.	-
enabled	Enables the predefined firewall rule.	-
disabled	Disables the predefined firewall rule.	-

The parameters have the following meaning:

For information on identifiers of addresses and interfaces, refer to the section "Commands in the FIREWALL configuration mode (Page 337)".

Result

The predefined firewall rule Ping is enabled on the relevant interface.

Further notes

You display this setting and other information with the show firewall pre-rules ipv4 command.

You list the available interfaces with the prerule ipv4 show-int command.

10.2.4.36 proto name

Description

With this command, you configure user-defined protocols. You select a protocol name and assign a protocol number to it.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

proto name <name(32) > num <number(1-255) >

Parameter	Description	Range of values / note
name	Protocol name	Specify a unique protocol name.
		Max. 32 characters
protonumber	Protocol number	1 255
		Default: 255
		Specify a protocol number, e.g. 2.
		You will find list of the protocol numbers on the Inter- net pages of iana.org

Result

The protocol is configured. If the optional parameters are not specified, a protocol with this name is created and the default value is used. You can adapt the parameter later.

Further notes

You display this setting and other information with the show firewall ip-protocols command.

You delete the protocol with the no proto. command.

10.2.4.37 no proto

Description

With this command, you delete all protocols or a specific protocol.

Requirement

- The corresponding protocol has been created and is not being used anywhere.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

no proto {name <string(32)> | all}}

The parameters have the following meaning	ng:
---	-----

Parameter	Description	Range of values / note
name	Keyword for a protocol name	-
string	Protocol name	Specify a valid protocol name.
		Maximum of 32 characters
all	Deletes all protocol names	-

Result

The relevant protocol is deleted.

Further notes

You create a protocol with the proto name command. You display the available protocol names with the proto show-names command.

10.2.4.38 proto show-names

Description

With this command, you display the available protocol names.

Requirement

You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call the command without parameter assignment:

proto show-names

Result

The protocol names are listed.

Further notes

You create a protocol with the proto name command.

10.2.4.39 service name

Description

With this command, you configure a service. You select a service name and assign the service parameters to it.

Requirement

You are in the Firewall configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

```
service name <string(32)> proto {udp|tcp}
src {all| port <number(0-65535)>| range <number(0-65535)> - <number(0-65535)>}
dst {all| port <number(0-65535)>| range <number(0-65535)> - <number(0-65535)>}
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Service name	Specify a unique service name.
		Maximum of 32 characters
UDP	The service is valid only for UDP frames.	-
TCP	The service is valid only for TCP frames.	Default
src	Keyword for the source	-
all	Applies to all ports.	-
Port	Keyword for a port	-
number	Port number	0 65535
		Specify the required port.
range	Keyword for a port range	-
number	Start port	0 65535
number	End port	Specify the start port and end port, e.g.
dst	Keyword for the destination	-
all	Applies to all ports.	-
Port	Keyword for a port	-
number	Port number	0 65535
		Specify the required port.

Parameter	Description	Range of values / note
range	Keyword for a port range	-
number	Start port	0 65535
number	End port	Specify the start port and end port, e.g.

Result

The service is configured.

Further notes

You delete this service with the no service command. You display the service with the show firewall ip-services command.

10.2.4.40 no service

Description

With this command, you delete all services or a specific service.

Requirement

- The corresponding service has been created and is not being used anywhere.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

no service {name <string(32)> | all}

The parameters have the following meaning:

Parameter	Description	Range of values / note
name	Keyword for service name	-
string	Service name	Specify a valid service name. Maximum of 32 characters
all	Deletes all service names	-

Result

The corresponding service is deleted.

Further notes

You display the available service names with the service show-names command. You create a service with the service name command. You display this setting and other information with the show firewall ip-services command.

10.2.4.41 service name set prot

Description

With this command, you change the protocol.

Requirement

- The service name has been created.
- You are in the FIREWALL configuration mode. The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

service name <string(32)> set proto {udp|tcp}

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Service name	Specify a valid service name.
		Maximum of 32 characters
UDP	The service is valid only for UDP frames.	-
TCP	The service is valid only for TCP frames.	-

Result

The protocol of the relevant service has been changed.

Further notes

You display the available service names with the service show-names command.

You create the service with the service name command.

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt ip-services}\ {\tt command}.$

10.2.4.42 service name set dst

Description

With this command, you change the destination port.

Requirement

- The service name has been created.
- You are in the FIREWALL configuration mode.

The command prompt is as follows:

cli(config-fw)#

Syntax

Call up the command with the following parameters:

```
service name <string(32)> set dst {all| port <number(0-65535)>| range <number(0-65535)> - <number(0-65535)>}
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Service name	Specify a valid service name.
		Maximum of 32 characters
all	Valid for all ports.	-
Port	Keyword for a port	-
number	Port number	0 65535
		Specify the required port.
range	Keyword for a port range	-
number	Start port	0 65535
number	End port	Specify the start port and end port, e.g.

Result

The destination port of the corresponding service has been changed.

Further notes

You display the available service names with the ${\tt service \ show-names \ command.}$

You create the service with the service name command.

You display this setting and other information with the ${\tt show}\ {\tt firewall}\ {\tt ip-services}\ {\tt command}.$

10.2.4.43 service name set src

Description

With this command, you change the source port.

Requirement

- The service name has been created.
- You are in the FIREWALL configuration mode.

The command prompt is as follows:

```
cli(config-fw)#
```

Syntax

Call up the command with the following parameters:

```
service name <string(32)> set src {all| port <number(0-65535)>| range <number(0-
65535)> - <number(0-65535)>}
```

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	Service name	Specify a valid service name.
		Maximum of 32 characters
all	Applies to all ports.	-
Port	Keyword for a port	-
number	Port number	0 65535
		Specify the required port.
range	Keyword for a port range	-
number	Start port	0 65535
number	End port	Specify the start port and end port, e.g.

Result

The source port of the corresponding service has been changed.

Further notes	
	You display the available service names with the service show-names command.
	You create the service with the service cr name command.
	You display this setting and other information with the show firewall ip-services command.
10.2.4.44	service show-names
Description	
	With this command, you display the available service names.
Requirement	
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
	Call the command without parameter assignment:
	service show-names
Result	
	The service names are listed.
Further notes	
	You create a protocol with the service cr name command.
10.2.4.45	shutdown
Description	
	With this command, you disable the firewall.
Requirement	
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#

Security and authentication

. 10.2 Firewall

Syntax	
	Call the command without parameter assignment:
	shutdown
Result	
	The firewall is disabled.
F th	
Further notes	
	You enable the firewall with the no shutdown command.
10 2 4 46	no shutdown
10.2.1.10	
Description	
·	With this command, you enable the firewall.
Requirement	
	You are in the FIREWALL configuration mode.
	The command prompt is as follows:
	cli(config-fw)#
Syntax	
	Call the command without parameter assignment:
	no shutdown
Decult	
Result	The firewell is enabled
	The firewall is enabled.
Further notes	
	You disable the firewall with the shutdown command

10.3 IPsec VPN

10.3 IPsec VPN

This section describes commands relevant for IPsec.

10.3.1	The "show" commands This section describes commands with which you display various settings.
10.3.1.1	show ipsec conn-authentication
Description	This command shows the security settings of the IPsec VPN connections.
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:
Syntax	Call the command without parameter assignment: show ipsec conn-authentication
Result	The settings are displayed.
10.3.1.2	show ipsec connections
Description	This command shows the configuration of the IPsec VPN connections.
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax	
	Call the command without parameter assignment:
	show ipsecvpn connections
Result	
	The configurations are displayed.
10313	show ipsec conn-phase1
10101110	
Description	
Description	This command shows the configuration of the phase 1 of the IPsec VPN connections
	This command shows the computation of the phase 1 of the firset of the commettions.
Doguiromont	
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show ipsec conn-phasel
Result	
	The configurations are displayed.
10.3.1.4	show ipsec conn-phase2
Description	
	This command shows the configuration of the phase 2 of the IPsec VPN connections.
Requirement	
•	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	511 II

Security and au	Ithentication
10.3 IPsec VPI	V
Syntax	
	Call the command without parameter assignment:
	show ipsec conn-phase2
Result	
	The configurations are displayed.
10.3.1.5	show ipsec information
Description	
	This command shows the basic setting of IPsec VPN.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show ipsec information
Result	
	The settings are displayed.
10.3.1.6	show ipsec remoteend
Description	
	This command shows the configuration of the remote stations (VPN end point).
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#

Syntax	
	Call the command without parameter assignment:
	show ipsec remoteend
Result	
	The configurations are displayed.
10.3.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or $exit$ command and are then in the Privileged EXEC mode again.
10.3.2.1	ipsec
Description	
	With this command, you change to the IPSEC configuration mode.
Requirement	
	You are in the Global configuration mode.
	The command prompt is as follows:
	cli(config)#
Syntax	
Cymax	Call the command without parameter assignment:
	ipsec
Result	
	You are now in the IPSEC configuration mode.
	The command prompt is as follows:
	cli(config-ipsec)#

10.3 IPsec VPN

Further notes

You exit the IPSEC configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

10.3.3 Commands in the IPSEC configuration mode

This section describes commands that you can call up in the IPSEC configuration mode.

In the Global configuration mode, enter the <code>ipsec</code> command to change to this mode.

- If you exit the IPSEC configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the IPSEC configuration mode with the end command, you return to the Privileged EXEC mode.

10.3.3.1 connection name

Description

With this command, you change to the IPSEC CONNECTION configuration mode. If a suitable VPN connection does not exist, a VPN connection is first created.

Requirement

You are in the IPSEC configuration mode.

The command prompt is as follows:

```
cli(config-ipsec)#
```

Syntax

Call up the command with the following parameters:

connection name <name(122)>

The parameter has the following meaning:

1	Range of values / note
e VPN connection	Enter the name for the VPN con- nection.
ח ו	n ne VPN connection

Result

You are now in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Further notes

You exit the IPSEC CONNECTION configuration mode with the end or exit command. You delete a VPN connection with the no connection name command. You delete all VPN connections with the no connection all command.

10.3.3.2 no connection name

Description

With this command, you delete a specific VPN connection.

Requirement

- The corresponding VPN connection has been created and is not being used anywhere.
- You are in the IPSEC CONNECTION configuration mode. The command prompt is as follows:

cli(config-ipsec-conn-X)#

Syntax

Call up the command with the following parameters:

no connection name <name(122)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the VPN connection	Enter the name of the VPN con-
		nection.

Result

The corresponding VPN connection is deleted.

Further notes

You display the VPN connection with the connection name command.

10.3.3.3 no connection all

Description

With this command, you delete all VPN connections.

Security and auth	hentication
10.3 IPsec VPN	
Requirement	
	 The VPN connection have been created and are not being used anywhere.
	 You are in the IPSEC CONNECTION configuration mode.
	The command prompt is as follows:
	cli(config-ipsec-conn-X)#
Syntax	
	Call the command without parameter assignment:
	no connection all
Result	
	All VPN connections are deleted.
Further notes	
	You display the VPN connection with the connection name command.
10.3.3.4 c	xrl-policy
Description	
Description	With this command, you specify whether the validity of the certificates is checked based on the CRL (Certificate Revocation List).
Requirement	
	You are in the IPSEC configuration mode.
	The command prompt is as follows:
	cli(config-ipsec)#

Syntax

Call up the command with the following parameters:

CRL-policy {yes|no|ifuri}

The parameters have the following meaning:

Parameter	Description	Range of values / note
yes	CRL is used	-
no	CRL is not used	-
ifuri	Is only used when a CRLURL is de- fined.	-

Result

The setting is configured.

Further notes

You display this setting and other information with the show ipsecvpn information command.

10.3.3.5 nat-keep-alive

Description

With this command, you specify the interval at which sign of life frames (keepalives) are sent.

Requirement

You are in the IPSEC configuration mode. The command prompt is as follows:

cli(config-ipsec)#

Syntax

Call up the command with the following parameters:

nat-keep-alive <sec(1-10000)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
sec	Interval	Enter the required interval.
		1 10000 seconds

Result

The interval is configured.

Further notes

You display this setting and other information with the show ipsecvpn information command.

10.3 IPsec VPN

10.3.3.6 remote-end name

Description

With this command, you change to the IPSEC REMOTE END configuration mode. In this mode, you configure the other settings.

If the matching VPN remote station does not exist, the VPN remote station is first created.

Requirement

You are in the IPSEC configuration mode.

The command prompt is as follows:

cli(config-ipsec)#

Syntax

Call up the command with the following parameters:

```
remote-end name <name(128)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the VPN remote station	Enter the name for the VPN re-
		mote station.

Result

You are now in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

X is a placeholder for the name

Further notes

You exit the IPSEC REMOTE END configuration mode with the end or exit command. You delete a VPN remote station with the no remote-end name command.

You delete all VPN remote stations with the no remote-end all command.

10.3.3.7 no remote-end name

Description

With this command, you delete a specific VPN remote station.

Requirement

- The corresponding VPN remote station has been created and is not being used anywhere.
- You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

```
cli(config-ipsec-rmend-X)#
```

Syntax

Call up the command with the following parameters:

no remote-end name <name(128)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the VPN remote station	Enter the name of the VPN re- mote station.

Result

The corresponding VPN remote station is deleted.

Further notes

You create the VPN remote station with the remote-end name command.

10.3.3.8 no remote-end all

Description

With this command, you delete all VPN remote stations.

Requirement

- The VPN remote stations have been created and are not being used anywhere.
- You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

Syntax

Call the command without parameter assignment:

no remote-end all

Security and auth	hentication
10.3 IPsec VPN	
Result	
	All VPN remote stations are deleted.
Further notes	
	You display the VPN remote station with the remote-end name command.
10339 m	o shutdown
10.5.5.9	
Description	
Description	
	with this command, you enable the IPsec method for VPN.
- · · ·	
Requirement	
	You are in the IPSEC configuration mode.
	The command prompt is as follows:
	cli(config-ipsec)#
Syntax	
	Call the command without parameter assignment:
	no shutdown
Result	
	The IPsec method is enabled.
Further notes	
	You disable the IPsec method with the shutdown command.
	You display this setting and other information with the show ipsecvpn information command.
10.3.3.10 s	hutdown
Description	
Decemption	With this command, you disable the IPsec method for VPN
Requirement	
	You are in the IPSEC configuration mode
	The command prompt is as follows:
	The command prompt is as follows.

	cli(config-ipsec)#
Syntax	Call the command without parameter assignment:
	shutdown
Result	The IPsec method is disabled.
Further notes	
	You enable the IPsec method with the no shutdown command.
	You display this setting and other information with the show ipsecvpn information command.
10.3.4	Commands in the IPSEC REMOTE END configuration mode
	This section describes commands that you can call up in the IPSEC REMOTE END configuration mode.
	In the IPSEC configuration mode, enter the remote end name command to change to this mode.
	 If you exit the IPSEC REMOTE END configuration mode with the exit command, you return to the IPSEC configuration mode.
	 If you exit the IPSEC REMOTE END configuration mode with the end command, you return to the Privileged EXEC mode.
10.3.4.1	addr
Description	
	With this command, you configure the address of the VPN remote station.
Requirement	
	You are in the IPSEC REMOTE END configuration mode.
	The command prompt is as follows:
	<pre>cli(config-ipsec-rmend-X)#</pre>
Syntax	
	Call up the command with the following parameters:

10.3 IPsec VPN

addr <subnet|dns>

The parameters have the following meaning:

Parameter	Description	Range of values / note
subnet	IP subnet	In Roadwarrior mode
		Specify the WAN IP address.
		In standard mode
		Enter an IP range from which connections will be accepted.
		0.0.0.0/0 means all IP addresses are accepted.
dns	DNS host name	Only in standard mode
		Specify the DNS host name.

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The address is specified.

Further notes

You configure the mode with the conn-mode command. You display this setting and other information with the show ipsec remoteend command.

10.3.4.2 addr-mode

Description

With this command, you specify the type of the remote station address.

Requirement

You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

Syntax

Call up the command with the following parameters:

addr-mode <manual|any>

Parameter	Description	Range of values / note
manual	Accepts the connection from remote stations with a specific address.	 In Roadwarrior mode Only accepts connections from remote stations with a fixed IP address (/32), fixed IP subnet (CIDR nota- tion), or (D)DNS host name. In standard mode Only establishes a connection to a specific remote station with a fixed IP address or with (D)DNS host name. Or only accepts a connection from a specific remote station with a fixed IP address or with (D)DNS host name.
any	Accepts the connection from remote stations with any IPv4 address.	Only in Roadwarrior mode

Result

The setting is specified.

Further notes

	You configure the mode with the conn-mode command.
	You configure the IP address with the addr command.
	You configure the remote subnet with the subnet command.
	You display this setting and other information with the show ipsec remoteend command.
40.0.4.0	
10.3.4.3	conn-mode
Description	

With this command, you specify the role the remote stations will adopt.

Requirement

You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

10.3 IPsec VPN

Syntax

Call up the command with the following parameters:

conn-mode {roadwarrior|standard}

The parameters have the following meaning:

Parameter	Description	Range of values / note
roadwarrior	Roadwarrior mode	-
	The device accepts VPN connections from remote sta- tions with an unknown address.	
standard	Standard mode	-
	The device establishes a connection to or from a known remote station. The remote station is identified by the IPv4 address or the DDNS hostname.	

Result

The role is configured.

Further notes

You display this setting and other information with the show ipsec remoteend command.

10.3.4.4 subnet

Description

With this command, you configure the remote subnet of the VPN remote station.

Requirement

You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

Syntax

Call up the command with the following parameters:

subnet <subnet>

The parameters have the following meaning:

Parameter	Description	Range of values / note
subnet	IP subnet	Specify the subnet.

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The remote subnet is configured.

Further notes

You display this setting and other information with the show ipsec remoteend command.

10.3.4.5 vir-ip

Description

With this command, you specify the subnet from which the remote station is offered a virtual IP address.

Requirement

You are in the IPSEC REMOTE END configuration mode.

The command prompt is as follows:

cli(config-ipsec-rmend-X)#

Syntax

Call up the command with the following parameters:

vir-ip ipv4 [<subnet>]

The parameter has the following meaning:

Parameter	Description	Range of values / note
subnet	Subnet from which the remote station is offered a virtual IPv4 address	Specify the subnet in CIDR notation.

For information on identifiers of addresses and interfaces, refer to the section "Auto-Hotspot".

Result

The subnet is configured.

Further notes

You display this setting and other information with the show ipsec remoteend command.

Security and authentication		
10.3 IPsec VPN	V	
	You disable the setting with the no vir-ip command.	
10.3.4.6	no vir-ip	
Description		
	With this command, you specify that the remote station is not offered a virtual IPv4 address.	
Requirement		
	You are in the IPSEC REMOTE END configuration mode.	
	The command prompt is as follows:	
	cli(config-ipsec-rmend-X)#	
Svntax		
,	Call the command without parameter assignment:	
	no vir-ip	
Result		
	The setting is configured	
Further notes		
	You display this setting and other information with the show insect remoteend command	
	You enable this setting with the vir-in command	
	Tou enable this setting with the vir-ip command.	
10.3.5	Commands in the IPSEC CONNECTION configuration mode	
	This section describes commands that you can call up in the IPSEC CONNECTION	
	configuration mode.	
	In the IPSEC configuration mode, enter the connection name command to change to this mode.	
	 If you exit the IPSEC CONNECTION configuration mode with the exit command, you return to the IPSEC configuration mode. 	
	 If you exit the IPSEC CONNECTION configuration mode with the end command, you return to the Privileged EXEC mode. 	
10.3.5.1	authentication	
---------------	--	
Description	With this command, you change to the IPSEC AUTHENTICATION configuration mode.	
Requirement		
-	You are in the IPSEC CONNECTION configuration mode.	
	<pre>cli(config-conn-X) #</pre>	
Syntax		
	Call the command without parameter assignment:	
Result		
	You are now in the IPSEC AUTHENTICATION configuration mode.	
	The command prompt is as follows: cli(config-conn-auth)#	
Further notes		
	You exit the IPSEC AUTHENTICATION configuration mode with the end or $exit$ command.	
10.3.5.2	k-proto	
Description	With this command, you specify whether IKEv2 or IKEv1 will be used.	
Requirement		
·	You are in the IPSEC CONNECTION configuration mode.	
	The command prompt is as follows:	
	cli(config-conn-X)#	
Syntax		
	Call up the command with the following parameters:	
	k-proto {ikev1 ikev2}	

The parameters have the following meaning:

Parameter	Description	Range of values / note
IKE1	Uses IKEv1	-
IKEv2	Uses IKEv2	-

Result

The setting is configured.

Further notes

You display this setting and other information with the show ipsec connections command.

10.3.5.3 loc-subnet

Description

With this command, you configure the local subnet.

Requirement

You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call up the command with the following parameters:

loc-subnet <subnet|dns>

The parameters have the following meaning:

Parameter	Description	Range of values / note
subnet	Local subnet address	Specify the local subnet in CIDR notation.
		The local network can be a single PC or another sub- set of the local network.

For information on identifiers of addresses and interfaces, refer to the section Interface identifiers and addresses (Page 34).

Result

The local subnet is configured.

Further notes

You display this setting and other information with the ${\tt show}$ ipsecvpn connections command.

10.3.5.4 rmend name

Description

With this command, you specify the VPN remote station for the IPsec connection.

Requirement

- The VPN remote station has been created.
- You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call up the command with the following parameters:

```
rmend name <name(128)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the VPN remote station	Enter a valid name.

Result

The VPN remote station has been configured.

Further notes

You display this setting and other information with the show ipsec connections command. You create the VPN remote station with the remote-end name command.

10.3.5.5 operation

Description

With this command you specify how the connection is established.

Requirement

You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call up the command with the following parameters:

operation {disabled|start|wait|on-demand|start-di|wait-di|start-sms|wait-sms}

The parameters have the following meaning:

Parameter	Description	Range of values / note
disabled	The VPN connection is disabled	-
start	The device attempts to establish a VPN con- nection to the partner.	-
wait	The device waits for the partner to initiate the connection.	-
on-demand	The device waits for the partner to initiate the connection.	-
start-di	If the event "Digital In" occurs the device at- tempts to establish a VPN connection to the partner.	-
	This is on condition that the event "Digital In" is passed on to the VPN connection.	
wait-di	If the event "Digital In" occurs, the device waits for the partner to initiate a connection estab- lishment.	-
	This is on condition that the event "Digital In" is passed on to the VPN connection.	
start-sms	M87x only	-
	If the device receives a command SMS, the device attempts to establish a VPN connection to the partner.	
	This assumes that the device accepts a com- mand SMS of the class "System" from certain senders.	
wait-sms	M87x only	-
	If the device receives a command SMS, the device attempts to establish a VPN connection to the partner.	
	This assumes that the device accepts a com- mand SMS of the class "System" from certain senders.	

Result

The setting is configured.

Further notes

You display this setting and other information with the $\verb"show"$ ipsec connections command.

10.3.5.6 phase

Description

With this command, you change to the IPSEC PHASE configuration mode.

Requirement

You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call up the command with the following parameters:

phase <num(1-2)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
num	Phase of the VPN connection	• 1: Phase 1
		• 2: Phase 2

Result

You are now in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phsX)#

Further notes

You display this setting and other information with the show ipsec connections command.

10.3.5.7 timeout

Description

With this command, you configure the interval after which the VPN connection will be terminated. If no packets are sent during this time, the VPN connection is automatically terminated.

Requirement

- The VPN connection is established when necessary (on demand).
- You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call up the command with the following parameters:

timeout <sec(0-1000)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
sec	Period	Enter the period of time in sec- onds.

Result

The period of time is configured.

Further notes

You display this setting and other information with the show ipsec connections command. You configure the on demand setting with the operation command.

10.3.5.8 vir-ip

Description

With this command, you specify that during connection establishment a virtual IPv4 address is requested from the VPN remote station.

Requirement

You are in the IPSEC CONNECTION configuration mode.

The command prompt is as follows:

cli(config-conn-X)#

Syntax

Call the command without parameter assignment:

vir-ip

Result	
	The setting is enabled.
Further notes	
	You display this setting and other information with the show ipsec connections command.
	You disable the requesting of a virtual IPv4 address with the no vir-ip command.
10.3.5.9	no vir-ip
Description	
	With this command, you disable the requesting of a virtual IPv4 address.
Requirement	
	You are in the IPSEC CONNECTION configuration mode.
	The command prompt is as follows:
	cli(config-conn-X)#
Syntax	
	Call the command without parameter assignment:
	no vir-ip
Result	
	The setting is disabled.
Further notes	
	You display this setting and other information with the show ipsec connections command.
	You enable the requesting of a virtual IPv4 address with the ${\tt vir-ip}$ command.
10.3.6	Commands in the IPSEC AUTHENTICATION configuration mode
	This section describes commands that you can call up in the IPSEC AUTHENTICATION configuration mode.

In the IPSEC CONNECTION configuration mode, enter the ${\tt authentication}$ command to change to this mode.

- If you exit the IPSEC AUTHENTICATION configuration mode with the exit command, you return to the IPSEC CONNECTION configuration mode.
- If you exit the IPSEC AUTHENTICATION configuration mode with the end command, you return to the Privileged EXEC mode.

10.3.6.1 auth cacert

Description

With this command you specify that a CA certificate will be used for authentication.

Requirement

- The certificates are loaded.
- You are in the IPSEC AUTHENTICATION configuration mode. The command prompt is as follows:

cli(config-conn-auth)#

Syntax

Call up the command with the following parameters:

auth cacert <string(255)> localcert <string(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
cacert	Keyword for CA certificate	
string	Name of the CA certificate	Specify a valid CA certificate.
localcert	Keyword for a device certificate	
string	Name of the device certificate	Specify a valid device certificate.

Result

The setting is configured.

Further notes

You show the loaded certificates with the show-idx command.

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You show the available certificates with the show-idx command.

You show the configuration of the IPsec connection with the ${\tt show}$ ipsec connections command.

You remove the authentication with the no auth command.

10.3.6.2 auth psk

Description

With this command you specify that a key will be used for authentication.

Requirement

You are in the IPSEC AUTHENTICATION configuration mode.

The command prompt is as follows:

cli(config-conn-auth)#

Syntax

Call up the command with the following parameters:

auth psk <string(255)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
string	Value for the key	Specify a valid key.

Result

The key is configured.

Further notes

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You remove the authentication with the ${\tt no}$ ${\tt auth}$ command.

10.3.6.3 auth remcert

Description

With this command you specify that the remote station certificate will be used for authentication.

Requirement

- The certificates are loaded.
- You are in the IPSEC AUTHENTICATION configuration mode. The command prompt is as follows:

cli(config-conn-auth)#

Syntax

Call up the command with the following parameters:

auth remcert <string(255)> localcert <string(255)>

The parameters have the following meaning:

Remote cert	Keyword for a remote station certificate	-
string	Name of the remote station certificate	Specify a valid remote station certificate.
Local cert	Keyword for a device certificate	-
string	Name of the device certificate	Specify a valid device certificate.

Result

The setting is configured.

Further notes

You show the loaded certificates with the show-idx command.

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You remove the authentication with the no auth command.

10.3.6.4 no auth

Description

With this command, you delete the authentication method.

Requirement

You are in the IPSEC AUTHENTICATION configuration mode.

The command prompt is as follows:

cli(config-conn-auth)#

Syntax	
	Call the command without parameter assignment:
	no auth
Result	The authentication method is deleted.
10.3.6.5 lo	ocal-id
Description	
	With this command, you configure the local ID.
Requirement	
	You are in the IPSEC AUTHENTICATION configuration mode.
	The command prompt is as follows:
	cli(config-conn-auth)#

Syntax

Call up the command with the following parameters:

local-id <string(255)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
string	Local ID	Enter the local ID.
		If you do not specify the local ID, the local ID is read from the device certificate.
		If you use PSK as the authentication, the WAN IP address is used as the local ID.

Result

The local ID is configured.

Further notes

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You remove the local ID with the no local-id command.

Security and au	Ithentication
10.3 IPsec VPN	V
10.3.6.6	no local-id
Description	
	With this command, you remove the local ID.
Requirement	
	You are in the IPSEC AUTHENTICATION configuration mode.
	The command prompt is as follows:
	cli(config-conn-auth)#
Syntax	
5	Call the command without parameter assignment:
	no local-id
Result	
	The local ID is removed.
Further notes	
	You display this setting and other information with the show insect conn-authentication
	command.
	You configure the local ID with the local-id command.
10.3.6.7	rem-id
Description	
	With this command, you configure the remote ID.
Requirement	
-	You are in the IPSEC AUTHENTICATION configuration mode.
	The command prompt is as follows:
	cli(config-conn-auth)#
Syntax	
-	Call up the command with the following parameters:
	rem-id <string(255)></string(255)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
string	Remote ID	Enter the remote ID.
		If you do not specify the remote ID, the remote ID is read from the device certificate.
		If you use PSK as the authentication, the WAN IP address is used as the remote ID.

Result

The remote ID is configured.

Further notes

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You remove the remote ID with the no removed command.

10.3.6.8 no rem-id

Description

With this command, you remove the remote ID.

Requirement

You are in the IPSEC AUTHENTICATION configuration mode.

The command prompt is as follows:

cli(config-conn-auth)#

Syntax

Call the command without parameter assignment:

no rem-id

Result

The remote ID is removed.

Further notes

You display this setting and other information with the ${\tt show}$ ipsec conn-authentication command.

You configure the remote ID with the remote command.

10.3.7 Commands in the IPSEC PHASE1 configuration mode

This section describes commands that you can call up in the IPSEC PHASE configuration mode.

In the IPSEC CONNECTION configuration mode, enter the phase command with the parameter 1 to change to this mode.

- If you exit the IPSEC PHASE1 configuration mode with the exit command, you return to the IPSEC CONNECTION configuration mode.
- If you exit the IPSEC PHASE1 configuration mode with the end command, you return to the Privileged EXEC mode.

10.3.7.1 aggressive

Description

With this command you specify that the aggressive mode will be used.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call the command without parameter assignment:

aggressive

Result

The setting is configured.

Further notes

You display this setting and other information with the show ipsec conn-phasel command. You disable the aggressive mode with the no aggressive command.

10.3.7.2	no aggressive					
Description	With this con	nmand, you disab	le the aggress	ve mode.		
Requirement						
	You are in th	IPSEC PHASE	configuration r	node.		
	The comma	nd prompt is as fo	llows:			
	cli(config-c	conn-phs1)#				
Syntax						
	Call the com	mand without para	ameter assignr	ment:		
	no aggressiv	7e				
Result						
	The setting is	s disabled. The m	ain mode is us	ed.		
Further notes						
	You display t	this setting and ot	her informatior	n with the show i	psec conn-phase	1 command.
	You enable t	he aggressive mo	de with the age	gressive COMM a	ınd.	
10.3.7.3	default-ciphers	3				
Description						
	With this con connection p three algorith	nmand, you specit partner during con nms (Encryption, <i>A</i>	fy that a preset nection establis Authentication,	t list (default list) shment. The list Key Derivation)	is transferred to contains a comb	the VPN pination of the
	To establish these combir IKE).	a VPN connectior nations. The comb	n, the VPN con pinations depen	nection partner nd on the phase	must support at und the key exc	least one of hange method
	Combination		Ph	ase 1	Pha	se 2
Encryption	Authentica- tion	Key Derivation	IKEv1	IKEv2	IKEv1	IKEv2

х

х

-

-

х

х

х

х

х

х

х

х

SHA1

SHA512

SHA256

SHA512

DH Group 14

DH Group 16

DH Group 14

DH Group 16

AES128

AES256

AES128 CCM 16

AES256 CCM 16

х

х

х

х

	Combination		Pha	ase 1	Pha	se 2
Encryption	Authentica- tion	Key Derivation	IKEv1	IKEv2	IKEv1	IKEv2
AES128	SHA1	none	-	-	x	x
AES256	SHA512	none	-	-	x	x
AES128 CCM 16	SHA256	none	-	-	x	x
AES256 CCM 16	SHA512	none	-	-	x	x

x: is supported

-: is not supported

none: For phase 2, no separate keys are exchanged. This means that Perfect Forward Secrecy PFS) is disabled.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phsX)#

X: 1 (Phase 1)

2 (Phase 2)

Syntax

Call the command without parameter assignment:

default-ciphers

Result

The default list is used.

Further notes

You display this setting and other information with the show ipsec conn-phasex command. You disable the use of the default list with the no default-ciphers command.

10.3.7.4 no default-ciphers

Description

With this command, you disable the use of the default list.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phsX)#
X: 1 (Phase 1)
2 (Phase 2)

Syntax

	Call the command without parameter assignment:
	no default-ciphers
Result	
	The use of the default list is disabled. The fixed values are used for the phase.
Further notes	
	You configure the fixed values for phase 1 with the commands <code>ike-encryption</code> , <code>ike-auth</code> and <code>ike-keyderivation</code> .
	You configure the fixed values for phase 2 with the commands $\tt esp-encryption, esp-auth$ and $\tt esp-keyderivation.$
	You display this setting and other information with the show ipsec conn-phase1 or show ipsec conn-phase2 command.
	You enable the use of the default list with the default-ciphers command.
10.3.7.5 dp	od
Description	
	With this command, you enable Dead Peer Detection (DPD).
Requirement	
Requirement	You are in the IPSEC PHASE configuration mode
	The command prompt is as follows:
	cli(config-conn-phs1)#
Syntax	
	Call the command without parameter assignment: dpd

Security and au	Ithentication
10.3 IPsec VPN	V
Result	
	DPD is enabled. Using DPD, it is possible to find out whether the VPN connection still exists or whether it has aborted
Further notes	
	You display this setting and other information with the show ipsec conn-phase1 command.
	You disable DPD with the no dpd command.
10.3.7.6	no dpd
Description	
	With this command, you disable DPD.
Requirement	
roquionon	You are in the IPSEC PHASE configuration mode.
	The command prompt is as follows:
	cli(config-conn-phs1)#
Syntax	
	Call the command without parameter assignment:
	no dpd
Desult	
Result	DPD is dischlod
	DFD is disabled.
Further notes	
	You display this setting and other information with the show ipsec conn-phase1 command.
	You enable DPD with the dpd command.
10.3.7.7	dpd-period
Description	
	With this command, you configure the period after which DPD queries are sent.

Requirement

- DPD is enabled
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

```
dpd-period <sec(10-120)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
sec	Period for DPD queries	Enter the period of time in sec- onds.

Result

The period of time is configured.

Further notes

You display this setting and other information with the show ipsec conn-phasel command. You enable DPD with the dpd command.

10.3.7.8 dpd-timeout

Description

With this command, you configure the timeout setting for the VPN connection. If there is no response to the DPD queries, the connection to the remote station is declared to be invalid after this time has elapsed.

Requirement

- DPD is enabled
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

Security	' and	authe	nticatio	n
----------	-------	-------	----------	---

```
dpd-timeout <sec(10-1000)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
sec	Period for DPD queries	Enter the period of time in sec- onds.

Result

The period of time is configured.

Further notes

You display this setting and other information with the show ipsec conn-phasel command. You enable DPD with the dpd command.

10.3.7.9 ike-auth

Description

With this command, you configure the method for calculating the checksum.

Requirement

- The default list is not used.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

ike-auth {md5|sha1|sha512|sha256|sha384}

The parameters have the following meaning:

Parameter	Description	Range of values / note
md5	Message Digest Algorithm 5	-
shal	Secure Hash Algortihm 1 with 160 bit hash length	-
sha512	Secure Hash Algorithm 2 with 512 bit hash length	-

Parameter	Description	Range of values / note
sha256	Secure Hash Algorithm 2 with 256 bit hash length	-
sha384	Secure Hash Algorithm 2 with 384 bit hash length	-

Result

The method for configuring the checksum is configured.

Further notes

You display this setting and other information with the show ipsec conn-phasel command. You disable the use of the default list with the no default-ciphers command.

10.3.7.10 ike-encryption

Description

With this command, you configure the encryption algorithm.

Requirement

- The default list is not used.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

```
ike-encryption
```

{3des|aes128cbc|aes192cbc|aes256cbc|aes128ctr|aes192ctr|aes256ctr|aes128ccm16|aes192ccm16|aes192gcm16|aes192gcm16|aes192gcm16}

The parameters have the following meaning:

Parameter	Description		Phase 1	
		IKEv1	IKEv2	
3des	Triple Data Encryption Standard	х	x	
aes128cbc	Advanced Encryption Standard with 128 bits	х	x	
aes192cbc	Advanced Encryption Standard with 192 bits	х	х	
aes256cbc	Advanced Encryption Standard with 256 bits		х	

Parameter Description		Pha	Phase 1	
		IKEv1	IKEv2	
aes128ctr	Advanced Encryption Standard with 128 bits in Counter mode	-	x	
aes192ctr	Advanced Encryption Standard with 192 bits in Counter mode	-	x	
aes256ctr	Advanced Encryption Standard with 256 bits in Counter mode	-	x	
aes128ccm16	Advanced Encryption Standard with 128 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	-	x	
aes192ccm16	Advanced Encryption Standard with 192 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	-	x	
aes256ccm16	Advanced Encryption Standard with 256 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	-	x	
aes128gcm16	Advanced Encryption Standard with 128 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)	-	x	
aes192gcm16	Advanced Encryption Standard with 192 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)		x	
aes256gcm16	Advanced Encryption Standard with 256 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)	-	x	

x: is supported

-: is not supported

Result

The encryption algorithm is configured.

Further notes

You display this setting and other information with the show ipsec conn-phasel command. You disable the use of the default list with the no default-ciphers command.

10.3.7.11 ike-keyderivation

Description

With this command, you configure the required Diffie-Hellmann group (DH) from which a key will be generated.

Requirement

- The default list is not used.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

ike-keyderivation {dhgroup <1|2|5|14|15|16|17|18>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
auto	Automatic detection	-
dhgroup	Diffie-Hellmann group (DH)	Specify the required Diffie-Hellmann group (DH).
		• 1
		• 2
		• 5
		• 14
		• 15
		• 16
		• 17
		• 18

Result

The Diffie-Hellmann group (DH) is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase1 command. You disable the use of the default list with the no default-ciphers command.

10.3.7.12 ike-keytries

Description

With this command, you configure the number of repetitions for a failed connection establishment.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

```
ike-keytries <num(0-100)>
```

The parameter has the following meaning:

Parameter	Description	Range of values / note
num	Period for DPD queries	Enter the required number.
		With 0 there is no limit to the number of attempts to establish the connection.

Result

The number of times configured.

Further notes

You display this setting and other information with the show ipsec conn-phase1 command.

10.3.7.13 ike-lifetime

Description

With this command, you configure a period to specify the lifetime of the agreed keys. When the time expires, the key is renegotiated.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs1)#

Syntax

Call up the command with the following parameters:

ike-lifetime <min(10-2500000)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
min	Period for DPD queries	Specify the period of time in minutes.

Result

The period of time is configured.

Further notes

You display this setting and other information with the show <code>ipsec conn-phasel</code> command.

10.3.8 Commands in the IPSEC PHASE2 configuration mode

This section describes commands that you can call up in the IPSEC PHASE configuration mode.

In the IPSEC CONNECTION configuration mode, enter the $\tt phase$ command with the parameter 2 to change to this mode.

- If you exit the IPSEC PHASE2 configuration mode with the exit command, you return to the IPSEC CONNECTION configuration mode.
- If you exit the IPSEC PHASE2 configuration mode with the end command, you return to the Privileged EXEC mode.

10.3.8.1 auto-fwrules

Description

With this command you specify that the firewall rule will be created automatically for the VPN connection.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call the command without parameter assignment:

auto-fwrules

Result

The firewall rule is created automatically for the VPN connection.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You disable the setting with the no auto-fwrules command.

10.3.8.2 no auto-fwrules

Description

With this command you specify that the firewall rule will not be created automatically for the VPN connection.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call the command without parameter assignment:

no auto-fwrules

Result

The firewall rule is not created automatically for the VPN connection. You need to create the firewall rule manually.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You enable the setting with the auto-fwrules command.

10.3.8.3 default-ciphers

Description

With this command, you specify that a preset list (default list) is transferred to the VPN connection partner during connection establishment. The list contains a combination of the three algorithms (Encryption, Authentication, Key Derivation).

To establish a VPN connection, the VPN connection partner must support at least one of these combinations. The combinations depend on the phase und the key exchange method IKE).

Combination		Phase 1		Phase 2		
Encryption	Authentica- tion	Key Derivation	IKEv1	IKEv2	IKEv1	IKEv2
AES128	SHA1	DH Group 14	х	х	х	х
AES256	SHA512	DH Group 16	x	x	x	x

Combination		Phase 1		Phase 2		
Encryption	Authentica- tion	Key Derivation	IKEv1	IKEv2	IKEv1	IKEv2
AES128 CCM 16	SHA256	DH Group 14	-	x	x	х
AES256 CCM 16	SHA512	DH Group 16	-	x	x	х
AES128	SHA1	none	-	-	x	х
AES256	SHA512	none	-	-	x	х
AES128 CCM 16	SHA256	none	-	-	x	х
AES256 CCM 16	SHA512	none	_	-	x	x

x: is supported

-: is not supported

none: For phase 2, no separate keys are exchanged. This means that Perfect Forward Secrecy PFS) is disabled.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phsX)#

X: 1 (Phase 1)

2 (Phase 2)

Syntax

Call the command without parameter assignment:

default-ciphers

Result

The default list is used.

Further notes

You display this setting and other information with the show ipsec conn-phasex command. You disable the use of the default list with the no default-ciphers command.

10.3.8.4 no default-ciphers

Description

With this command, you disable the use of the default list.

Requirement You are in the IPSEC PHASE configuration mode. The command prompt is as follows: cli(config-conn-phsX)# X: 1 (Phase 1) 2 (Phase 2) **Syntax** Call the command without parameter assignment: no default-ciphers Result The use of the default list is disabled. The fixed values are used for the phase. Further notes You configure the fixed values for phase 1 with the commands *ike-encryption*, *ike-auth* and ike-keyderivation. You configure the fixed values for phase 2 with the commands esp-encryption, esp-auth and esp-keyderivation. You display this setting and other information with the show ipsec conn-phasel or show ipsec conn-phase2 command. You enable the use of the default list with the default-ciphers command. 10.3.8.5 esp-auth Description With this command, you configure the method for calculating the checksum. Requirement The default list is not used. You are in the IPSEC PHASE configuration mode. The command prompt is as follows: cli(config-conn-phs2)# Syntax

Call up the command with the following parameters:

esp-auth md5|sha1|sha512|sha256|sha384}

The parameters have the following meaning:

Parameter	Description	Range of values / note
md5	Message Digest Algorithm 5	-
shal	Secure Hash Algortihm 1 with 160 bit hash length	-
sha512	Secure Hash Algorithm 2 with 512 bit hash length	-
sha256	Secure Hash Algorithm 2 with 256 bit hash length	-
sha384	Secure Hash Algorithm 2 with 384 bit hash length	-

Result

The method for configuring the checksum is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You disable the use of the default list with the no default-ciphers command.

10.3.8.6 esp-encryption

Description

With this command, you configure the encryption algorithm.

Requirement

- The default list is not used.
- You are in the IPSEC PHASE configuration mode. The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

esp-encryption {3des|aes128cbc|aes192cbc|aes256cbc|aes128ctr|aes192ctr|aes256ctr| aes128ccm16|aes192ccm16|aes256ccm16|aes128gcm16|aes192gcm16|aes256gcm16}

The parameters have the following meaning:

Parameter	Description		se 2
		IKEv1	IKEv2
3des	Triple Data Encryption Standard	х	x
aes128cbc	Advanced Encryption Standard with 128 bits	х	x
aes192cbc	Advanced Encryption Standard with 192 bits	х	x
aes256cbc	Advanced Encryption Standard with 256 bits	х	x
aes128ctr	Advanced Encryption Standard with 128 bits in Counter mode	х	x
aes192ctr	Advanced Encryption Standard with 192 bits in Counter mode	х	x
aes256ctr	Advanced Encryption Standard with 256 bits in Counter mode	х	x
aes128ccm16	Advanced Encryption Standard with 128 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	х	x
aes192ccm16	Advanced Encryption Standard with 192 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	х	х
aes256ccm16	Advanced Encryption Standard with 256 bits in Counter mode using a 16 byte Integrity Check Value (ICV)	х	x
aes128gcm16	Advanced Encryption Standard with 128 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)	х	х
aes192gcm16	Advanced Encryption Standard with 192 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)	х	x
aes256gcm16	Advanced Encryption Standard with 256 bits in Galois Coun- ter mode using a 16 byte Integrity Check Value (ICV)	х	x

x: is supported

-: is not supported

Result

The encryption algorithm is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You disable the use of the default list with the no default-ciphers command.

10.3.8.7 esp-keyderivation

Description

With this command, you configure the required Diffie-Hellmann group (DH) from which a key will be generated.

Requirement

- The default list is not used.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

esp-keyderivation {none|dhgroup <1|2|5|14|15|16|17|18>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
none	No keys are exchanged and Perfect Forward Secrecy (PFS) is disabled	-
dhgroup	Diffie-Hellmann group (DH)	Specify the required Diffie-Hellmann group (DH).
		• 1
		• 2
		• 5
		• 14
		• 15
		• 16
		• 17
		• 18

Result

The Diffie-Hellmann group (DH) is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command.

You disable the use of the default list with the ${\tt no}$ default-ciphers command.

10.3.8.8 lifetime

Description

With this command, you configure a period to specify the lifetime of the agreed keys. When the time expires, the key is renegotiated.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

lifetime <min(10-16666666)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
min	Period	Specify the period of time in minutes.

Result

The period of time is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command.

10.3.8.9	lifebyte
----------	----------

Description

With this command, you configure the data limit to specify the lifetime of the agreed keys. When the data limit is reached, the key is renegotiated.

Requirement

You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

lifebyte <integer(0-4294967295)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
integer	Data limit	Enter the data limit in bytes.

Result

The data limit is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command.

10.3.8.10 proto

Description

With this command, you specify the protocol for which the VPN connection is valid.

Requirement

- The VPN connection region is assigned a VPN remote station.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

proto {all|<integer(0-255)>}

The parameter has the following meaning:

Parameter	Description	Range of values / note
all	Applies to all protocols.	-
integer	Protocol number	Enter the number for the required protocol.
		You will find list of the protocol numbers on the Internet pages of
		iana.org.

Result

The protocol is configured.

Security and authentication

10.3 IPsec VPN

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You assign a VPN remote station to the VPN connection with the rmend name command.

10.3.8.11 port

Description

With this command, you specify the port via which the VPN tunnel communicates.

Requirement

- The VPN connection region is assigned a VPN remote station.
- You are in the IPSEC PHASE configuration mode.

The command prompt is as follows:

cli(config-conn-phs2)#

Syntax

Call up the command with the following parameters:

port {all|range <number(0-65535)-number(0-65535)>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
all	Applies to all ports.	-
range	Keyword for port range	
number	Port range	Specify the start port.
		0 65535
number		Specify the end port.
		0 65535

Result

The port or port range is configured.

Further notes

You display this setting and other information with the show ipsec conn-phase2 command. You assign a VPN remote station to the VPN connection with the rmend name command.

10.4 Certificates

This section describes commands relevant for certificates.

10.4.1 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the $\tt end$ or $\tt exit$ command and are then in the Privileged EXEC mode again.

10.4.1.1 certificate

Description

With this command, you change to the CERT configuration mode.

Requirement

You are now in the Global configuration mode. The command prompt is as follows:

Syntax

Call the command without parameters:

Result

You are now in the CERT configuration mode. The command prompt is as follows: cli(config-cert)#

Further notes

You exit the CERT configuration mode with the end command.

10.4 Certificates

10.4.2 Commands in the CERT configuration mode

This section describes commands that you can call up in the CERT configuration mode.

In the Global configuration mode, enter the certificate command to change to this mode.

- If you exit the CERT configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the CERT configuration mode with the end command, you return to the Privileged EXEC mode.

10.4.2.1 The "show" commands

This section describes commands with which you display various settings.

show-idx

Description

The command lists the loaded certificates and their indexes.

Requirement

- Certificates are loaded.
- You are in the CERT configuration mode. The command prompt is as follows:

cli(config-cert)#

Syntax

Call the command without parameter assignment:

show-idx

Result

The list is displayed.

show-info

Description

This command shows information on the relevant certificate. e.g. the serial number.
Requirement

- You are in the CERT configuration mode.
 - The command prompt is as follows:

cli(config-cert)#

Syntax

Call up the command with the following parameters:

show-info idx <integer(1-100)>}

The parameter has the following meaning:

Parameter	Description	Range of values / note
idx	Number corresponding to a specific certificate.	Enter the required number.
		1 100

Result

The information on the certificate is displayed.

Further notes

You display the indexes of the certificate with the ${\tt show}$ idx command.

10.4.2.2 del

Description

With this command, you delete a specific certificate or all certificates.

Requirement

- Certificates are loaded and are not being used anywhere.
- You are in the CERT configuration mode.

The command prompt is as follows:

cli(config-cert)#

Syntax

Call up the command with the following parameters:

del { <idx(1-100)> | all }

10.4 Certificates

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Number corresponding to a specific certificate.	Enter the required number.
		1 100
all	Deletes all certificates.	

Result

The relevant certificate is deleted.

Further notes

You load certificates with the tftp load command. You show the available certificates with the show-idx command. You display the use of the certificate with the show-info command.

10.4.2.3 passphrase

Description

With this command, you specify the password for the relevant certificate.

Requirement

• You are in the CERT configuration mode. The command prompt is as follows:

cli(config-cert)#

Syntax

Call up the command with the following parameters:

passphrase <idx(1-100)> <key>

The parameters have the following meaning:

Parameter	Description	Range of values / note
idx	Number corresponding to a specific certificate.	Enter the required number.
		1 100
key	Value for the key	Specify a valid key.

Result

The password for the certificate is specified.

Further notes

You show the password-protected certificates with the command ${\tt passphrase}$ ${\tt show-idx}$.

10.4.2.4 passphrase show-idx

Description

The command lists the certificates that are password protected.

Requirement

- Certificates are loaded.
- You are in the CERT configuration mode. The command prompt is as follows:

cli(config-cert)#

Syntax

Result

Call the command without parameter assignment:
passphrase show-idx
The list is displayed.

Further notes

You configure the password with the passphrase command.

10.5 OpenVPN

This section describes commands relevant for OpenVPN client.

10.5.1	The "show" commands
	This section describes commands with which you display various settings.
10.5.1.1	show openvpn authentication
Description	
	This command shows the security settings of the OpenVPN connections.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show openvpn authentication
Result	
	The settings are displayed.
10.5.1.2	show openvpn connections
Description	
	This command shows the configuration of the OpenVPN connections.
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#

Syntax	
	Call the command without parameter assignment:
	show openvpn connections
Result	
	The configurations are displayed.
10.5.1.3	show openvpn remoteend
Decerintien	
Description	This command shows the configuration of the remate stations ()(DN and point)
	This command shows the configuration of the remote stations (VPN end point).
Requirement	
	You are in the Privileged EXEC mode.
	The command prompt is as follows:
	cli#
Syntax	
	Call the command without parameter assignment:
	show openvpn remoteend
_ <i>v</i>	
Result	
	The configurations are displayed.
10.5.2	Commands in the global configuration mode
	This section describes commands that you can call up in the Global configuration mode.
	In Privileged EXEC mode, enter the configure terminal command to change to this mode.
	Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.
	You exit the Global configuration mode with the end or exit command and are then in the Privileged EXEC mode again.

10.5.2.1 openvpn

Description

With this command, you change to the OPENVPN configuration mode.

Requirement

You are in the Global configuration mode. The command prompt is as follows:

Syntax

Call the command without parameter assignment:

Result

You are now in the OPENVPN configuration mode.

The command prompt is as follows:

cli(config-openvpn)#

Further notes

You exit the OPENVPN configuration mode with the command end or exit.

10.5.3 OPENVPN configuration mode

This section describes commands that you can call up in the OPENVPN configuration mode.

In the Global configuration mode, enter the <code>ipsec</code> command to change to this mode.

- If you exit the OPENVPNconfiguration mode with the exit command, you return to the global configuration mode.
- If you exit the OPENVPN configuration mode with the end command, you return to the Privileged EXEC mode.

10.5.3.1 connection name

Description

With this command, you change to the OPENVPN CONNECTION configuration mode. If a suitable OpenVPN connection does not exist, an Open VPN connection is first created.

Requirement

You are in the OPENVPN configuration mode.

The command prompt is as follows:

cli(config-openvpn)#

Syntax

Call up the command with the following parameters:

connection name <name(128)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the OPENVPN connection	Enter the name for the OPENVPN connection. Maximum of 128 characters

Result

You are now in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-ov-conn-X)#

Further notes

You exit the OPENVPN CONNECTION configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

You delete all OpenVPN connections with the no conn name command.

You show the configuration of the OpenVPN connection with the ${\tt show}$ ${\tt openvpn}$ connctions command.

10.5.3.2 no conn name

Description

With this command, you delete a specific OpenVPN connection.

Requirement

- The corresponding OpenVPN connection has been created and is not being used anywhere.
- You are in the OPENVPN configuration mode.

The command prompt is as follows:

cli(config-openvpn)#

Syntax

Call up the command with the following parameters:

no conn {name <name(128)> | all}

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Deletes a certain OpenVPN connection	Enter the name of the OpenVPN connection.
all	Deletes all OpenVPN connections	-

Result

The corresponding OpenVPN connection is deleted.

Further notes

You create the OpenVPN connection with the connection name command.

10.5.3.3 no connection all

Description

With this command, you delete all OpenVPN connections.

Requirement

- The OpenVPN connections have been created and are not being used anywhere.
- You are in the OPENVPN configuration mode.

The command prompt is as follows:

cli(config-openvpn)#

Syntax

Call the command without parameter assignment:

no connection all

Result

All OpenVPN connections are deleted.

Further notes

You create the OpenVPN connection with the connection name command.

10.5.3.4 remote name

Description

With this command, you change to the OPENVPN REMOTE END configuration mode. In this mode, you configure the other settings.

If the matching OpenVPN partner station does not exist, the OpenVPN partner station is first created.

Requirement

You are in the OPENVPN configuration mode.

The command prompt is as follows:

cli(config-openvpn)#

Syntax

Call up the command with the following parameters:

remote name <name(128)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the OpenVPN partner station	Enter the name for the OpenVPN partner station.

Result

You are now in the OPENVPN REMOTE END configuration mode.

The command prompt is as follows:

cli(config-openvpn-rm-X)#

X is a placeholder for the name

Further notes

You exit the OpenVPN REMOTE END configuration mode with the end or exit command. You delete all VPN partner stations with the no remote command.

10.5.3.5 no remote name

Description

With this command, you delete a specific OpenVPN partner station.

Requirement

- The corresponding OpenVPN partner station has been created and is not being used anywhere.
- You are in the OPENVPN configuration mode.

The command prompt is as follows:

```
cli(config-openvpn)#
```

Syntax

Call up the command with the following parameters:

remote name <name(128)>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Name of the OpenVPN partner station	Enter the name of the OpenVPN partner station.

Result

The corresponding OpenVPN partner station is deleted.

Further notes

You create an OpenVPN partner station with the remote name command.

10.5.3.6 no remote all

Description

With this command, you delete all OpenVPN partner stations.

Requirement

- The OpenVPN partner stations have been created and are not being used anywhere.
- You are in the OPENVPN configuration mode.
- The command prompt is as follows:

cli(config-openvpn)#

Syntax

Call the command without parameter assignment:

no remote-end all

Result	All OpenVPN partner stations are deleted.		
Further notes	You create an OpenVPN partner station with the remote name command.		
10.5.3.7	shutdown		
Description	With this command, you disable OpenVPN.		
Requirement	You are in the OPENVPN configuration mode. The command prompt is as follows: cli(config-openvpn)#		
Syntax	Call the command without parameter assignment:		
Result	OpenVPN is disabled		
Further notes	You enable the OpenVPN with the no shutdown command.		
10.5.3.8	no shutdown		
Description	With this command, you enable OpenVPN.		
Requirement	You are in the OPENVPN configuration mode. The command prompt is as follows: cli(config-openvpn)#		

Syntax

Call the command without parameter assignment:

no shutdown

Result

OpenVPN is enabled

Further notes

You disable OpenVPN with the shutdown command.

10.5.4 Commands in the OPENVPN REMOTE END configuration mode

This section describes commands that you can call up in the OPENVPN REMOTE END configuration mode.

In the OPENVPN configuration mode, enter the remote end name command to change to this mode.

- If you exit the OPENVPN REMOTE END configuration mode with the exit command, you return to the OPENVPN configuration mode.
- If you exit the OPENVPN REMOTE END configuration mode with the end command, you return to the Privileged EXEC mode.

10.5.4.1 connection

Description

With this command, you specify the OpenVPN connection for the OpenVPN partner station.

Requirement

You are in the OPENVPN REMOTE END configuration mode.

The command prompt is as follows:

cli(config-openvpn-rm-X)#

Syntax

Call up the command with the following parameters:

```
connection <string(128)> conn <name(128)>
```

The parameters have the following meaning:

	Parameter	Description	Range of values / note		
	name	Name of the OpenVPN connection	Enter a valid name.		
			Maximum of 128 characters		
Result					
	The OpenVPN conn	ection has been changed.			
Further notes					
	You display this sett	ing and other information with the show o	openvpn remoteend command .		
10.5.4.2 port					
p-					
Description					
Description	With this command	you coacify the part via which the VPN	unnal communicator		
	With this command, you specify the port via which the VPN tunnel communicates.				
Deminent					
Requirement	Requirement				
	You are in the OPENVPN REMOTE END configuration mode.				
	The command prompt is as follows:				
	cli(config-openvpn-rm-X)#				
Syntax					
	Call up the comman	d with the following parameters:			
	port <1-65535>				
	The parameter has the following meaning:				
	Parameter	Description Port number	Range of values / note		
	-	Forthumber	1 65535		
Result					
	The port is specified				
Further notes					

You display this setting and other information with the show openvpn remoteend command.

10.5.4.3 proxy

Description

With this command you specify whether the OpenVPN tunnel to the defined OpenVPN partner is established via a proxy server.

Requirement

- The proxy server is configured.
- You are in the OPENVPN REMOTE END configuration mode. The command prompt is as follows:

cli(config-openvpn-rm-X)#

Syntax

Call up the command with the following parameters:

proxy <name>

The parameter has the following meaning:

Parameter	Description	Range of values / note
name	Proxy server name	Specify the proxy server name.
		Max. 128 characters

Result

The proxy server via which the connection is established is configured.

Further notes

You display this setting and other information with the show openvpn remoteend command.

10.5.4.4 remote-addr

Description

With this command you configure the WAN IP address or the DNS host name of the OpenVPN partner.

Requirement

You are in the OPENVPN REMOTE END configuration mode.

The command prompt is as follows:

cli(config-openvpn-rm-X)#

Syntax

Call up the command with the following parameters:

remote-addr <ip_addr|dns>

The parameters have the following meaning:

Parameter	Description	Range of values / note
ip_addr	WAN IP address	Specify a valid IP address.
dns	DNS host name	Specify the DNS host name.

Result

The address is configured.

Further notes

You display this setting and other information with the show openvpn remoteend command.

10.5.4.5 show-context

Description

This command shows the available OpenVPN partner stations.

Requirement

You are in the OPENVPN REMOTE END configuration mode. The command prompt is as follows: cli(config-openvpn-rm-X)#

Syntax

Call the command without parameter assignment:

show context

Result

The names of the OpenVPN partner stations are listed.

10.5.5 Commands in the OPENVPN CONNECTION configuration mode

This section describes commands that you can call up in the OPENVPN CONNECTION configuration mode.

In the OPENVPN configuration mode, enter the $\tt connection name$ command to change to this mode.

- If you exit the OPENVPN CONNECTION configuration mode with the exit command, you return to the OPENVPN configuration mode.
- If you exit the OPENVPN CONNECTION configuration mode with the end command, you return to the Privileged EXEC mode.

10.5.5.1 auth-algo

Description

With this command you specify the method for calculating the checksum.

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-openvpn-conn-X)#

Syntax

Call up the command with the following parameters:

auth-algo {sha1|sha256|sha384|sha224|sha512|md5}

The parameters have the following meaning:

Parameter	Description	Range of values / note
shal	Secure Hash Algorithm 1	-
sha256	Secure Hash Algorithm 256	-
sha384	Secure Hash Algorithm 384	-
sha224	Secure Hash Algorithm 224	-
sha512	Secure Hash Algorithm 512	-
md5	Message Digit Algorithm 5	-

Result

The method is specified.

Further notes

You display this setting and other information with the show openvpn connections command.

You display the available OpenVPN connections with the show auth-names command.

10.5.5.2 authentication

Description

With this command, you change to the OPENVPN AUTHENTICATION configuration mode.

Requirement

You are in the OPENVPN CONNECTION configuration mode. The command prompt is as follows: cli(config-openvpn-conn-X)#

Syntax

Call the command without parameter assignment:

Result

You are now in the OPENVPN AUTHENTICATION configuration mode.

The command prompt is as follows:

cli((config-openvpn-conn-auth)#

Further notes

You exit the OPENVPN AUTHENTICATION configuration mode with the ${\tt end}$ or ${\tt exit}$ command.

10.5.5.3 autoFW

Description

With this command, you configure the setting for the firewall of the OpenVPN connection .

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-openvpn-conn-X)#

Syntax

Call up the command with the following parameters:

autoFW {enabled|disabled}

The parameters have the following meaning:

Parameter	Description	Range of values / note
enabled	The firewall rules are created automatical- ly for the OpenVPN connection.	-
disabled	You will need to create the suitable fire- wall rules yourself.	-

Result

The setting is configured.

Further notes

You display this setting and other information with the show openvpn connections command. You display the available OpenVPN connections with the show auth-names command.

10.5.5.4 encryp-algo

Description

With this command, you configure the encryption algorithm of the OpenVPN connection.

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-openvpn-conn-X)#

Syntax

Call up the command with the following parameters:

encryp-algo {desed3|aes128cbc|aes192cbc|aes256cbc|bfcbc}

The parameters have the following meaning:

Parameter	Description	
desede3	DES-EDE3: Data Encryption Standard 192 bit key length	
aes128cbc	Advanced Encryption Standard with 128 bits	
aes192cbc	Advanced Encryption Standard with 192 bits	

	Deremeter	Description		
	aes256cbc		d with 256 bits	
	bfcbc	Advanced Encryption Standard	a with 200 dits	
		DIOWIIST		
Result				
	The setting is config	ured.		
Further notes				
	You display this sett	ing and other information with the above	anonymp, connections command	
			openvpn connections command.	
	You display the avai	lable OpenVPN connections with the sh	now auth-names COMMAND .	
10.5.5.5 N/	۹T			
Description				
•	With this command	you configure the "IP masquerading" se	atting	
	With this command,	you configure the fir masqueraaling st	sung.	
Requirement				
	You are in the OPENVPN CONNECTION configuration mode.			
	The command prompt is as follows:			
	cli(config-openvpn-conn-X)#			
Syntax				
Oymax		el contrato de la California de composición de la constante de la constante de la constante de la constante de		
	Call up the comman	d with the following parameters:		
	NAT {enabled disabl	Led}		
	The parameters hav	e the following meaning:		
	Parameter	Description	Range of values / note	
	enabled	Enables the "IP masquerading" setting	-	
	disabled	Disables the "IP masguerading" setting	-	
Desult				
Result				
	The setting is configured.			
Further notes				
	You display this sett	ing and other information with the show	openvpn connections command.	

You display the available OpenVPN connections with the show auth-names command.

10.5.5.6 operation

Description

With this command you specify how the connection is established.

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-openvpn-conn-X)#

Syntax

Call up the command with the following parameters:

operation {disabled|start|start-di|start-sms}

The parameters have the following meaning:

Parameter	Description	Range of values / note
disabled	The VPN connection is disabled.	Default
start	The device attempts to establish a VPN connection to the partner.	-
start-di	If the event "Digital In" occurs the device attempts to establish a VPN connection to the partner.	-
	This is on condition that the event "Digital In" is passed on to the VPN connection.	
start-sms	M874, M876 only	-
	When the device receives a command SMS, the device waits until the connection establishment is initiated by the partner.	
	This assumes that the device accepts a command SMS of the class "System" from certain senders.	

Result

The setting is configured.

Further notes

You display this setting and other information with the show openvpn connections command. You display the available OpenVPN connections with the show auth-names command.

10.5.5.7 useLZO

Description

With this command, you configure the LZO setting of the OpenVPN connection .

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

cli(config-openvpn-conn-X)#

Syntax

Call up the command with the following parameters:

useLZO {enabled|disabled}

The parameters have the following meaning:

Parameter	Description	Range of values / note
enabled	Compresses the data with the LZO algo- rithm.	-
disabled	The data is not compressed.	-

Result

The setting is configured.

Further notes

You display this setting and other information with the show openvpn connections command. You display the available OpenVPN connections with the show auth-names command.

10.5.5.8 show auth-names

Description

This command displays which method is used to calculate the checksum of which OpenVPN connection.

Requirement

You are in the OPENVPN CONNECTION configuration mode.

The command prompt is as follows:

Security and authentication		
10.5 OpenVPN		
	cli(config-openvpn-conn-X)#	
Svntax		
	Call the command without parameter assignment:	
	show auth-names	
Result		
	The use is listed.	
Eurthor notos		
	You create an OpenVPN connection with the connection name command	
10.5.5.9	show context	
Description		
	This command shows the available OpenVPN connections.	
Pequirement		
Requirement	You are in the OPENVPN CONNECTION configuration mode.	
	The command prompt is as follows:	
	cli(config-openvpn-conn-X)#	
Syntax		
	Call the command without parameter assignment:	
	show context	
Result		
	The names of the OpenVPN connections are listed.	
Further notes		
	You create an OpenVPN connection with the connection name command.	

10.5.6 Commands in the OPENVPN AUTHENTICATION configuration mode

This section describes commands that you can call up in the OPENVPN AUTHENTICATION configuration mode.

In the OPENVPN CONNECTION configuration mode, enter the ${\tt authentication}$ command to change to this mode.

- If you exit the OPENVPN AUTHENTICATION configuration mode with the exit command, you return to the OPENVPN CONNECTION configuration mode.
- If you exit the OPENVPN AUTHENTICATION configuration mode with the end command, you return to the Privileged EXEC mode.

10.5.6.1 auth

Description

With this command you specify that a certificate will be used for authentication.

Requirement

- The relevant certificate is loaded.
- You are in the OPENVPN AUTHENTICATION configuration mode.

The command prompt is as follows:

cli((config-openvpn-conn-auth)#

Syntax

Call up the command with the following parameters:

auth {cacert|macert} <name(255)>

The parameters have the following meaning:

Parameter	Description	Range of values / note
cacert	CA certificate	-
macert	Machine certificate	-
name	Name of the CA or machine certificate	Specify the certificate name.

Result

The certificate is specified.

Further notes

You display this setting and other information with the ${\tt show}$ ${\tt openvpn}$ authentication command.

Security and authentication			
10.5 OpenVPN			
	You delete the authentication with the no auth command.		
10.5.6.2	no auth		
Description			
	With this command, you delete the authentication method.		
Requirement			
	You are in the OPENVPN AUTHENTICATION configuration mode.		
	The command prompt is as follows:		
	cli((config-openvpn-conn-auth)#		
Syntax			
	Call the command without parameter assignment:		
	no auth		
Result			
	The authentication method is deleted.		
10.5.6.3	auth user		
Description	With this command, you configure the user data of the Open//PN connection		
	with this command, you compute the user data of the Openvir N connection.		
Requirement			
	You are in the OPENVPN AUTHENTICATION configuration mode.		
	The command prompt is as follows:		
	cli((config-openvpn-conn-auth)#		
Syntax			
Jinax	Call up the command with the following parameters:		
	auth user <string(255)> pw <string(255)></string(255)></string(255)>		

The parameters have the following meaning:

Parameter	Description	Range of values / note
string	User names	Specify the user name.
		Maximum of 255 characters
рw	Keyword for the password	-
string	Password	Enter the password.
		Maximum of 255 characters

Result

The user data is configured.

Further notes

You display this setting and other information with the ${\tt show}$ ${\tt openvpn}$ authentication command.

You delete the authentication with the no auth command.

Security and authentication

10.5 OpenVPN

Diagnostics

The monitoring of the system and error diagnostics are handled in different ways:

- Event and fault handling: Predefined events generate a message. These messages can be distributed in different ways:
 - Entry in local logs
 - Transfer to the Syslog server
 - Sending as SNMP trap
 - Lighting up of the error LED
 - Switching at the digital output
- Syslog client: Configures the transfer to the Syslog server

11.1 Event and fault handling

11.1 Event and fault handling

In events and faults handling, you set the events whose messages will be distributed in one of the available ways.

You configure the monitoring of certain system events and power supply and physical interfaces in the Events configuration mode.

11.1.1 The "show" commands

This section describes commands with which you display various settings.

11.1.1.1 show events config

Description

This command shows the current configuration for forwarding the messages of the various event types.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show events config

Result

The current configuration of the events display is displayed.

11.1.1.2 show events severity

Description

This command shows the degree of severity of an event ("Info", "Warning" or "Critical") starting at which a notification (sending of an e-mail, entry in the Syslog table, entry in the Syslog file) is generated.

Requirement			
	You are in the User EX	EC mode or in the Privileged EXEC mode.	
	The command prompt is as follows:		
	cli> Or cli#		
Syntax			
	Call the command with	out parameters:	
	show events severity		
Result	"		
	The corresponding deg	ree of severity is shown for each type of notification.	
Fthe are reaction			
Further notes	Veu configuro the coois	remark of the degree of equarity of an event and the type of	
	notification with the seve	erity command.	
11.1.1.3 st	now events faults confi	g	
Description			
	This command shows the current configuration of the following error monitoring functions:		
	 Monitoring of the power supply for power outage 		
	 Monitoring of the network connections for a change in the connection status 		
Requirement			
	You are in the User EXEC mode or in the Privileged EXEC mode.		
	The command prompt is as follows:		
	cli> Of cli#		
Syntax			
	Call up the command with the following parameters:		
	show events faults config [{power link}]		
	The parameters have the following meaning:		
	Parameter	Description	
	power	Monitoring of the power supply for power outage	

link

Monitoring of the network connections for a change in the connection status

11.1 Event and fault handling

	If no parameters are specified, the settings for both error monitoring functions are displayed.
Result	
	The current configuration of the selected error monitoring function is displayed.
11.1.1.4	show events faults status
Description	
Description	This command shows the status messages of fault monitoring of the power supply and network connections.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Suntax	
Syntax	Call the command without peremeters:
	Show events faults status
Result	
	A table with the status messages of the error monitoring functions is displayed.
11.1.1.5	show fault counter
Description	
Description	This command shows the number of errors since the last startup.
Requirement	
	You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows:
	cli> Or cli#
Syntax	
Jynax	Call the command without parameters:

	show fault cou	unter		
Result	The number of	faults is displayed.		
Further notes	You reset the c	counter for the errors with the clear f	ault counter command.	
11.1.1.6	show fwlog			
Description	With this comm be filtered acco	nand, you show the messages that oc ording to the event severity.	curred in the firewall. The messages can	
Requirement				
	You are in the	You are in the User EXEC mode or in the Privileged EXEC mode.		
	The command	The command prompt is as follows:		
	cli> Or cli#	cli> Or cli#		
Syntax	Call up the con	nmand with the following parameters:		
Parameter	The parameter	s have the following meaning:		
	me parameter	The parameters have the following meaning:		
	Parameter	Description	Range of values / note	
	info	Information	-	
	warning	Warnings	-	
	critical	Critical messages	-	
	If you use the o	If you use the command without setting parameters, all messages are displayed.		

Result

The content of the firewall log is displayed.

Diagnostics

11.1 Event and fault handling

11.1.1.7 show logbook

Description

With this command, you display the content of the logbook. The log entries are categorized differently.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.

The command prompt is as follows:

cli> **Or** cli#

Syntax

Call the command without parameters:

show logbook

or

Call up the command with the following parameters:

show logbook { info | warning | critical }

The parameters have the following meaning:

Parameter	Description
info	All log entries of the categories "Information", "Warning" and "Critical" are displayed.
warning	All log entries of the categories "Warning" and "Critical" are displayed.
critical	All log entries of the category "Critical" are displayed.

Result

The content of the logbook is displayed.

11.1.1.8 show power-line-state

Description

This command shows the status of the power supply.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows:

Syntax				
	Call the command without parameters:			
	show power-lin	ne-state		
Result				
	The status of t	he power supply is displayed.		
11.1.1.9	show seclog			
Description				
	With this comn secure VPN tu	nand, you show the messages that occur nnel. The messages can be filtered acco	rred during communication via a ording to the event severity.	
Requirement				
	You are in the User EXEC mode or in the Privileged EXEC mode.			
	The command	The command prompt is as follows:		
	cli> Or cli#			
Syntax				
	Call up the cor	nmand with the following parameters:		
	show seclog [{ info warning critical }]		
Parameter				
	The parameter	s have the following meaning:		
	Parameter	Description	Range of values / note	
	info	Information	-	
	warning	Warnings	-	
	critical	Critical messages	-	

If you use the command without setting parameters, all messages are displayed.

Result

The content of the security log is displayed.

Diagnostics

11.1 Event and fault handling

11.1.2 clear fault counter

Description

With this command you reset the counter that shows the number of faults since the last startup.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

Syntax

Call the command without parameters:

clear fault counter

Result

The counter is set to "0".

Further notes

You shows the number of faults since the last startup with the show fault counter command.

11.1.3 clear fwlog

Description

With this command, you delete the content of the firewall log.

Requirement

You are in the Privileged EXEC mode. The command prompt is as follows:

cli#

Syntax

Call the command without parameters:

clear fwlog

Result	The content of the firewall log is deleted.	
11.1.4	clear logbook	
Description	With this command, you delete the content of the logbook.	
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:	
Syntax	Call the command without parameters:	
Result	The content of the logbook is deleted.	
11.1.5	clear seclog	
Description	With this command, you delete the content of the security log.	
Requirement	You are in the Privileged EXEC mode. The command prompt is as follows:	
Syntax	Call the command without parameters:	
	clear seclog	

Diagnostics

11.1 Event and fault handling

Result

The content of the security log is deleted.

11.1.6 fault report ack

Description

With this command, you acknowledge (delete) the messages of the "Cold/Warm start" event.

Requirement

You are in the Privileged EXEC mode.

The command prompt is as follows:

cli#

Syntax

Call up the command with the following parameter:

fault report ack <fault-state-id>

The parameter has the following meaning:

Parameters	Description	Range of values/note
fault-state-id	ID of the mes-	Enter the ID of the message for the "Cold/Warm Start"
	sage	event.
		To obtain the ID, use the "show events faults status"
		command.

Result

The message is acknowledged.

11.1.7 no logging console

Description

With this command, you disable the logging of inputs and outputs to the console.

Requirement

You are in the User EXEC mode or in the Privileged EXEC mode.
	The command prompt is as follows: cli> or cli#
Syntax	Call the command without parameters:
Result	The logging function is disabled on the console.
Further notes	You enable the setting with the logging console command. As default the function is "disabled".
11.1.8 k	ogging console
Description	With this command, you enable the logging of inputs and outputs to the console.
Requirement	You are in the User EXEC mode or in the Privileged EXEC mode. The command prompt is as follows: cli> or cli#
Syntax	Call the command without parameters:
Result	The logging function is enabled on the console.
Further notes	You disable the setting with the no logging console command. As default the function is "disabled".

• •	
1 110 01	200ti00
INACH	1115111:5
Diagi	1000100

11.1.9 Commands in the global configuration mode

This section describes commands that you can call up in the Global configuration mode.

In Privileged EXEC mode, enter the configure terminal command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

You exit the Global configuration mode with the $\tt end$ or $\tt exit$ command and are then in the Privileged EXEC mode again.

11.1.9.1 events

Description

With this command, you change to the EVENTS configuration mode.

Requirement

You are in the Global configuration mode.

The command prompt is as follows:

cli(config)#

Syntax

Call the command without parameters:

events

Result

You are now in the EVENTS configuration mode. The command prompt is as follows:

cli(config-events)#

Further notes

You exit the EVENTS configuration mode with the command end or exit.

11.1.10 Commands in the Events configuration mode

This section describes commands that you can call up in the EVENTS configuration mode. In the Global configuration mode, enter the events command to change to this mode.

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

- If you exit the EVENTS configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the EVENTS configuration mode with the end command, you return to the Privileged EXEC mode.

11.1.10.1 add log

Description

With this command, you create an entry in the log.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call the command without parameters:

add log <log-entry>

The parameter has the following meaning:

Parameter	Description	Range of values / note
log-entry	Entry in the logbook	max. 150 characters

Result

The entry has been made in the logbook.

11.1.10.2 client config

Description

With this command, you enable one of the clients that processes or forwards the messages of the device.

The following clients are available:

- syslog: sends the messages to the Syslog server
- trap: sends the messages as SNMP trap to a configured recipient
- email: sends the messages as e-mail

11.1 Event and fault handling

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

client config {syslog|trap|email|all}

The parameters have the following meaning:

Parameter	Description
syslog	Enables the client that sends the messages to the Syslog server
trap	Enables the client that sends the SNMP traps
email	Enables the client that sends the e-mails
all	Enables all clients at once

Result

The function of the client selected for the transfer is enabled.

Further notes

You display the status of the events and the clients with the show events config command. You disable a client with the no client config command.

11.1.10.3 no client config

Description

With this command, you disable one of the clients that processes or forwards the messages of the device.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

no client config {syslog|trap|email|all}

The parameters have the following meaning:

Parameter	Description
syslog	Disables the client that sends the messages to the Syslog server
trap	Disables the client that sends the SNMP traps
email	Disables the client that sends the e-mails
all	Disables all clients at once

Result

The client selected for the transfer is disabled.

Further notes

You display the status of the events and the clients with the show events config command. You enable the function with the client config command.

11.1.10.4 event config

Description

With this command, you configure which of the various message types of the device will be stored or forwarded.

The following events or message types are available:

- Message if there is cold or warm restart
- Message when there is a status change on a physical interface
- Message if there is an incorrect login
- · Message when there is a status change in the power supply
- Message when there is a status change in the error monitoring
- Message when using VPN
- Message when using firewall rules
- Message when changing the connection status
- · Message on connection establishment and when the configuration changes
- Message when there is a status change of the digital input.

These messages can be processed by the clients in different ways:

- Entry in the logbook of the device
- Sending the message to the Syslog server of the system
- Sending an e-mail

- Sending an SNMP trap
- Lighting up of the error LED
- Switching at the digital output

Requirement

You are in the EVENTS configuration mode. The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

event config { cold-warmstart | linkchange | authentication-failure | faultstatechange | security-log | firewall-log | ddns-client-log | system-general-log | systemconnection-status | digital-in | vpn-tunnel | all} {logtable | syslog | email | trap | faults | sms | digital-out | vpn-tunnel | all}

The parameters have the following meaning:

Parameter	Description
cold-warmstart	Message if there is cold or warm restart
linkchange	Message when there is a status change on a physical interface
authentication-failure	Message if there is an incorrect login
faultstate-change	Message when there is a status change in the error monitoring
security-log	Message when using IPsec
firewall-log	Message when using a firewall rule
ddns-client-log	Message when synchronizing the DDNS client with the host name registered with the DDNS provider.
system-general-log	Message on connection establishment and when the configuration changes
system-connection-status	Message when there is a status change of the connection
digital-in	Message when the digital input changes.
vpn-tunnel	Message if VPN changes (IPsec, OpenVPN, SINEMA RC)
all	All messages
logtable	Client that processes the log entries
syslog	Client that sends the messages to the Syslog server
email	Client that sends the e-mails
trap	Client that sends the SNMP traps
faults	Error LED lights up. The setting is possible only for a cold or warm restart.
digital-out	Controls the digital output or signals the status change with the "DO" LED.
vpn-tunnel	Controls the VPN connection (establishment/termination).
all	All clients at once

Result

The setting deciding which message of the device is stored or forwarded is configured.

Further notes

You display the status of the events and the clients with the show events config command.

You delete the settings with the no event config command.

With this command, the clients are not enabled.

To enable the clients, use the client config command.

Note

Changing several message types or clients

With each command call, you can only select one message type and one client.

If you want to process several message types or clients, it may be more efficient to first select the all option and then disable individual elements.

11.1.10.5 no event config

Description

With this command, you configure which of the various message types of the device will no longer be stored or forwarded.

Requirement

You are in the EVENTS configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

no event config { cold-warmstart | linkchange | authentication-failure | faultstatechange | security-log | firewall-log | ddns-client-log | system-general-log | systemconnection-status | digital-in | vpn-tunnel | all} {logtable | syslog | email | trap | faults | sms | digital-out | vpn-tunnel | all}

The parameters have the following meaning:

Parameter	Description
cold-warmstart	Message if there is cold or warm restart
linkchange	Message when there is a status change on a physical interface

11.1 Event and fault handling

Parameter	Description
authentication-failure	Message if there is an incorrect login
faultstate-change	Message when there is a status change in the error monitoring
security-log	Message when using IPsec
firewall-log	Message when using a firewall rule
ddns-client-log	Message when synchronizing the DDNS client with the host name registered with the DDNS provider.
system-general-log	Message on connection establishment and when the configuration changes
system-connection-status	Message when there is a status change of the connection
digital-in	Message when the digital input changes.
vpn-tunnel	Message if VPN changes (IPsec, OpenVPN, SINEMA RC)
all	All messages
logtable	Client that processes the log entries
syslog	Client that sends the messages to the Syslog server
email	Client that sends the e-mails
trap	Client that sends the SNMP traps
faults	Error LED lights up. The setting is possible only for a cold or warm restart.
digital-out	Controls the digital output or signals the status change with the "DO" LED.
vpn-tunnel	Controls the VPN connection (establishment/termination).
all	All clients at once

Result

The setting deciding which messages of the device are not stored or forwarded is configured.

Further notes

You display the status of the events and the clients with the show events config command.

You configure which of the various message types of the device will be stored or forwarded with the $\tt event \ config$ command.

11.1.10.6 link

Description

With this command, you configure and enable the monitoring of the physical network connections for cable breaks or for pulling of the connector.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

link {up|down}

The parameters have the following meaning:

Parameters	Description	Range of values / note
up	Only the establishment of a connection is signaled	-
down	Only a break on a connection is signaled	-

Result

The settings for monitoring the physical network connections have been configured.

Further notes

You can display the current setting with the show events faults config command. You disable the function with the no link command.

11.1.10.7 no link

Description

With this command, you disable the monitoring of the physical network connections for cable breaks or for pulling of the connector.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli(config-events)#

Syntax

Call up the command with the following parameters:

no link {up|down}

11.1 Event and fault handling

The parameters have the following meaning:

Parameters	Description	Range of values / note
up	The message when establishing a connection is disabled	-
down	The message when a connection is down is disa- bled	-

Result

The settings for monitoring the physical network connections have been configured.

Further notes

You can display the current setting with the show events faults config command. You enable the function with the link command.

11.1.10.8 severity

Description

With this command, you configure the threshold values for the sending of system event notifications.

Requirement

You are in the EVENTS configuration mode.

The command prompt is as follows:

cli (config-events) #

Syntax

Call up the command with the following parameters:

severity {mail | log | syslog } {info | warning | critical }

The parameters have the following meaning:

Example

Parameter	Description	Range of values / note
mail	Specifies the threshold value for sending system event messages by e-mail.	-
log	Specifies the threshold value for entering system event messages in the log table.	Default
syslog	Specifies the threshold value for entering system event messages in the Syslog file.	-

Parameter	Description	Range of values / note
info	The messages of all levels are sent or logged.	The messages of all levels are sent or logged.
warning	The message of this level and the "critical" level are sent or logged.	-
critical	Only the messages of this level are sent or logged.	-

Result

The settings are configured. The severity function is enabled.

Further notes

You disable the setting with the no severity command. You display the status of this function and other information show events config

11.1.10.9 no severity

Description

With this command, you disable the setting for the threshold values for the sending of system event notifications.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli (config-events) #

Syntax

Call up the command with the following parameters:

no severity { mail | log | syslog }

The parameters have the following meaning:

Parameter	Description	Range of values / note
mail	The setting of the threshold value for sending system event messages by e-mail is disabled.	-
log	The setting of the threshold value for entering system event messages in the log table disabled.	-
syslog	The setting of the threshold value the entering event messages in the Syslog file is disabled.	-

If you do not select any parameters from the parameter list, the default value is used.

Result

The settings for sending system event messages are configured.

Further notes

You enable the setting with the severity command.

You display the status of this function and other information show events severity.

11.2	Syslog client		
	With the commands in this section, the following settings are configured:		
	 Transfer of the messages to the Syslog server 		
	 Local buffering and storage of messages 		
	 Receipt and forwarding of messages from other devices (relay mode) 		
11.2.1	The "show" commands		
	This section describes commands with which you display various settings.		
11.2.1.1	show events syslogserver		
Description			
	This command shows the entries of the configured Syslog server.		
Requirement			
	You are in the User EXEC mode or in the Privileged EXEC mode.		
	The command prompt is as follows:		
	cli> OF cli#		
Syntax			
	Call the command without parameters:		
	show events syslogserver		
Result			
	The entries of the configured Syslog server are displayed.		
11.2.2	Commands in the Events configuration mode		
	This section describes commands that you can call up in the EVENTS configuration mode.		
	In the Global configuration mode, enter the events command to change to this mode.		

11.2 Syslog client

Commands relating to other topics that can be called in the Global configuration mode can be found in the relevant sections.

- If you exit the EVENTS configuration mode with the exit command, you return to the Global configuration mode.
- If you exit the EVENTS configuration mode with the end command, you return to the Privileged EXEC mode.

11.2.2.1 syslogserver

Description

With this command, you configure the Syslog server address.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli (config-events) #

Syntax

Call up the command with the following parameters:

syslogserver {ipv4 <ucast addr> | fqdn-name <FQDN>} [<port(1-65535)>]

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IP address	-
ucast_addr	Syslog server IPv4 Address	Enter a valid IPv4 address.
fqdn-name	Keyword for a domain name	-
FQDN	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters
port	Serverport	1 65535
		Default: 514

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

If you do not select any parameters from the parameter list, the default value is used.

Result

The settings for the Syslog server are configured.

Further notes

You disable the setting with the no syslogserver command.

You can display the status of this function and other information with the show events config command.

11.2.2.2 no syslogserver

Description

With this command, you configure the Syslog server address.

Requirement

You are in the EVENTS Configuration mode.

The command prompt is as follows:

cli (config-events) #

Syntax

Call up the command with the following parameters:

syslogserver {ipv4 <ucast_addr> | fqdn-name <FQDN>}

The parameters have the following meaning:

Parameter	Description	Range of values / note
ipv4	Keyword for an IP address	-
ucast_addr	Syslog server IPv4 Address	Enter a valid IPv4 address.
fqdn-name	Keyword for a domain name	-
FQDN	Domain name (Fully Qualified Domain Name)	Maximum of 100 characters

For information on identifiers of addresses and interfaces, refer to the section "Interface identifiers and addresses (Page 34)".

Result

The settings for the Syslog server are disabled.

Further notes

You enable the setting with the syslogserver command.

You can display the status of this function and other information with the ${\tt show}\ {\tt events}\ {\tt config}\ {\tt command}.$

11.2 Syslog client

Index

Α

add log, 471 addr, 120, 391 Address of the gateway, 37 addr-mode, 392 aggressive, 410 no aggressive, 411 alias, 68 no alias. 68 auth. 455 no auth, 456 auth cacert, 404 no auth, 406 auth psk no auth, 406 auth psk, 405 auth remcert. 405 no auth, 406 auth user. 456 no auth, 456 auth-algo, 448 authentication, 397, 449 autoFW, 449 autofwnat. 121 no autofwnat. 122 auto-fwrules, 421 no auto-fwrules, 422 auto-save, 94 no auto-save, 95

В

base bridge mode, 151

С

cachenxdomain, 233 no cachenxdomain, 234 certificate, 431 change password, 327 clear counters, 55 clear fault counter, 466 clear fwlog, 466 clear history, 44 clear line vty, 56

clear logbook, 467 clear screen, 38 clear seclog, 467 CLI commands Symbolic representation, 33 cli-console-timeout, 64 no cli-console-timeout, 65 configure terminal, 56 connection, 444 connection name, 384, 438 no conn name, 439 no connection all. 385, 440 no connection name, 385 conn-mode, 393 coordinates height, 60 coordinates latitude, 61 coordinates longitude, 62 crl-policy, 386

D

dcp server, 193 no dcp server, 194 ddnsclient, 228 default-ciphers, 411, 422 no default-ciphers, 412, 423 del (Certificate), 433 delete. 82 device id, 122 device pw, 123 digital output close, 105 digital output open, 106 disable, 57 dnsclient. 227 dnsproxy, 228 do, 38 dpd, 413 no dpd, 414 dpd-period, 414 dpd-timeout, 415 duplex, 69 no duplex, 70

Ε

enable, 58 encryp-algo, 450 esp-auth, 424 esp-encryption, 425 esp-keyderivation, 426 event config, 473 no event config, 475 events, 470 exit, 39

F

factoryclean, 99 fault report ack, 468 firewall, 275, 336 firewallnat, 305 flowcontrol, 296 forced disconnect, 180 forced disconnect time, 181

G

Glossary, 4

Η

help, 40

I

icmp name no icmp, 339 icmp name set type, 340 icmp name type, 338 icmp show-names, 342 icmp show-types-codes, 342 idle timeout icmp, 343 idle timeout tcp, 344 idle timeout udp, 343 ike-auth, 416 ike-encryption, 417 ike-keyderivation, 418 ike-keytries, 419 ike-lifetime, 420 interface. 62 no interface, 63 interface ppp, 179 interface range, 152 no interface range, 153 interface vlan, 181 interval, 116

ip address, 170, 182, 183, 201, 202 no ip address, 184, 203 ip dhcp client mode, 208 ip dhcp config-file-request, 207 no ip dhcp config-file-request, 207 ip dhcp-server, 210 no ip dhcp-server, 211 ip dhcp-server icmp-probe, 212 no ip dhcp-server icmp-probe, 212 ip dhcp-server pool no ip dhcp-server pool, 214 ip dhcp-server pool, 213 ip echo-reply, 195 no ip echo-reply, 195 ip http. 270 no ip http, 270 ip route, 196, 197 no ip route, 198 ipsec, 383 ipsec connection show-idx, 307 IPv4 Notation, 36 IPv4 address. 36 ipv4rule, 345, 350 no ipv4rule, 347 ipv4rule ipsec connection, 356 ipv4rule set, 355 ipv4rule set action, 348 ipv4rule set dstip, 349 ipv4rule set log, 351 ipv4rule set prior, 352 ipv4rule set service, 353 ipv4rule set srcip, 354 ipv4rule show-rules, 357 ipv6 unicast-routing, 199

Κ

k-proto, 397

L

lease time, 215 lifebyte, 428 lifetime, 427 link, 476 no link, 477 lldp, 71 no lldp, 72 load tftp, 79 loadsave, 81 local-id, 407 no local-id, 408 loc-subnet, 398 logon, 109 no logon, 110 logon idx authority, 111 logon idx fragment, 112 logon idx path, 112 logon idx query, 113 logon show-idx, 114 logout, 58

Μ

mac-address-table aging, 300 no mac-address-table aging, 300 mac-address-table aging-time, 302 manual srv, 229 no manual srv, 230 map protocol, 154 no map protocol, 155 masquerading, 307 no masquerading, 308 masquerading show-idx, 309 mtu, 74

Ν

name. 172 no name, 173 napt show-idx, 313 napt type ipv4, 310 no napt, 311 no napt all, 312 NAT. 451 nat-keep-alive, 387 negotiation, 72 no negotiation, 73 netmap destination type ipv4, 313 no netmap, 317 no netmap all, 318 netmap show-idx, 318 netmap source type ipv4, 315 no netmap. 317 no netmap all, 318 network, 216 no ip address, 171 no snmp filterprofile, 254 ntp, 135 ntp server, 135 no ntp server, 137

ntp time diff, 137

0

openvpn, 438 operation, 399, 452 option, 217 no option, 220 option value-hex, 219 option value-string, 220 no option, 220, 220

Ρ

passphrase, 434 passphrase show-idx, 435 password, 86, 184, 239 no password, 87 phase, 401 ping, 59 plug, 98 pool-enable, 221 no pool-enable, 222 port, 124, 430, 445 ports, 174 no ports, 175 prerule all ipv4, 358 prerule dhcp ipv4, 359 prerule dns ipv4. 360 prerule http ipv4, 361 prerule https ipv4, 362 prerule ip ipv4, 363 prerule ipsec ipv4, 364 prerule ipv4 show-int, 358 prerule ping ipv4, 369 prerule show-int, 357 prerule snmpm ipv4, 365 prerule ssh ipv4, 366 prerule telnet ipv4, 367 prerule tftp ipv4, 368 proto, 429 proto name, 370 no proto, 371 proto show-names, 372 protocol-vlan, 157 no protocol-vlan, 156 proxy, 125, 446 no proxy, 126 proxyserver, 275

R

Range of values for IPv4 address, 36 rem-id, 408 rem-id no rem-id, 409 remote name, 441 no remote all, 442 no remote name, 441 remote-addr, 446 remote-end name, 388 no remote-end all, 389 no remote-end name, 388 restart, 89 rmend name, 399

S

save filetype, 80 Scope of the manual, 3 send test mail. 291 sender mail-address. 287 no sender mail-address. 287 serv name no srv, 277 server type, 231 service, 236 no service, 236 service name, 373 no service. 374 service name set dst, 376 service name set prot, 375 service name set src, 377 service show-names, 378 set-interface, 223 severity, 478 no severity, 479 show auth-names. 453 show cli-console-timeout, 47 show context, 447, 454 show coordinates, 48 show dcp forwarding, 190 show dcp server, 190 show ddnsclient overview. 226 show device information, 48 show digital input, 104 show digital output, 105 show dnsclient information, 226 show events config, 460 show events faults config, 461 show events faults status, 462 show events sender email, 285

show events severity, 460 show events smtp-port, 286 show events smtp-server, 285 show events syslogserver, 481 show fault counter, 462 show firewall icmp-services ipv4, 333 show firewall information. 333 show firewall ip-protocols, 334 show firewall ip-rules ipv4, 334 show firewall ip-services, 335 show firewall pre-rules ipv4, 335 show firewallnat masquerading, 303 show firewallnat napt. 303 show firewallnat netmap-nat, 304 show firewallnat src-nat, 305 show flow-control, 295 show fwlog. 463 show history, 44 show in. 50 show interface mtu, 50 show interfaces. 49 show interfaces ... counters, 51 show ip arp, 204 show ip dhcp client, 206 show ip dhcp server pools, 209 show ip dhcp-server bindings, 209 show ip dns, 189 show ip http secure server status, 272 show ip http server status, 269 show ip interface. 53 show ip route, 191 show ip routing, 192 show ip ssh, 292 show ip static route, 192 show ip telnet, 193 show ipsec conn-authentication, 380 show ipsec conn-phase1, 381 show ipsec conn-phase2, 381 show ipsec information, 382 show ipsec remoteend, 382 show ipsecvpn connections, 380 show lldp neighbors, 52 show lldp status, 53 show loadsave files. 78 show loadsave tftp. 79 show logbook, 464 show mac-address-table aging-status, 299 show mac-address-table aging-time, 298 show ntp info, 134 show openvpn authentication, 436 show openvpn connections, 436 show openvpn remoteend, 437

show password-policy, 325 show plug. 97 show power-line-state, 464 show ppp information, 178 show proxyserver table, 274 show running-config, 91 show seclog, 465 show sinemarc, 118 show snmp, 240 show snmp community, 240 show snmp engineID, 241 show snmp filter, 241 show snmp aroup, 242 show snmp group access, 242 show snmp inform statistics, 243 show snmp notif, 243 show snmp targetaddr, 244 show snmp targetparam, 244 show snmp tcp, 245 show snmp user, 245 show snmp viewtree, 246, 246 show sntp broadcast-mode status, 139 show sntp status, 140 show sntp unicast-mode status, 140 show srs, 107 show srs overview, 108 show ssl server-cert, 272 show time, 131 show user-accounts, 326 show users. 326 show versions, 54 show vlan, 148 show vlan device info, 149 show vlan learning params, 149 show vlan port config, 150 show vlan protocols-group, 151 show web-session-timeout, 101 show-idx. 432 show-info (Certificate), 432 shutdown no shutdown (DNS Proxy), 235 no shutdown (DNS-Client), 232 no shutdown (Firewall), 379 no shutdown (IPsec), 390 no shutdown (OpenVPN), 443 no shutdown (PPP), 186 no shutdown (SINEMA RC), 127 no shutdown (SRS), 115 shutdown (DNS Proxy), 234 shutdown (DNS-Client), 232 shutdown (Firewall), 378 shutdown (IPsec), 390

shutdown (OpenVPN), 443 shutdown (PPP), 185 shutdown (SINEMA RC), 127 shutdown (SRS), 114 shutdown complete, 75, 163 no shutdown, 76, 163 SIMATIC NET glossary, 4 SIMATIC NET manual, 4 sinemarc, 119 smtp-port, 290 no smtp-port, 290 smtp-server, 288 no smtp-server, 289 snmp client confia. 471 no client config, 472 snmp access, 248 no snmp access, 250 snmp agent version, 248 snmp community index, 251 no snmp community index, 252 snmp filterprofile, 253 snmp group, 255 no snmp group, 256 snmp notify, 256 no snmp notify, 258 snmp targetaddr, 258 no snmp targetaddr, 260 snmp targetparams, 261 no snmp targetparams, 263 snmp user, 265 no snmp user, 266 snmp v1-v2 readonly, 263 no snmp v1-v2 readonly, 264 snmp view, 266 no snmp view, 268 snmpagent, 247 no snmpagent, 247 sntp. 141 sntp client addressing-mode, 145 sntp time diff, 142 sntp unicast-server, 143 no sntp unicast-server, 144 speed, 76 src-nat show-idx. 323 src-nat type ipv4, 319 no src-nat. 321 no src-nat all, 322 srs, 108 srv name, 276 srv name addr, 278 srv name auth, 279

srv name port, 280 srv name pw, 281 srv name type, 282 srv name user, 283 srv show-names, 284 ssh-server, 293 no ssh-server, 293 static-lease. 224 no static-lease, 225 subnet, 394 Subnet mask, 36 subnet-vlan, 158 no subnet-vlan, 158 switchport, 164 no switchport, 165 switchport acceptable-frame-type, 165 no switchport acceptable-frame-type, 166 switchport mode, 167 no switchport mode, 168 switchport pvid, 169 no switchport pvid, 169 syslogserver, 482 no syslogserver, 483 system contact, 66 system location, 66 system name, 67

Т

telnet-server, 199 no telnet-server, 200 tftp filename, 83 tftp load, 84 tftp save, 85 tftp server, 85 Downloading, 79 Saving, 80 time, 132 time set, 133 timeout, 401 type ppo-ex, 187

U

useLZO, 453 user-account, 328 no user-account, 330 userhost, 237 username, 187, 238, 331

V

validate cert, 116 verification cacert, 128 verification fingerprint, 129 vir-ip, 395, 402 no vir-ip, 396, 403 vlan, 159 no vlan, 160

W

web-session-timeout, 102 no web-session-timeout, 102 whoami, 327 write, 99 write startup-config, 93