


Kit PN 16152-336

15900-661
Rev 2
October 2007

SIPART[®] PS2 Pipe Mounting Instructions

1. Attach the PS2 positioner to the pipe mounting bracket using two M8 bolts, 5/16" lockwashers, and 3/8" flat washers supplied in the kit. Tighten the hardware.

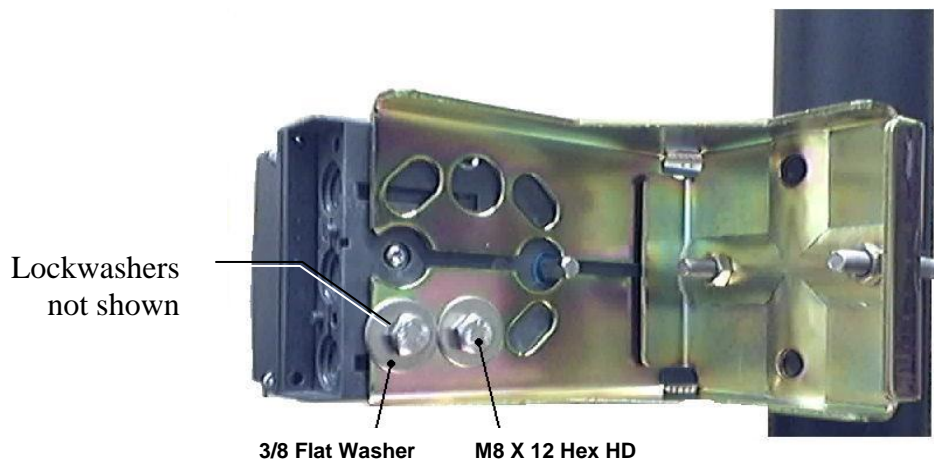

2. Attach the positioner/bracket assembly to the pipe using the supplied U-bolt and nuts. Tighten the hardware.



All product designations may be trademarks or product names of Siemens Energy & Automation, Inc. or other supplier companies whose use by third parties for their own purposes could violate the rights of the owners.

Siemens Energy & Automation, Inc. assumes no liability for errors or omissions in this document or for the application and use of information in this document. The information herein is subject to change without notice.

Procedures in this document have been reviewed for compliance with applicable approval agency requirements and are considered sound practice. Neither Siemens Energy & Automation, Inc. nor these agencies are responsible for repairs made by the user.